

Centralized Block Manager on CPU

Spatially-Aware Allocator

Available Block List

PE 0: [1,3,6]**PE 1:** [...]

...

PE N-1: [0,4,5]

Allocate

Free

***B Blocks
in Total***

Request Block List

**Req.
0****PE 0:** [0,2,7]

...

PE N-1: [3,6]**Req.
1****PE 0:** [4,5]

...

PE N-1: [1,2,7]**Req.
Blk.
List****HB-Device****PE 0****Block 0****Block 2****Block 4****Block 5****Block 7****Max Block Num.****Blk. Size * Vec. Len.****Req. 0****Req. 1****Fixed
Base
Addr.****KV
Cache**

...

PE 1**PE N-1****Block 1****Block 2****Block 3****Block 6****Block 7****Max Block Num.****Blk. Size * Vec. Len.****Req. 1****Req. 0**