


128B

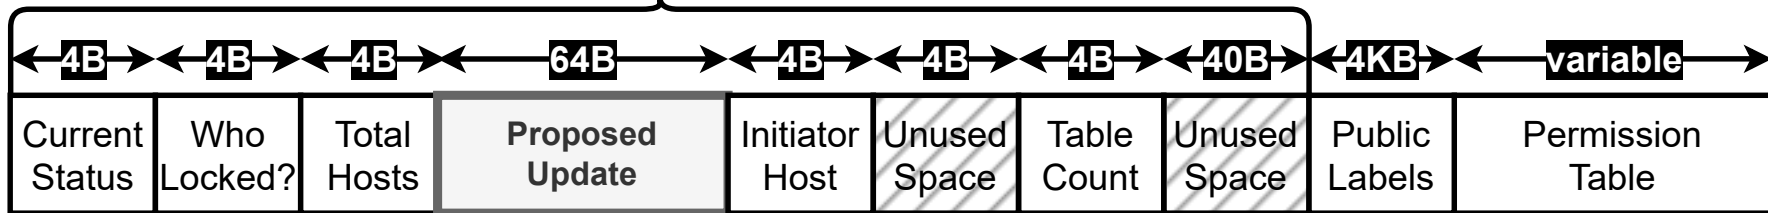


host_id

IDLE

READ

WRITE

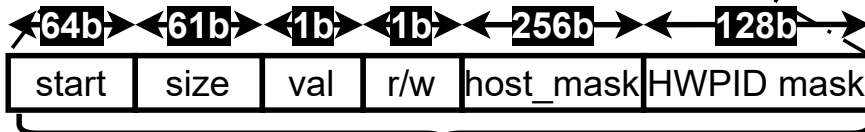

a permission entry (entry_t); 64B

start	size	host_id	context	rwX
start	size	host_id	context	rwX
start	size	host_id	context	rwX

Each entry is of 64B. Only the FM can R/W into the table.