




Thanks to FIRST-TF <https://first-tf.com>

Clock signal $v(t) = V_0[1 + \alpha(t)] \cos[2\pi\nu_0 t + \varphi(t)]$

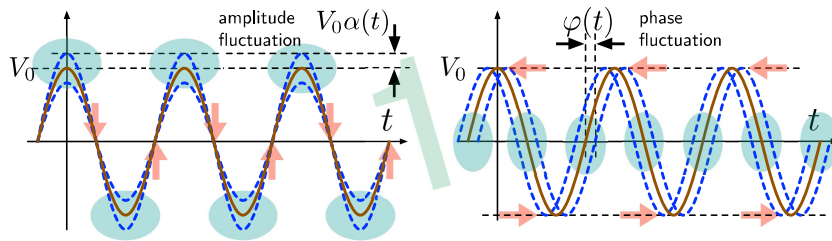

Boldface notation

total = nominal + fluctuation
 $\varphi(t) = 2\pi\nu_0 t + \varphi(t)$ phase
 $\nu(t) = \nu_0 + (\Delta\nu)(t)$ frequency
 $x(t) = t + x(t)$ time
 $y(t) = 1 + y(t)$ fractional frequency

Phase noise spectrum

Definition
 $S_\varphi(f)$ [rad²/Hz] is the one-sided PSD ($f > 0$) of $\varphi(t)$
 $S_\varphi(f) = 2\mathcal{F}\{\mathbb{E}\{\varphi(t)\varphi(t+\tau)\}\}, f > 0$


Evaluation
 $S_\varphi(f) = \frac{2}{T} \langle \Phi_T(f) \Phi_T^*(f) \rangle_m$
 avg on m data, $\Phi_T(f)$ = DFT of $\varphi(t)$ truncated on T

Deprecated: most often, 'phase noise' refers to $\mathcal{L}(f)$
 Only $10\log_{10}[\mathcal{L}(f)]$ is used, given in dBc/Hz
 Definition: $\mathcal{L}(f) = \frac{1}{2} S_\varphi(f)$ [the unit c/Hz never used]
 Literally, the unit 'c' is a squared angle, $\sqrt{c} = \sqrt{2} \text{ rad} \approx 81^\circ$






Two-sample (Allan-like) variances

Definition
 $\sigma_y^2(\tau) = \mathbb{E}\left\{\frac{1}{2}[\bar{y}_2 - \bar{y}_1]^2\right\}$ $y(t) \rightarrow \bar{y}$ averaged over τ
 $\bar{y}_2$ and $\bar{y}_1$ are contiguous
 Bare mean $\bar{y} \rightarrow$ Allan variance AVAR
 Weighted averages $\rightarrow$ MVAR, PVAR, etc.

Evaluation
 $\sigma_y^2(\tau) = \frac{1}{2(M-1)} \sum_{k=1}^{M-1} [\bar{y}_{k+1} - \bar{y}_k]^2$ M contiguous samples of $\bar{y}$

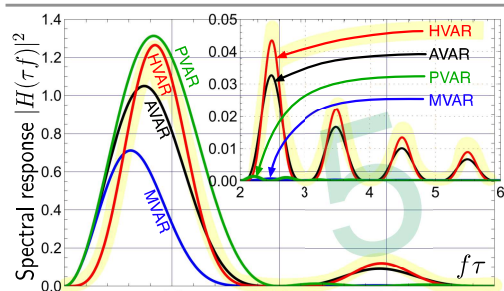

Frequency fluctuation PSD $\leftrightarrow$ Allan Variance

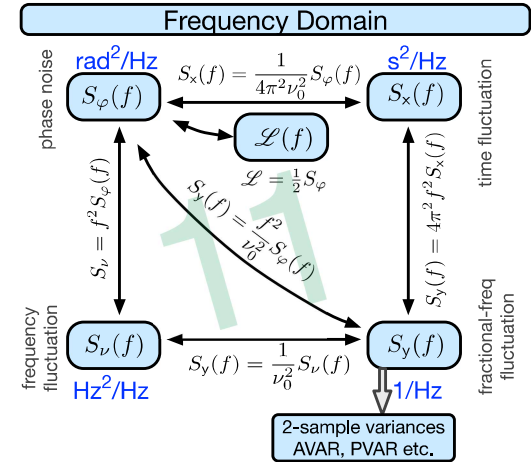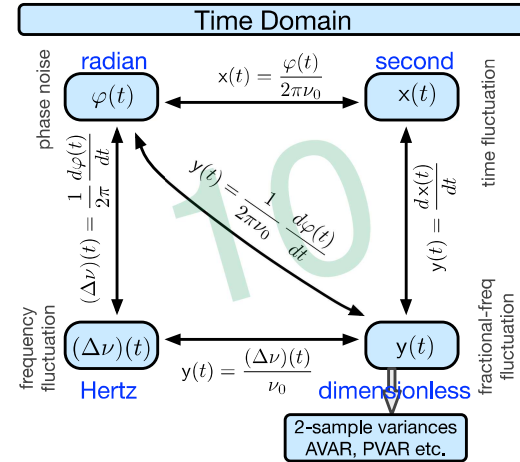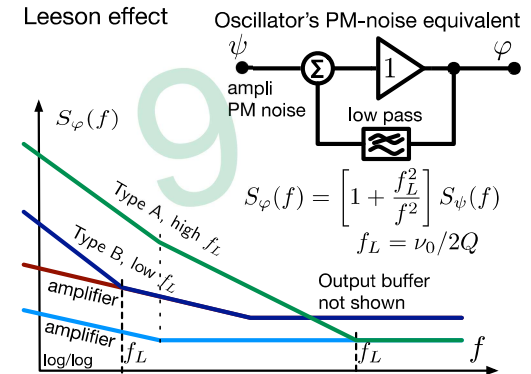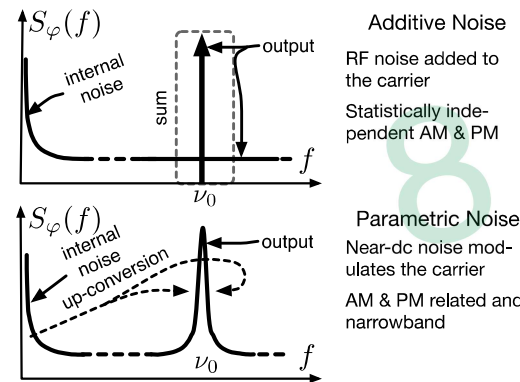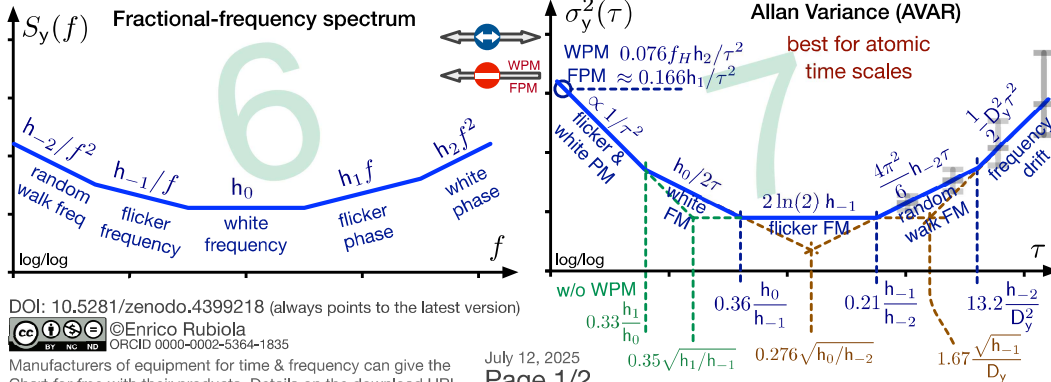

Spectra and Polynomial Law

