


a)

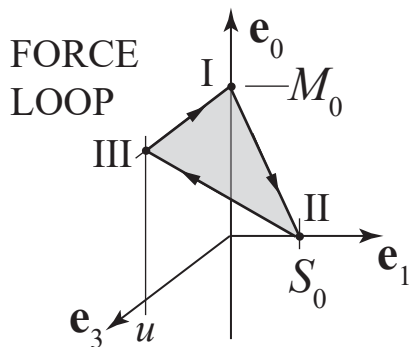


	ϕ	ξ	η	ζ
I	M_0	0	0	0
II	0	S_0	0	0
III	M_0	0	0	u

FORCE LOOP
COORDINATES

b)

Form stress function $F(x,y,z) = -\phi + x\xi + y\eta + z\zeta$

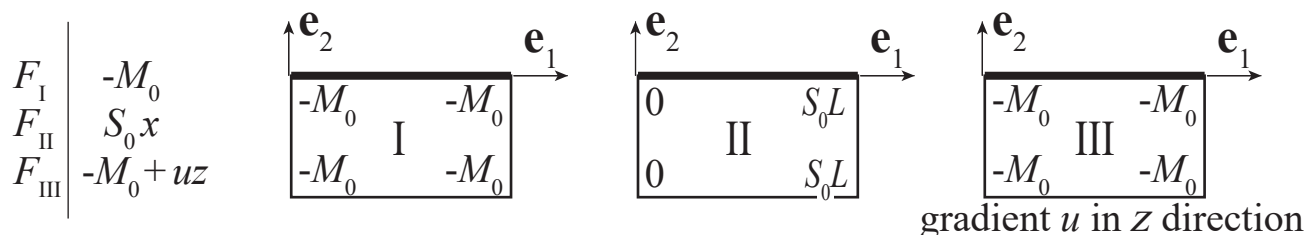





Local moment coordinates:

at J: $(x,y,z) = (0,0,0)$


	F	ξ	η	ζ
I	$-M_0$	0	0	0
II	0	S_0	0	0
III	$-M_0$	0	0	u

at K: $(x,y,z) = (L,0,0)$


	F	ξ	η	ζ
I	$-M_0$	0	0	0
II	$S_0 L$	S_0	0	0
III	$-M_0$	0	0	u

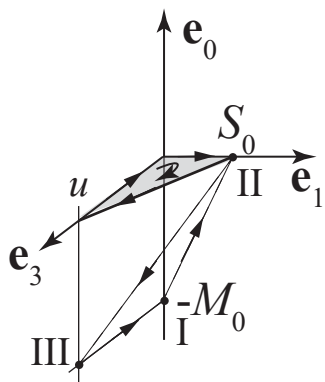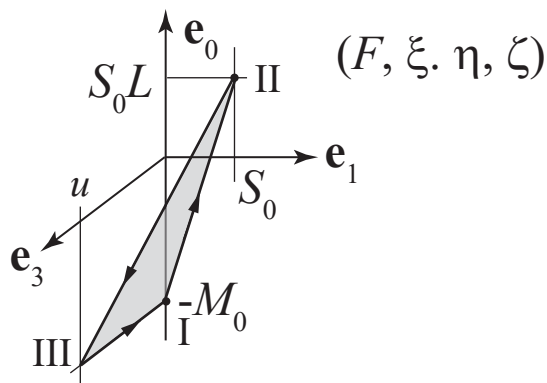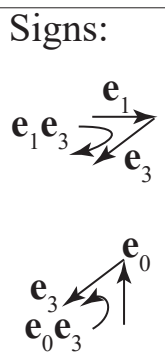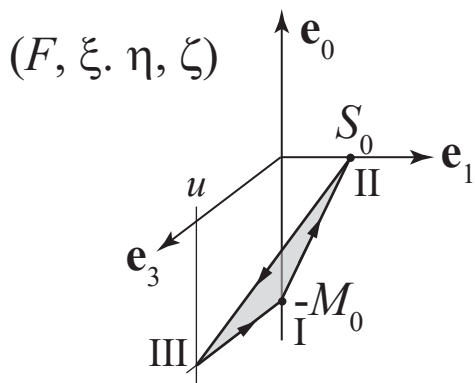


Force = $-S_0 \mathbf{e}_3 \mathbf{e}_1$

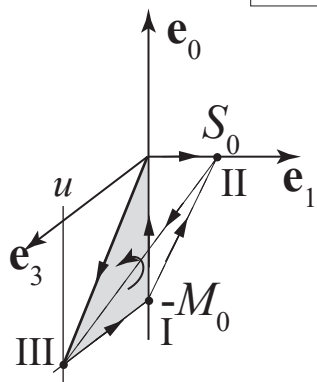

BM = $M_0 \mathbf{e}_0 \mathbf{e}_3$

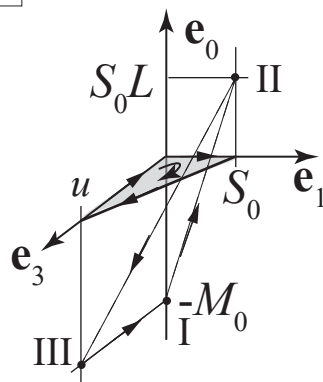

Force = $-S_0 \mathbf{e}_3 \mathbf{e}_1$

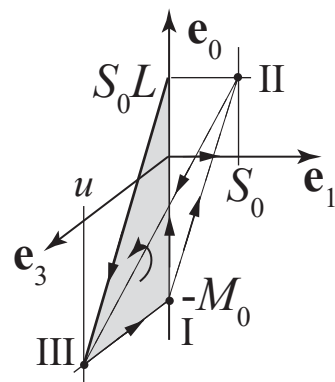

BM = $(M_0 + S_0 L) \mathbf{e}_0 \mathbf{e}_3$