

Basic Design Task1: a single-stage common-source amplifier with resistive load R

Relevant Knowledge

- ✓ R1 Define Vdd explicitly (typically 5 V).
- ✓ R2 Keep interface names: input = Vin, output = Vout.
- ✓ R3 Bulk ties: NMOS bulk→0, PMOS bulk→Vdd (and correct D,G,S,B ordering).
- ✓ R4 Ensure a valid DC operating point (no floating nodes; provide load/bias path appropriate to the task).
- ✓ R5 Use robust MOS models: explicitly set key params (vto, kp, small lambda/Lambda).

Task 9

```
circuit.model('nmos_model', 'nmos', level=1,
kp=100e-6, vto=0.5, lambda=10e-3) # R5
circuit.model('pmos_model', 'pmos', level=1,
kp=50e-6, vto=-0.5, lambda=10e-3) # R5
circuit.V('dd', 'Vdd', '0', 5.0@u_V) # R1
circuit.V('in_dc', 'Vin', '0', 2.5) # R2/R4
```

Stage-2 output is still named Vout (interface preserved) # R2

```
circuit.MOSFET('M6', 'Vout', 'Out1', '0', '0',
model='nmos_model', w=6.5e-6, l=2e-6) # R3/R4
circuit.MOSFET('M7', 'Vout', 'Vbias_gate_p_ref',
'Vdd', 'Vdd', model='pmos_model', w=200e-6,
l=2e-6) # R3/R4
```



Task-9 specific: Miller capacitor between stage-1 output and Vout
circuit.C('Ccomp', 'Out1', 'Vout', 10@u_pF) # Task9-specific

Task 10

```
circuit.model('nmos_model', 'nmos',
level=1, kp=100e-6, vto=0.5,
Lambda=0.01) # R5
circuit.model('pmos_model', 'pmos',
level=1, kp=50e-6, vto=-0.5,
Lambda=0.01) # R5
circuit.V('dd', 'Vdd', '0', 5.0) # R1
circuit.V('in', 'Vin', '0', 1.39) # R2/R4
```

```
circuit.MOSFET('M1', 'Vout', 'Vin', '0', '0',
model='nmos_model', w=50e-6,
l=1e-6) # R2/R3
# Task-10 specific: PMOS diode-
connected load (gate=drain=Vout),
source/bulk=Vdd
circuit.MOSFET('M2', 'Vout', 'Vout', 'Vdd',
'Vdd', model='pmos_model', w=20e-6,
l=1e-6) # Task10-specific + R3/R4
```

Medium Task 9: A two-stage amplifier with a Miller compensation capacitor

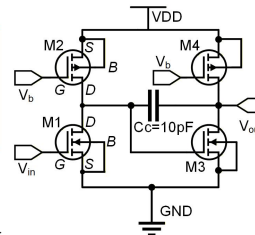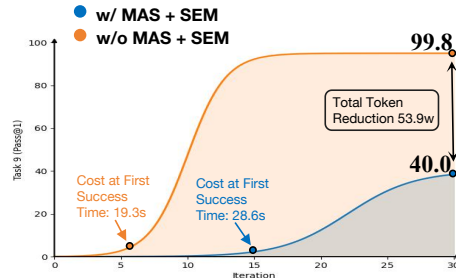

Medium Task10: Common-source amplifier with diode-connected PMOS load

