

Design Instruction



A single-stage amplifier
(common-source with PMOS
diode-connected load (gate and
drain are shorted))
Input: V_{in}
Output V_{out}
Key constraint: PMOS gate and
drain shorted to V_{out}


+

Design automation knowledge



Retrieval Amplifier Relevant
Circuit Knowledge

4. Functional Circuits

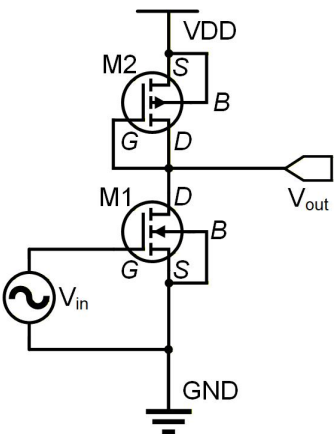

1. Code Generator Agent

```
from PySpice.Spice.Netlist import Circuit
from PySpice.Unit import *

circuit = Circuit('CS w/ PMOS Diode Load')

# NMOS: Vth=0.5
circuit.model('nmos', 'nmos', level=1,
kp=100e-6, vto=0.5)
# PMOS: Vth=-0.5
circuit.model('pmos', 'pmos', level=1,
kp=50e-6, vto=-0.5)

# 5V supply
circuit.V('dd', 'Vdd', circuit.gnd, 5.0)
# Vin bias / sweep
circuit.V('in', 'Vin', circuit.gnd, 2.5)
# M1 CS: D=Vout
circuit.MOSFET('1', 'Vout', 'Vin',
circuit.gnd, circuit.gnd, model='nmos',
w=50e-6, l=1e-6)
# M2 diode: G=D=Vout
circuit.MOSFET('2', 'Vout', 'Vout', 'Vdd', 'Vd
d', model='pmos', w=100e-6, l=1e-6)
circuit.R('R_safe', 'Vout', circuit.gnd,
10@u_kOhm)
```



3. Knowledge Curator Agent

Multimodal rule distillation → Conflict check
→ Deduplication → Self-Evolving Memory



```
"Amplifier": [
{ "circuit_type":
"CommonSourceAmpDiodeLoad",
"knowledge": [
*Template: M1 NMOS CS
(D=Vout,G=Vin,S=B=GND); M2 PMOS diode
load (S=B=Vdd,G=D=Vout).",
*Req: nodes Vin,Vout,Vdd; devices
NMOS+PMOS; bulks correct; enforce
G=D=Vout.",
*Fix: rail-stuck/flat Vout(Vin) → tune Vin bias
or W/L; invalid region → satisfy M1
Vgs>Vth,Vds>Vgs-Vth and M2
Vsg>|Vth|,Vsd>Vsg-|Vth|. ",
*Evidence: netlist.sp, op.txt, dc.txt, dc.png,
messages.txt; write success patterns and failure
rules.",
*MM-reflect: use dc.png to detect flat/rail-
stuck vs valid slope region." ] }
]
```



2. Design Optimizer Agent

a. Requirement Check



Netlist_check.py → ✓ Vin, Vout nodes exist in netlist
Netlist matches task topology → Error Feedback Examples



Missing required device or supply. PMOS diode-connected load violated.



Suggestion: Add Vdd source and both MOSFETs with correct terminals. short PMOS gate and drain at Vout.



Pass: Netlist contains Vin and Vout, and enforces G=D=Vout for PMOS load.

b. Simulation and Operating Point Check



Python task_simulation.py → _operation_point_.txt → Checklist: $V_{gs}>V_{th}$, $V_{ds}>V_{gs}-V_{th}$,
 $V_{sg}>|V_{th}|$, $V_{sd}>V_{sg}-|V_{th}|$
→ Error Feedback Examples



For NMOS M1, the gate voltage is not higher than the source voltage.



Suggestion: Increase Vin or adjust bias to satisfy $V_{gs}>V_{th}$.



Pass: M1 and M2 are properly biased, satisfying $V_{gs}>V_{th}$ and $V_{ds}>V_{gs}-V_{th}$ for M1, and $V_{sg}>|V_{th}|$ and $V_{sd}>V_{sg}-|V_{th}|$ for M2.

c. DC Sweep Check



Python _dc_sweep.py → Task_dc_result.txt → Task_dc.png



✓ Check how Vout changes with Vin. Find a valid bias region. → Error Feedback Examples



According to DC sweep analysis, Vout is stuck near Vdd across the sweep.
Reference point: [Vin 0.50-4.50 Vout -5.00]



Suggestion: Increase NMOS strength or reduce PMOS load to restore sensitivity.



Pass: Sweeping Vin produces a non-flat Vout(Vin) curve, and Vout is not stuck at 0 or Vdd over the sweep range.

d. Function Check



python Function_check.py → Function_messages.txt



✓ Check the function of the designed circuit → Error Feedback Examples



The circuit doesn't function correctly. The gain is near zero.



Suggestion: Adjust W/L of M1/M2 or revise Vin bias.



Pass: $|dV_{out}/dV_{in}|$ exceeds the threshold in a valid region and Vout is not rail-stuck.

e. Waveform Check



Task_Waveform.png / _dc.png → Error Feedback Examples



Curve is flat or pinned near 0/Vdd



Suggestion: Adjust Vin bias or W/L and re-run sweep.



Pass: The curve is monotonic with a clear non-zero slope region and no rail-stuck segment.

