

Heat generation due to spin transport in spin valves

Xiao-Xue Zhang, Pei-Song He, Bao-He Li, Yao-Hui Zhu*

Physics Department, Beijing Technology and Business University, Beijing 100048, China

Abstract

Using a macroscopic approach, we studied theoretically the heat generation due to spin transport in a typical spin valve with nonmagnetic spacer layer of finite thickness. Our analysis shows that the spin-dependent heat generation can also be caused by another mechanism, the spin-conserving scattering in the presence of spin accumulation gradient, in addition to the well-known spin-flip scattering. The two mechanisms have equal contributions in semi-infinite layers, such as the ferromagnetic layers of the spin valve. However, in the nonmagnetic layer of a thickness much smaller than its spin-diffusion length, the spin-dependent heat generation is dominated by the spin-flip scattering in the antiparallel configuration, and by the spin-conserving scattering in the parallel configuration. We also proved that the spin-dependent heat generation cannot be interpreted as the Joule heating of the spin-coupled interface resistance in each individual layer. An effective resistance is proposed as an alternative so that the heat generation can still be described simply by applying Joule's law to an equivalent circuit.

Keywords: spin valve, heat generation, spin-flip scattering, spin-conserving scattering, spin-coupled interface resistance

1. Introduction

Heat generation is a serious issue even for spintronic devices. [1, 2, 3] For example, large current is usually required for the operation of a spin-transfer-torque magnetic random-access memory. [4] The reduction of the working current and the associated heating is still a challenging problem. Moreover, heating in spintronic devices leads to temperature gradient, which may inversely have remarkable influence on the spin transport via the spin-dependent Seebeck effect. [5]

Recent theoretical investigations have shown that there is still dissipation even if a pure spin current is present. [6, 7, 8, 9, 10] Meanwhile, experimental studies have also demonstrated various spin-dependent heating effects. [11, 12, 13, 14, 15, 16] It has been well established that heat generation in spintronic devices is dependent on the spin accumulation and spin current in comparison to that in conventional electronic devices. However, previous works did not pay much attention to the distinctions and characteristics of the various mechanisms causing the heat generation, especially the one due to the *spin-conserving* scattering. This mechanism can also lead to spin-dependent heat generation when electrons flow to positions with lower chemical potential without spin flip. We will show that this mechanism can be identified if the equation of the heat generation is written in a more appropriate form, in which all terms are exactly the products of current-force pairs. Unfortunately, not all of the current-force pairs are correctly chosen in the previous papers. Furthermore, it is worthwhile to investigate in depth the relative magnitude of heat generation due to spin-conserving and spin-flip scattering, especially in a layer with

finite thickness, such as the nonmagnetic (NM) spacer layer in a spin valve. The variation of heat production with the thickness of the NM layer is also an important problem.

From a macroscopic viewpoint, Ref. [6] also showed that Joule heating of the spin-coupled interface resistance (r_{SI}) is equal to the additional heat generation due to spin transport in a spin valve without a NM spacer layer. It is necessary to study whether this conclusion holds generally for spin valves with NM spacer layers of finite thickness. This question is closely related to the nonlocal character of the heat generation, which is similar to the situation of spin pumping discussed in Ref. [9]. It is well-known that the NM layer in a spin valve has no contribution to the spin-coupled interface resistance because of the absence of the extra field. [17, 18] However, the NM layer contributes to the additional heat generation due to spin transport. Thus the heat generation does not obey Joule's law in each individual layer, although it does throughout the whole structure. This character needs to be interpreted properly. In view of these open questions, we studied analytically the heat generation due to spin transport in a spin valve using a macroscopic approach based on the Boltzmann equation. [6]

This paper is organized as follows. In Sec. 2, we derive the basic equations for the heat generation in magnetic multilayers and find the general relation between the spin-dependent heat generation and the spin-coupled interface resistance. Then the basic equations are applied to a spin valve in Sec. 3. We also compare the contribution from the spin-conserving and spin-flip scattering. In Sec.4, we discuss in depth the validity of the spin-coupled interface resistance and introduce the effective resistance as an alternative. Finally, our main results are summarized in Sec. 5.

*Corresponding author

Email address: yaohuizhu@gmail.com (Yao-Hui Zhu)

2. Basic equations

We are mainly concerned with the heat generation in a spin valve driven only by a constant current of density J , which flows in the z -direction and perpendicular to the layer plane. [17] In steady state, the time rate of heat generation can be calculated by using a macroscopic equation like Eq. (6) in Ref. [6]

$$\sigma_{\text{heat}} = \frac{J_+}{e} \frac{\partial \bar{\mu}_+}{\partial z} + \frac{J_-}{e} \frac{\partial \bar{\mu}_-}{\partial z} + \frac{4(\Delta\mu)^2}{e^2} G_{\text{mix}} \quad (1)$$

where we use σ_{heat} to denote the heat-generation rate following Ref. [19]. This kind of equation can be derived by using the Boltzmann equation [6] as well as nonequilibrium thermodynamics [19] in the linear regime. In Eq. (1), J_+ (J_-) and $\bar{\mu}_+$ ($\bar{\mu}_-$) are the current density and the electro-chemical potential in spin-up (down) channel, respectively. The electron-number currents are given by $-J_{\pm}/e$, where $-e$ is the charge of an electron. Moreover, $\Delta\mu = (\bar{\mu}_+ - \bar{\mu}_-)/2$ describes the spin accumulation, and G_{mix} defined by Eq. (5) of Ref. [6] stands for the associated spin-flip rate.

The first two terms of Eq. (1) can be regarded as the decrease in the (electrochemical) potential energy current or the heat generation, in each spin channel. [20] The heat-generation rates of the two channels are unequal in ferromagnetic (FM) layers and at spin-selective interfaces. If the two channels cannot exchange heat effectively with each other or other heat reservoir, they may have different temperatures [21]. However, this is beyond the scope of the present work and we neglect this effect by assuming that the two spin channels can exchange energy effectively (the thermalized regime [21]). Then it is more meaningful to write Eq. (1) in terms of $J = J_+ + J_-$ and $J_{\text{spin}} = J_+ - J_-$ like Eq. (12c) of Ref. [6]

$$\sigma_{\text{heat}} = \frac{J}{e} \frac{\partial \bar{\mu}}{\partial z} + \frac{J_{\text{spin}}}{e} \frac{\partial \Delta\mu}{\partial z} + \frac{\partial J_{\text{spin}}}{\partial z} \frac{\Delta\mu}{e} \quad (2)$$

where $\bar{\mu} = (\bar{\mu}_+ + \bar{\mu}_-)/2$ is the average electrochemical potential. Although each term of σ_{heat} has been written as the product of generalized force and current, which is consistent with the requirement of nonequilibrium thermodynamics, [19] the current-force pairs in the first two terms of Eq. (2) are not exact pairs and need to be rewritten in a more appropriate form.

In FM layers, the total current density J does not depend on position z and thus it is not exactly the current corresponding to the force $\partial \bar{\mu}/\partial z$, which has exponential terms of z . This becomes obvious if we sum the ‘ $\pm$ ’ components of Eq. (A.4)

$$F = \frac{1}{e} \frac{\partial \bar{\mu}}{\partial z} = E_0^F \pm \frac{\beta}{e} \frac{\partial \Delta\mu}{\partial z} \quad (3)$$

in an FM layer with ‘up’ (‘down’) magnetization and bulk spin asymmetry coefficient β . Here, β and the spin-dependent resistivity $\rho_{\uparrow(\downarrow)}$ [or conductivity $\sigma_{\uparrow(\downarrow)}$] satisfy the relation $\rho_{\uparrow(\downarrow)} = 1/\sigma_{\uparrow(\downarrow)} = 2\rho_F^*[1 - (+)\beta]$. [17] Note that the subscript “ $\uparrow$ ” (“ $\downarrow$ ”) denotes the majority (minority) spin direction. In Eq. (3), the effective field $F(z)$ of the FM layers has been separated into the bulk term $E_0^F = J(1 - \beta^2)\rho_F^*$ and the exponential term. Meanwhile, the spin current J_{spin} has a bulk term and thus it is not

exactly the current corresponding to the force $\partial \Delta\mu/\partial z$, which has only exponential terms. One can see this easily by subtracting the ‘ $\pm$ ’ components of Eq. (A.4)

$$J_{\text{spin}} = \mp \beta J + \frac{1}{e\rho_F^*} \frac{\partial \Delta\mu}{\partial z} \quad (4)$$

where the FM layer also has ‘up’ (‘down’) magnetization. The total spin current in Eq. (4), J_{spin} , has been written as the sum of a bulk term and an exponential one

$$J_{\text{spin}}^{\text{bulk}} = \mp \beta J \quad (5)$$

$$J_{\text{spin}}^{\text{exp}} = \frac{1}{e\rho_F^*} \frac{\partial \Delta\mu}{\partial z} \quad (6)$$

Therefore, it is necessary to transform the first two terms of σ_{heat} in Eq. (2) into exact current-force pairs. Fortunately, this desired form can be achieved by simply substituting Eqs. (3) and (4) into Eq. (2)

$$\sigma_{\text{heat}}^{\text{bulk}} + \sigma_{\text{heat}}^{\text{sc}} = JE_0^F + \frac{J_{\text{spin}}^{\text{exp}}}{e} \frac{\partial \Delta\mu}{\partial z} \quad (7)$$

where we have introduced

$$\sigma_{\text{heat}}^{\text{sc}} = \frac{J_{\text{spin}}^{\text{exp}}}{e} \frac{\partial \Delta\mu}{\partial z} \quad (8)$$

The first term, $\sigma_{\text{heat}}^{\text{bulk}} = JE_0^F$, in Eq. (7) has become the product of a current-force pair and it means the bulk Joule heating. The second term, $\sigma_{\text{heat}}^{\text{sc}}$, has also been written as the product of a current and its corresponding force, and it can be regarded as the heat generation due to the spin-conserving (sc) scattering. The reason is that, the gradient of spin accumulation drives a spin from a position to another one with lower chemical potential via the spin-conserving scattering, and the excess chemical potential of the spin leads to heat generation. This can also be understood by writing this term as the sum of the contributions from the two spin channels (see Appendix B). The heat generation due to spin-conserving scattering $\sigma_{\text{heat}}^{\text{sc}}$ did not attract much attention in the previous studies, such as Refs. [6, 9]. This mechanism is especially important for the heat generation due to the interface resistance because the spin-flip scattering is usually neglected at interfaces. We will look into $\sigma_{\text{heat}}^{\text{sc}}$ in Sec. 3, and compare it with $\sigma_{\text{heat}}^{\text{sf}}$ (see below) in typical spin valves.

Next we will rewrite the last term of σ_{heat} of Eq. (2) in a form with more obvious physical interpretation. Subtracting the ‘ $\pm$ ’ components of Eq. (A.3) in two different ways, one can derive

$$\frac{\partial J_{\text{spin}}}{\partial z} = \frac{4eN_s\Delta\mu}{\tau_{\text{sf}}^{F(N)}} = \frac{\Delta\mu}{er_{F(N)}l_{\text{sf}}^{F(N)}} \quad (9)$$

where $r_F = \rho_F^* l_{\text{sf}}^F$ and $r_N = \rho_N^* l_{\text{sf}}^N$. In Eq. (9), N_s is the density of states for spin s and τ_{sf}^F (τ_{sf}^N) the spin-flip relaxation time of the FM (NM) layer. Then using Eq. (9), we can rewrite the last term of Eq. (2) as

$$\sigma_{\text{heat}}^{\text{sf}} = \alpha_{\text{spin}} \mu_m \quad (10)$$

where $\alpha_{\text{spin}} = \mu_m N_s / \tau_{\text{sf}}$ and $\mu_m = 2\Delta\mu$. Here α_{spin} describes the damping rate of the spin accumulation, that is, the number

of electrons flipping from spin-up to spin-down states per unit time per unit volume, which is called the spin flux $\dot{\psi}$ in Ref. [7]. Thus α_{spin} and μ_m can also be regarded as a generalized current-force pair, and $\sigma_{\text{heat}}^{\text{sf}}$ stands for the heat generation due to the spin-flip (sf) scattering.

Collecting all the terms, we can then write the rate of heat generation in FM (NM) layer in the form of Joule's law

$$\sigma_{\text{heat}} = \sigma_{\text{heat}}^{\text{bulk}} + \sigma_{\text{heat}}^{\text{sc}} + \sigma_{\text{heat}}^{\text{sf}} \\ = (1 - \beta^2) \rho_{\text{F(N)}}^* J^2 + \rho_{\text{F(N)}}^* (J_{\text{spin}}^{\text{exp}})^2 + \rho_{\text{F(N)}}^* \left[\frac{\Delta\mu}{e r_{\text{F(N)}}} \right]^2 \quad (11)$$

where we have rewritten $\sigma_{\text{heat}}^{\text{sc}}$ and $\sigma_{\text{heat}}^{\text{sf}}$ using Eqs. (6) and (9). The first term $\sigma_{\text{heat}}^{\text{bulk}}$ is due to the nominal resistance and exists no matter whether the current is spin-polarized or not. However, $\sigma_{\text{heat}}^{\text{sc}}$ and $\sigma_{\text{heat}}^{\text{sf}}$ rely on the *gradients* of the spin accumulation and spin current according to Eqs. (6) and (9), respectively.

Finally, we will discuss the general relation between the spin-dependent heat generation and the 'Joule heating' of the spin-coupled interface resistance. [6, 17] To this purpose, we write Eq. (2) as

$$\sigma_{\text{heat}} = JF + \frac{1}{e} \frac{\partial}{\partial z} (J_{\text{spin}} \Delta\mu) \quad (12)$$

by using $F = (1/e) \partial \bar{\mu} / \partial z$. Without loss of generality, we will consider a segment of a multilayer from z_L to z_R , which includes an interface at z_C ($z_L < z_C < z_R$). Integrating Eq. (12) from z_L to z_R , we can write the total heat generation in this segment as

$$\Sigma_{\text{heat}} = \Sigma_{\text{heat}}^L + \Sigma_{\text{heat}}^C + \Sigma_{\text{heat}}^R \quad (13)$$

where

$$\Sigma_{\text{heat}}^L = J \Delta V_0^L + J \Delta V_1^L + \frac{1}{e} (J_{\text{spin}} \Delta\mu) \Big|_{z_L}^{z_C^-} \quad (14)$$

$$\Sigma_{\text{heat}}^C = \frac{J}{e} [\bar{\mu}(z_C^+) - \bar{\mu}(z_C^-)] + \frac{1}{e} (J_{\text{spin}} \Delta\mu) \Big|_{z_C^-}^{z_C^+} \quad (15)$$

$$\Sigma_{\text{heat}}^R = J \Delta V_0^R + J \Delta V_1^R + \frac{1}{e} (J_{\text{spin}} \Delta\mu) \Big|_{z_C^+}^{z_R} \quad (16)$$

are defined as the integral heat-generation rate for the left layer, the interface, and the right layer, respectively. In Eqs. (14), ΔV_0^L and ΔV_1^L are defined as

$$\Delta V_0^L = \int_{z_L}^{z_C} E_0^L dz = J (1 - \beta^2) \rho_L^* (z_C - z_L) \quad (17)$$

$$\Delta V_1^L = J r_{\text{SI}}^L = \int_{z_L}^{z_C} (F - E_0^L) dz = \pm \beta \frac{\Delta\mu(z_C^-) - \Delta\mu(z_L)}{e} \quad (18)$$

where we have used Eq. (3). Similarly, ΔV_0^R and ΔV_1^R in (16) are defined in the regime $z_C < z < z_R$. In Eq. (18), we have defined r_{SI}^L as the spin-coupled interface resistance of the left layer by extending the definition in Ref. [17].

The interface has been treated as a layer with an infinitesimal thickness in Eq. (15). This approach is equivalent to the method used in Ref. [6], which is proven in Appendix C. Using Eqs. (A.21), (A.24), and (A.25), we can rewrite Eq. (15) as

$$\Sigma_{\text{heat}}^C = J \Delta V_0^C + J \Delta V_1^C + J_{\text{spin}}(z_C) \frac{\Delta\mu(z_C^+) - \Delta\mu(z_C^-)}{e} \quad (19)$$

where ΔV_0^C and ΔV_1^C are defined as

$$\Delta V_0^C = J(1 - \gamma^2) r_b^* \quad (20)$$

$$\Delta V_1^C = J r_{\text{SI}}^C = \pm \gamma \frac{\Delta\mu(z_C^+) - \Delta\mu(z_C^-)}{e} \quad (21)$$

In Eq. (21), r_{SI}^C is defined as the spin-coupled interface resistance of the interface. The sign '+' ('-') in Eq. (21) corresponds to the configuration where the spin-up channel is the minority (majority) one. Substituting Eq. (19) into Eq. (13), we have

$$\Sigma_{\text{heat}} = J (\Delta V_0^L + \Delta V_0^C + \Delta V_0^R) + J (\Delta V_1^L + \Delta V_1^C + \Delta V_1^R) \\ + [J_{\text{spin}}(z_R) \Delta\mu(z_R) - J_{\text{spin}}(z_L) \Delta\mu(z_L)] / e \quad (22)$$

where the first term on the right-hand side is the nominal Joule heating and the second the 'Joule heating' of the spin-coupled interface resistance. The last term of Eq. (22) disappears once $J_{\text{spin}} \Delta\mu$ has the same value at z_L and z_R .

On the other hand, by using Eqs. (3) and (4), one can also rewrite Eq. (2) as

$$\sigma_{\text{heat}} = J E_0^{\text{F(N)}} + \frac{1}{e} \frac{\partial}{\partial z} (J_{\text{spin}}^{\text{exp}} \Delta\mu) \quad (23)$$

where the last term is the sum of $\sigma_{\text{heat}}^{\text{sc}}$ and $\sigma_{\text{heat}}^{\text{sf}}$. Then the total heat-generation rate in the segment $z_L < z < z_R$ can also be written as

$$\Sigma_{\text{heat}} = J (\Delta V_0^L + \Delta V_0^C + \Delta V_0^R) + \Sigma_{\text{heat}}^{\text{spin}} \quad (24)$$

where

$$\Sigma_{\text{heat}}^{\text{spin}} = \frac{1}{e} (J_{\text{spin}}^{\text{exp}} \Delta\mu) \Big|_{z_L}^{z_C^-} + \Sigma_{\text{heat}}^{\text{spin,C}} + \frac{1}{e} (J_{\text{spin}}^{\text{exp}} \Delta\mu) \Big|_{z_C^+}^{z_R} \quad (25)$$

stands for the spin-dependent part of the total heat generation. The contribution of the interface can be written as

$$\Sigma_{\text{heat}}^{\text{spin,C}} = \frac{1}{e} J_{\text{spin}}^{\text{sa}}(z_C) [\Delta\mu(z_C^+) - \Delta\mu(z_C^-)] \quad (26)$$

where $J_{\text{spin}}^{\text{sa}}(z_C)$ is defined by

$$J_{\text{spin}}(z_C) = \mp \gamma J + J_{\text{spin}}^{\text{sa}}(z_C) \quad (27)$$

One can see that Eq. (27) is similar to Eq. (4). It is also easy to verify $\Sigma_{\text{heat}}^C = J \Delta V_0^C + \Sigma_{\text{heat}}^{\text{spin,C}}$. Using Eq. (A.24), we can rewrite $\Sigma_{\text{heat}}^{\text{spin,C}}$ in the form of Joule's law

$$\Sigma_{\text{heat}}^{\text{spin,C}} = r_b^* [J_{\text{spin}}^{\text{sa}}(z_C)]^2 \quad (28)$$

which will be discussed further in Sec. 3.2.

Comparing Eqs. (22) and (24), one can see that $\Sigma_{\text{heat}}^{\text{spin}}$ is equal to the 'Joule heating' of the spin-coupled interface resistance

$$\Sigma_{\text{heat}}^{\text{spin}} = J [\Delta V_1^L + \Delta V_1^C + \Delta V_1^R] \quad (29)$$

if the last term of Eq. (22) vanishes, that is,

$$J_{\text{spin}}(z_L) \Delta\mu(z_L) = J_{\text{spin}}(z_R) \Delta\mu(z_R) \quad (30)$$

In fact, this requirement can be satisfied easily because a magnetic multilayer usually has several positions, where $J_{\text{spin}} \Delta\mu$ is zero. We will discuss r_{SI} in more detail in Sec. 4.

3. Heat generation in spin valves

In this section, we will apply the basic equations derived in Sec. 2 to spin valves with finite NM layer. The insertion of the NM layer enables us to study more realistically the difference in heat generation between parallel (P) and antiparallel (AP) alignments of the two FMs as well as the influence of the NM-layer thickness on the heat generation. To be specific, we place the origin of the z -axis at the center of the NM layer. The left and right FM/NM interfaces are located at $z = -d$ and $z = d$, respectively. The two semi-infinite FM layers are made of the same material with collinear magnetization. The various quantities in Eq. (11) can be derived according to Valet-Fert theory [17] and the detailed results are listed in Appendix A. Substituting these results into Eq. (11), one can get the time rate of heat generation in the left ('+') and right ('-') FM layers

$$\sigma_{\text{heat}}^{\text{P(AP)}} = (1 - \beta^2) \rho_F^* J^2 + \Sigma_{\text{heat}}^{\text{F,P(AP)}} \frac{2}{l_{\text{sf}}^{\text{F}}} \exp \left[\pm \frac{2(z \pm d)}{l_{\text{sf}}^{\text{F}}} \right] \quad (31)$$

where

$$\Sigma_{\text{heat}}^{\text{F,P(AP)}} = \int_{-\infty}^{-d} [\sigma_{\text{heat}}^{\text{sc,P(AP)}} + \sigma_{\text{heat}}^{\text{sf,P(AP)}}] dz = r_{\text{F}} [\alpha_{\text{F}}^{\text{P(AP)}} J]^2 \quad (32)$$

is the spin-dependent part of the integral heat generation in the left FM layer. The right FM layer has the same contribution because both $\sigma_{\text{heat}}^{\text{sc,P(AP)}}$ and $\sigma_{\text{heat}}^{\text{sf,P(AP)}}$ are even functions about the origin. The dimensionless parameter $\alpha_{\text{F}}^{\text{P(AP)}}$ in Eq. (32) will be determined by boundary conditions in Sec. 3.2.

The heat generation in the NM layer is more complicated and has to be treated term by term. The bulk term $\sigma_{\text{heat}}^{\text{bulk}}$ has the same value $\sigma_{\text{heat}}^{\text{bulk}} = \rho_{\text{N}}^* J^2$ for either AP or P alignment, and its integral over the NM layer ($-d < z < d$) can be regarded as the Joule heating of the NM-layer nominal resistance $2d\rho_{\text{N}}^*$. For the AP alignment, the two spin-dependent terms can be written as

$$\sigma_{\text{heat}}^{\text{sc,AP}} = \frac{2\Sigma_{\text{heat}}^{\text{N,AP}}}{l_{\text{sf}}^{\text{N}} \sinh(2\xi)} \sinh^2 \left(\frac{z}{l_{\text{sf}}^{\text{N}}} \right) \quad (33)$$

$$\sigma_{\text{heat}}^{\text{sf,AP}} = \frac{2\Sigma_{\text{heat}}^{\text{N,AP}}}{l_{\text{sf}}^{\text{N}} \sinh(2\xi)} \cosh^2 \left(\frac{z}{l_{\text{sf}}^{\text{N}}} \right) \quad (34)$$

where

$$\Sigma_{\text{heat}}^{\text{N,AP}} = \int_{-d}^0 (\sigma_{\text{heat}}^{\text{sc,AP}} + \sigma_{\text{heat}}^{\text{sf,AP}}) dz = r_{\text{N}}^{\text{AP}} (\alpha_{\text{N}}^{\text{AP}} J)^2 \quad (35)$$

is the spin-dependent part of the integral heat generation in the left half of the NM layer. The contribution from the right half is equal to that from the left half since both $\sigma_{\text{heat}}^{\text{sc,AP}}$ and $\sigma_{\text{heat}}^{\text{sf,AP}}$ are even functions. In Eq. (35), r_{N}^{AP} is defined as $r_{\text{N}}^{\text{AP}} = r_{\text{N}} \coth \xi$, where we have $\xi = d/l_{\text{sf}}^{\text{N}}$. On the other hand, for the P alignment, we have

$$\sigma_{\text{heat}}^{\text{sc,P}} = \frac{2\Sigma_{\text{heat}}^{\text{N,P}}}{l_{\text{sf}}^{\text{N}} \sinh(2\xi)} \cosh^2 \left(\frac{z}{l_{\text{sf}}^{\text{N}}} \right) \quad (36)$$

$$\sigma_{\text{heat}}^{\text{sf,P}} = \frac{2\Sigma_{\text{heat}}^{\text{N,P}}}{l_{\text{sf}}^{\text{N}} \sinh(2\xi)} \sinh^2 \left(\frac{z}{l_{\text{sf}}^{\text{N}}} \right) \quad (37)$$

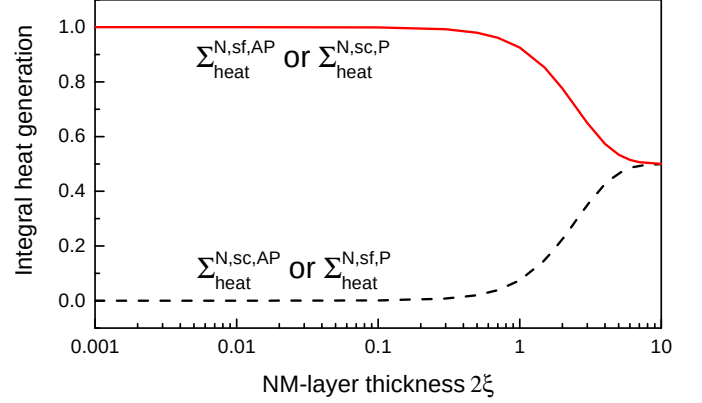


Figure 1: Integral heat generation rate (in unit of $\Sigma_{\text{heat}}^{\text{N,AP}}$ and $\Sigma_{\text{heat}}^{\text{N,P}}$ for AP and P alignments, respectively) in half of the NM layer as a function of the NM-layer thickness (in unit of l_{sf}^{N}). The red-solid curve corresponds to the integral heat generation due to the spin-flip (spin-conserving) scattering in the AP (P) configuration, and the black-dashed curve stands for that due to the spin-conserving (spin-flip) scattering in the AP (P) configuration.

where

$$\Sigma_{\text{heat}}^{\text{N,P}} = \int_{-d}^0 (\sigma_{\text{heat}}^{\text{sc,P}} + \sigma_{\text{heat}}^{\text{sf,P}}) dz = r_{\text{N}}^{\text{P}} (\alpha_{\text{N}}^{\text{P}} J)^2 \quad (38)$$

is the spin-dependent part of the integral heat generation in the left half of the NM layer. Similarly, the right half has the same contribution due to symmetry. In Eq. (38), r_{N}^{P} is defined as $r_{\text{N}}^{\text{P}} = r_{\text{N}} \tanh \xi$ and the dimensionless parameter $\alpha_{\text{N}}^{\text{P(AP)}}$ will be determined by boundary conditions in Sec. 3.2.

3.1. Comparison of spin-conserving and spin-flip scattering

Now we are ready to compare the magnitude of $\sigma_{\text{heat}}^{\text{sc}}$ and $\sigma_{\text{heat}}^{\text{sf}}$ in two typical situations: a semi-infinite layer and a finite layer. The spin valve contains both types of layers, namely the semi-infinite FM layers and the NM layer with a finite thickness. In the FM layers, the spin accumulation decays exponentially on the scale of the spin-diffusion length l_{sf} as shown in Eqs. (A.5) and (A.13). Without loss of generality, we will consider only the left FM layer ($z < -d$). Using Eq. (11), one can easily verify

$$\sigma_{\text{heat}}^{\text{sc,P(AP)}} = \sigma_{\text{heat}}^{\text{sf,P(AP)}} = \Sigma_{\text{heat}}^{\text{F,P(AP)}} \frac{1}{l_{\text{sf}}^{\text{F}}} \exp \left[\frac{2(z+d)}{l_{\text{sf}}^{\text{F}}} \right] \quad (39)$$

which shows that the spin-conserving scattering has the same contribution to the heat generation at any position as the spin-flip scattering in semi-infinite layers. Thus their integrals from $-\infty$ to $-d$ are also equal to each other [see Eq. (32)].

As for the finite NM layer, it is more meaningful to compare the integral heat generation due to the spin-conserving and spin-flip scattering, denoted by $\Sigma_{\text{heat}}^{\text{N,sc}}$ and $\Sigma_{\text{heat}}^{\text{N,sf}}$, respectively. In the AP configuration, we have

$$\Sigma_{\text{heat}}^{\text{N,sc,AP}} = \int_{-d}^0 \sigma_{\text{heat}}^{\text{sc,AP}} dz = \frac{1-\eta}{2} \Sigma_{\text{heat}}^{\text{N,AP}} \quad (40)$$

$$\Sigma_{\text{heat}}^{\text{N,sf,AP}} = \int_{-d}^0 \sigma_{\text{heat}}^{\text{sf,AP}} dz = \frac{1+\eta}{2} \Sigma_{\text{heat}}^{\text{N,AP}} \quad (41)$$

where the dimensionless parameter $\eta = 2\xi / \sinh(2\xi)$ describes the asymmetry between $\Sigma_{\text{heat}}^{\text{N,sc,AP}}$ and $\Sigma_{\text{heat}}^{\text{N,sf,AP}}$. This becomes more obvious if one looks at their relative difference $(\Sigma_{\text{heat}}^{\text{N,sf,AP}} - \Sigma_{\text{heat}}^{\text{N,sc,AP}}) / \Sigma_{\text{heat}}^{\text{N,AP}} = \eta$, which decreases from 1 to 0 as ξ varies from 0 to ∞ . Figure 1 shows their variation with the NM layer thickness 2ξ (in unit of l_{sf}^{N}). In the regime of $2\xi = 2d/l_{\text{sf}}^{\text{N}} \ll 1$, which is practical for experiments, $\Sigma_{\text{heat}}^{\text{N,sc,AP}} / \Sigma_{\text{heat}}^{\text{N,AP}}$ and $\Sigma_{\text{heat}}^{\text{N,sf,AP}} / \Sigma_{\text{heat}}^{\text{N,AP}}$ approach 0 and 1, respectively. Therefore, the spin-dependent heat generation of the NM layer is dominated by the spin-flip scattering in the AP alignment. This feature can be interpreted as follows. We have $z/l_{\text{sf}}^{\text{N}} \ll 1$ in the NM layer ($-d < z < d$) if $2d/l_{\text{sf}}^{\text{N}} \ll 1$. This allows us to expand the spin accumulation $\Delta\mu$ [see Eq. (A.9)] in terms of $z/l_{\text{sf}}^{\text{N}}$ and keep up to the first-order term. The result is a term independent of position because the first-order term also vanishes. Then $J_{\text{spin}}^{\text{exp}}$ approaches zero because it is proportional to the gradient of $\Delta\mu$ according to Eq. (4). Therefore, $\sigma_{\text{heat}}^{\text{sc,AP}}$ approaches zero in this regime according to Eq. (8).

In the P configuration, the integral heat generation, $\Sigma_{\text{heat}}^{\text{N,sc}}$ and $\Sigma_{\text{heat}}^{\text{N,sf}}$, can be written similarly as

$$\Sigma_{\text{heat}}^{\text{N,sc,P}} = \int_{-d}^0 \sigma_{\text{heat}}^{\text{sc,P}} dz = \frac{1+\eta}{2} \Sigma_{\text{heat}}^{\text{N,P}} \quad (42)$$

$$\Sigma_{\text{heat}}^{\text{N,sf,P}} = \int_{-d}^0 \sigma_{\text{heat}}^{\text{sf,P}} dz = \frac{1-\eta}{2} \Sigma_{\text{heat}}^{\text{N,P}} \quad (43)$$

However, their relative magnitude is switched in comparison to the AP alignment and the spin-conserving scattering becomes dominant in the regime $2d/l_{\text{sf}}^{\text{N}} \ll 1$ (see Fig. 1). This behavior can be understood in a similar way to the AP configuration. The low-order expansion of spin current J_{spin} [see Eq. (A.20)] is independent of position. Then $\Delta\mu$ approaches zero because it is proportional to the gradient of J_{spin} according to Eq. (9). Therefore, $\sigma_{\text{heat}}^{\text{sf,P}}$ approaches zero in this regime according to Eq. (10).

In the opposite regime, $2\xi = 2d/l_{\text{sf}}^{\text{N}} \gg 1$, the integral heat generation $\Sigma_{\text{heat}}^{\text{N,sc}}$ and $\Sigma_{\text{heat}}^{\text{N,sf}}$ approach the same value for both P and AP alignments as shown in Fig. 1. This means that the spin-conserving scattering has the same contribution as the spin-flip one when the NM-layer thickness becomes much larger than the spin-diffusion length. The semi-infinite case discussed above is recovered in the limit of thick layer.

3.2. Boundary conditions and heat generation at interfaces

If the FM/NM interface is an Ohmic contact, the interface resistance is usually negligible in comparison to the bulk term. Using the general solutions and boundary conditions without interface resistance in Appendix A, we can determine the dimensionless parameters

$$\alpha_{\text{F}}^{\text{P(AP)}} = \frac{\beta r_{\text{N}}^{\text{P(AP)}}}{r_{\text{F}} + r_{\text{N}}^{\text{P(AP)}}} \quad (44)$$

$$\alpha_{\text{N}}^{\text{P(AP)}} = \frac{\beta r_{\text{F}}}{r_{\text{F}} + r_{\text{N}}^{\text{P(AP)}}} \quad (45)$$

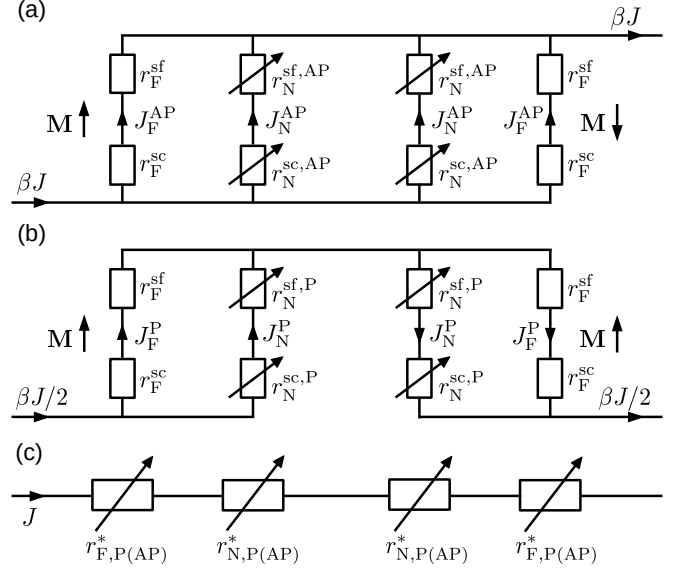


Figure 2: Effective circuits for the spin-dependent heat generation in a spin valve with AP and P configuration neglecting the interface resistance. (a) In the AP configuration, the resistance r_{F}^{sf} and r_{F}^{sc} have the same value $2r_{\text{F}}$. The variable resistances $r_{\text{N}}^{\text{sc,AP}}$ and $r_{\text{N}}^{\text{sf,AP}}$ are defined as $2r_{\text{N}}^{\text{AP}}(1-\eta)$ and $2r_{\text{N}}^{\text{AP}}(1+\eta)$, respectively. They vary with the thickness of the NM layer. (b) In the P configuration, r_{F}^{sf} and r_{F}^{sc} are the same as those in (a), while $r_{\text{N}}^{\text{sc,P}}$ and $r_{\text{N}}^{\text{sf,P}}$ are defined as $2r_{\text{N}}^{\text{P}}(1+\eta)$ and $2r_{\text{N}}^{\text{P}}(1-\eta)$, respectively. (c) The equivalent circuit of (a) and (b). The variable effective resistances are defined by Eqs. (71) and (72).

which satisfy the identity $\alpha_{\text{F}}^{\text{P(AP)}} + \alpha_{\text{N}}^{\text{P(AP)}} = \beta$. These parameters can be interpreted by the effective circuits in Figs. 2(a) and (b).

In the AP configuration shown by Fig. 2(a), the current of density $\beta J/2$ flows from the spin-down to the spin-up channel in either half of the spin valve. It models the electron-number current (spin flux) flowing inversely due to the spin-flip scattering in the FM and NM layers. We have the current density $J_{\text{F}}^{\text{AP}} = J\alpha_{\text{F}}^{\text{AP}}/2$ and $J_{\text{N}}^{\text{AP}} = J\alpha_{\text{N}}^{\text{AP}}/2$ by using simple circuit theorem. The heat generation due to the spin-flip scattering in the FM layer and either half of the NM layer is modeled by the Joule heating of resistances r_{F}^{sf} and $r_{\text{N}}^{\text{sf,AP}}$, respectively. Similarly, the resistances r_{F}^{sc} and $r_{\text{N}}^{\text{sc,AP}}$ model the heat generation due to the spin-conserving scattering. One can easily recover Eqs. (32), (40), and (41) by applying Joule's law to the circuit.

In the P configuration as shown by Fig. 2(b), the current of density $\beta J/2$ flows from the spin-down to the spin-up channel in the left half of the spin valve, which is similar to the AP configuration. However, the current of density $\beta J/2$ flows inversely in the right half of the spin valve because the sign of the spin accumulation and associated spin relaxation is switched in this half. One can find the current density $J_{\text{F}}^{\text{P}} = J\alpha_{\text{F}}^{\text{P}}/2$ and $J_{\text{N}}^{\text{P}} = J\alpha_{\text{N}}^{\text{P}}/2$ from the circuit. Then one can recover Eqs. (32), (42), and (43) by applying Joule's law to the circuit. Moreover, we also constructed an equivalent circuit, shown in Fig. 2(c), for the circuits in Figs. 2(a) and (b). The equivalent circuit has the same heat generation as the original one. However, the current density passing the equivalent circuit is the total current density J instead so that it can be connected in series with the nominal resistances (not shown in the figure).

If the interface resistance has to be taken into account, the dimensionless parameters can be determined similarly

$$\alpha_F^{P(AP)} = \frac{\beta [r_N^{P(AP)} + r_b^*] - \gamma r_b^*}{r_F + r_b^* + r_N^{P(AP)}} \quad (46)$$

$$\alpha_N^{P(AP)} = \frac{\beta r_F + \gamma r_b^*}{r_F + r_b^* + r_N^{P(AP)}} \quad (47)$$

which still satisfy the identity $\alpha_F^{P(AP)} + \alpha_N^{P(AP)} = \beta$. Equations (44) and (45) can be recovered if r_b^* is neglected in Eqs. (46) and (47).

According to Eq. (28), we can write the spin-dependent heat generation due to the left interface resistance as

$$\Sigma_{\text{heat}}^{C,P(AP)}(-d) = r_b^* [J_{\text{spin}}^{\text{sa},P(AP)}(-d)]^2 \quad (48)$$

where the spin-up electrons are in the minority channel for both P and AP configuration, and $J_{\text{spin}}^{\text{sa},P(AP)}(-d)$ is defined by Eq. (27). To show the meaning of this result, we consider the current density driven by the electric field (ef) alone

$$J_{\pm}^{\text{ef}}(-d) = \frac{1 \mp \gamma}{2} J \quad (49)$$

where J passes through $r_+ = 2r_b^*(1 + \gamma)$ and $r_- = 2r_b^*(1 - \gamma)$ in parallel. One can easily verify that the nominal heat generation due to the interface resistance, $[J_{\text{spin}}^{\text{ef}}(-d)]^2 r_+ + [J_{\text{spin}}^{\text{ef}}(-d)]^2 r_-$, is given by $J \Delta V_0$ [see Eq. (20)]. The spin current resulting from the electric field alone is $J_{\text{spin}}^{\text{ef},P(AP)} = J_{\text{spin}}^{\text{ef}}(-d) - J_{\text{spin}}^{\text{ef}}(-d) = -\gamma J$. The spin current due to the change of spin accumulation (sa) across the interface is the difference between $J_{\text{spin}}^{P(AP)}(-d)$ and $J_{\text{spin}}^{\text{ef},P(AP)}(-d)$, that is, $J_{\text{spin}}^{\text{sa},P(AP)}(-d) = J_{\text{spin}}^{P(AP)}(-d) + \gamma J$ already used in Eq. (48). The spin-dependent heat generation is solely caused by the spin-conserving scattering in the presence of spin accumulation change across the interface because the spin-flip scattering is neglected.

Similarly, the spin-dependent heat generation at the right interface can be written as

$$\Sigma_{\text{heat}}^{C,P(AP)}(d) = r_b^* [J_{\text{spin}}^{P(AP)}(d) + (-)\gamma J]^2 \quad (50)$$

where the spin-up channel is the minority (majority) one in P (AP) alignment. Substituting $J_{\text{spin}}^{P(AP)}(\pm d)$ into Eqs. (48) and (50), we can also write the spin-dependent heat generation at each interface as

$$\Sigma_{\text{heat}}^{C,P(AP)}(\pm d) = r_b^* [\alpha_C^{P(AP)} J]^2 \quad (51)$$

where

$$\alpha_C^{P(AP)} = \gamma - \alpha_N^{P(AP)} = \frac{\gamma [r_F + r_N^{P(AP)}] - \beta r_F}{r_F + r_b^* + r_N^{P(AP)}} \quad (52)$$

is also a dimensionless parameter.

4. Relation to the spin-coupled interface resistance

This section will give a specific discussion on the relation between the spin-dependent heat generation and the ‘Joule heating’ of the spin-coupled interface resistance r_{SI} in the spin

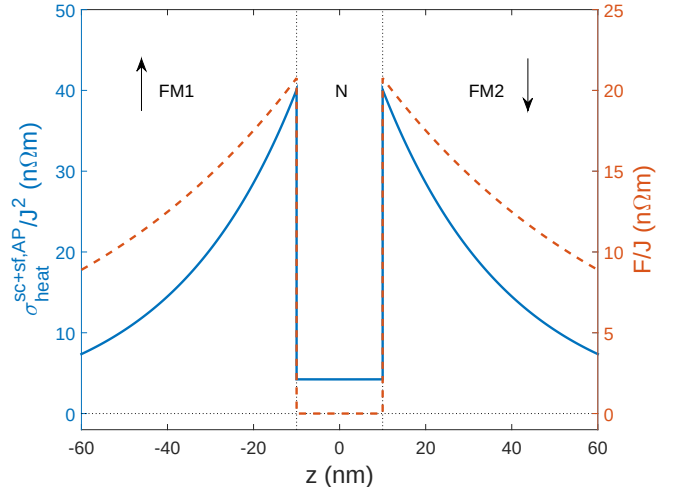


Figure 3: The spin-dependent heat generation (blue-solid curve) and the extra field (red-dashed curve) as functions of position z in a spin valve with AP configuration. The two FM layers are made of Co ($\rho_F^* = 86 \text{ n}\Omega \text{ m}$, $r_{\text{sf}}^F = 59 \text{ nm}$, $\beta = 0.5$) and the NM layer of Cu ($r_N = 7 \text{ n}\Omega \text{ m}$, $r_{\text{sf}}^N = 450 \text{ nm}$). The thickness of the NM layer is 20 nm and the interface resistance is neglected for simplicity.

valves. We will show the validity and limitation of r_{SI} in describing the heat generation, and then introduce effective resistance as an alternative.

4.1. Validity of the spin-coupled interface resistance

The spin-coupled interface resistances can be calculated by using Eqs. (18) and (21). Substituting Eqs. (A.8), (A.12), and (A.16) into Eq. (18), we have

$$r_{\text{SI}}^{F,P(AP)} = \beta r_F \alpha_F^{P(AP)} \quad (53)$$

$$r_{\text{SI}}^{N,P(AP)} = 0 \quad (54)$$

where $r_{\text{SI}}^{F,P(AP)}$ is for either of the two FM layers and $r_{\text{SI}}^{N,P(AP)}$ for the NM layer. Substituting (A.24) into Eq. (21) and using Eq. (52), we can write r_{SI} due to the interface as

$$r_{\text{SI}}^{C,P(AP)} = \gamma r_b^* \alpha_C^{P(AP)} \quad (55)$$

which has the same value at the two interfaces of the spin valve.

One may be tempted to interpret the spin-dependent heat generation as the Joule heating of the spin-coupled interface resistance. According to Eq. (30), this is possible only if $J_{\text{spin}} \Delta \mu$ has the same value at the two ends of the segment under consideration. The spin valve has at least three points satisfying this requirement: $z = \pm \infty$ and $z = 0$. [17] Thus Joule's law is valid (at least) in the following three segments: $-\infty < z < 0$, $0 < z < \infty$, and of course $-\infty < z < \infty$. To be specific, we will consider the left half ($-\infty < z < 0$) of the spin valve. By using Eq. (29), we can write *formally* the spin-dependent heat generation as the Joule heating of the corresponding r_{SI}

$$\Sigma_{\text{heat}}^{\text{spin},P(AP)} = J^2 [r_{\text{SI}}^{F,P(AP)} + r_{\text{SI}}^{C,P(AP)}] \quad (56)$$

where we have used $r_{\text{SI}}^{N,P(AP)} = 0$. Note that this result does not hold for arbitrary segment and $r_{\text{SI}} J^2$ cannot be regarded as

the heat generation either because it may be negative in certain situation. Its real meaning will be discussed in the following.

We will focus on the left half of the spin valve and consider only the P alignment without loss of generality. Substituting $J_{\text{spin}} = -\beta J + J_{\text{spin}}^{\text{exp}}$ into Eq. (13), we have

$$\Sigma_{\text{heat}} = J(\Delta V_0^F + \Delta V_0^C + \Delta V_0^N) + J(\Delta V_1^F + \Delta V_1^C) - \Delta E_{\text{cp}} + \Sigma_{\text{heat}}^{\text{spin,P}} \quad (57)$$

where we have introduced

$$\Delta E_{\text{cp}} = \frac{\beta J}{e} \Delta\mu(z_C^-) + \frac{\gamma J}{e} [\Delta\mu(z_C^+) - \Delta\mu(z_C^-)] \quad (58)$$

and

$$\Sigma_{\text{heat}}^{\text{spin,P}} = \frac{J_{\text{spin}}^{\text{exp}}(z_C^-)}{e} \Delta\mu(z_C^-) - \frac{J_{\text{spin}}^{\text{exp}}(z_C^+)}{e} \Delta\mu(z_C^+) + \frac{\gamma J + J_{\text{spin}}(z_C)}{e} [\Delta\mu(z_C^+) - \Delta\mu(z_C^-)] \quad (59)$$

Using Eqs. (A.21), (A.22), and (A.24), one can easily verify that Eq. (59) is the spin-dependent heat generation defined in Eqs. (25) and (56). Note that $J_{\text{spin}}^{\text{exp}}$ is discontinuous at the interface located at $z = z_C$ although J_{spin} is continuous. Comparing Eqs. (24) and (57), one has

$$J(\Delta V_1^F + \Delta V_1^C) = \Delta E_{\text{cp}} \quad (60)$$

which is valid in *arbitrary* segment of the spin valve. More specifically, we also have

$$J\Delta V_1^F = \frac{\beta J}{e} \Delta\mu(z_C^-) \quad (61)$$

$$J\Delta V_1^C = \frac{\gamma J}{e} [\Delta\mu(z_C^+) - \Delta\mu(z_C^-)] \quad (62)$$

where Eqs. (18) and (21) have been used. On the other hand, using Eq. (56) and $J(\Delta V_1^F + \Delta V_1^C) = J^2[r_{\text{SI}}^{\text{F,P}} + r_{\text{SI}}^{\text{C,P}}]$, we also have

$$\Sigma_{\text{heat}}^{\text{spin,P}} = \Delta E_{\text{cp}} \quad (63)$$

However, this relation is valid only if $J_{\text{spin}}\Delta\mu$ has the same value at the two terminals of the segment. Therefore, $J(\Delta V_1^F + \Delta V_1^C)$ is more closely related to ΔE_{cp} than $\Sigma_{\text{heat}}^{\text{spin,P}}$. It is crucial to figure out the meaning of $J(\Delta V_1^F + \Delta V_1^C)$ and ΔE_{cp} .

According to the definition of ΔV_1^F [see Eq. (18)], $J\Delta V_1^F$ should be regarded as the work done by the extra field, which is dominated by the electrostatic field. [18] We stress that this work may be negative when the interface resistance is included. To show this feature, we rewrite $J\Delta V_1^F$ as

$$J\Delta V_1^F = \beta r_{\text{F}}^{\text{P}} J^2 \quad (64)$$

where $\alpha_{\text{F}}^{\text{P}}$ is given by Eq. (46). By choosing the various parameters properly, one can make $\alpha_{\text{F}}^{\text{P}}$ negative. Then $r_{\text{SI}}^{\text{F,P}} = \Delta V_1^F/J$ also becomes negative and so it is ill-defined. Similarly, $J\Delta V_1^C$ stands for the work done by the extra field across the interface and it may also be negative. Using Eq. (52), we have

$$J\Delta V_1^C = \gamma r_{\text{b}}^* \alpha_{\text{C}}^{\text{P}} J^2 \quad (65)$$

where $\alpha_{\text{C}}^{\text{P}}$ may be negative if the various parameters are chosen properly. Then $r_{\text{SI}}^{\text{C,P}} = \Delta V_1^C/J$ also becomes negative. Therefore, $J(\Delta V_1^F + \Delta V_1^C)$ should be regarded as the work done by the extra field instead of the Joule heating of the spin-coupled interface resistance although they are equal in some special segments, for example, $\Sigma_{\text{heat}}^{\text{spin,P}} = J^2 r_{\text{SI}}^{\text{F,P}} + J^2 r_{\text{SI}}^{\text{C,P}}$ in the left half of the spin valve.

To show the meaning of ΔE_{cp} , we rewrite its first term as

$$\frac{\beta J}{e} \Delta\mu(z_C^-) = \frac{J_{+}^{\text{bulk}}}{-e} [\mu_{+}(z_C^-) - \mu_0] + \frac{J_{-}^{\text{bulk}}}{-e} [\mu_{-}(z_C^-) - \mu_0] \quad (66)$$

where μ_0 is the equilibrium chemical potential and $\mu_{\pm}$ the chemical potential for spin $s = \pm$, respectively. We have used the quasi-neutrality approximation, $\mu_{+}(z_C^-) + \mu_{-}(z_C^-) - 2\mu_0 = 0$, [18] when deriving Eq. (66). The two terms on the right-hand side of Eq. (66) stand for the change of energy stored in the chemical-potential imbalance per unit time in the two spin channels, respectively, when the bulk electron-number current flows from z_C^- to $-\infty$. The reasonable source of the net energy change is the work done by the extra field in the FM layer according to Eq. (61). Similarly, the second term of ΔE_{cp} can be written as

$$\frac{\gamma J}{e} [\Delta\mu(z_C^+) - \Delta\mu(z_C^-)] = \frac{J_{+}^{\text{ef}}(z_C)}{-e} \delta\mu_{+} + \frac{J_{-}^{\text{ef}}(z_C)}{-e} \delta\mu_{-} \quad (67)$$

where we have introduced $\delta\mu_{\pm} = \mu_{\pm}(z_C^+) - \mu_{\pm}(z_C^-)$ and used the quasi-neutrality approximation. The two terms on the right-hand side of Eq. (67) can be regarded as the change of energy stored in chemical-potential imbalance of the two spin channels, respectively, when the current driven by the electric field alone traverses the interface. This energy change is supplied by the extra field at the interface according to Eq. (62).

The physical process can be summarized as follows. The spin-dependent heat generation due to the spin-conserving and spin-flip scattering leads to the dissipation of energy stored in the chemical-potential splitting in every layer of the spin valve including the FM layers, the interface, and the NM layer. Then this change of the chemical-potential energy is compensated by the work of the extra electric field in the FM layer and at the interface. However, the compensation process does not happen in the NM layer since there is no extra field in this layer.

4.2. Effective resistance

The spin-dependent heat generation in each individual layer cannot be interpreted as Joule heating of r_{SI} in this layer. This is easy to see if we consider the NM layer. It has a spin-dependent heat generation but no contribution to r_{SI} according to Eq. (54). Similar analysis shows that this result is also true in other layers and at interfaces. Moreover, $r_{\text{SI}}^{\text{F,P(AP)}}$ and $r_{\text{SI}}^{\text{C,P(AP)}}$ in Eqs. (53) and (55) can be negative when $\alpha_{\text{F}}^{\text{P(AP)}}$ and $\alpha_{\text{C}}^{\text{P(AP)}}$ are negative according to Eqs. (46) and (52). Therefore, it is necessary to find an alternative to r_{SI} if one hopes to describe the heat generation of a single layer with Joule's law. Using Eqs. (32), (35), (38), and (51), we can write the spin-dependent part of the integral

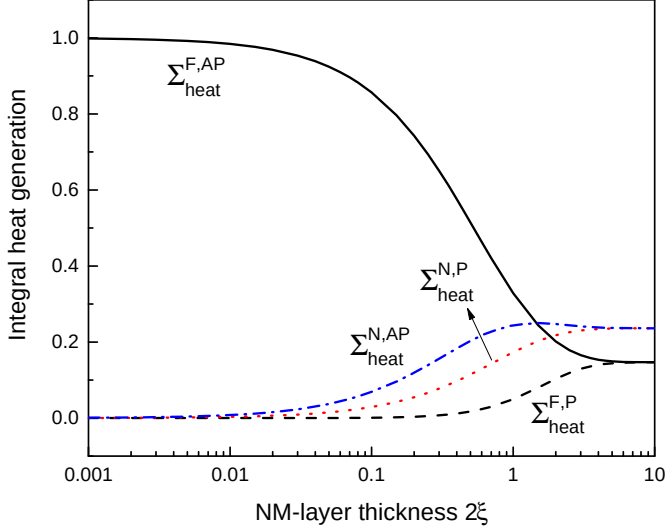


Figure 4: The spin-dependent part of the integral spin-dependent heat generation (in unit of $\Sigma_{\text{heat}}^{F,AP}$) in the FM and NM layers as functions of the NM-layer thickness (in unit of l_{sf}^N). We used the same parameters as those of Fig. 3.

heat generation in each layer as

$$\Sigma_{\text{heat}}^{F,P(AP)} = J^2 r_{F,P(AP)}^* \quad (68)$$

$$\Sigma_{\text{heat}}^{N,P(AP)} = J^2 r_{N,P(AP)}^* \quad (69)$$

$$\Sigma_{\text{heat}}^{C,P(AP)} = J^2 r_{C,P(AP)}^* \quad (70)$$

where we have introduced the effective resistances

$$r_{F,P(AP)}^* = r_F [\alpha_F^{P(AP)}]^2 \quad (71)$$

$$r_{N,P(AP)}^* = r_N [\alpha_N^{P(AP)}]^2 \quad (72)$$

$$r_{C,P(AP)}^* = r_b [\alpha_C^{P(AP)}]^2 \quad (73)$$

for one FM layer, half of the NM layer, and one FM/NM interface, respectively. The effective resistances $r_{F,P(AP)}^*$ and $r_{N,P(AP)}^*$ can be understood by constructing an equivalent circuit as shown in Fig. 2(c). Comparing Eqs. (56) with the sum of Eqs. (68), (69), and (70), we have

$$r_{\text{SI}}^{P(AP)} = r_{F,P(AP)}^* + r_{N,P(AP)}^* + r_{C,P(AP)}^* \quad (74)$$

where we also have $r_{\text{SI}}^{P(AP)} = r_{\text{SI}}^{F,P(AP)} + r_{\text{SI}}^{C,P(AP)}$. Two resistances have been introduced for each layer: the effective resistance and the spin-coupled interface resistance. In general, they are not equal to each other in a single layer or at an interface. The most obvious example is the NM layer, where $r_{N,P(AP)}^*$ has a finite value whenever $d \neq 0$ while r_{SI}^N is always zero.

Figure 4 shows the quantitative results for the integral heat generation without interface resistance. The curves can also be regarded as the variation of the effective resistances defined in Eqs. (71) and (72) since they are proportional to the integral heat generation. In the regime $2\xi \ll 1$, $\Sigma_{\text{heat}}^{F,AP}$ approaches a positive constant $J^2 \beta^2 r_F$, while $\Sigma_{\text{heat}}^{F,P}$, $\Sigma_{\text{heat}}^{N,AP}$, and $\Sigma_{\text{heat}}^{N,P}$ approach zero. This behavior indicates the existence of the magneto-heating effect: different heat generation in P and AP configurations. In

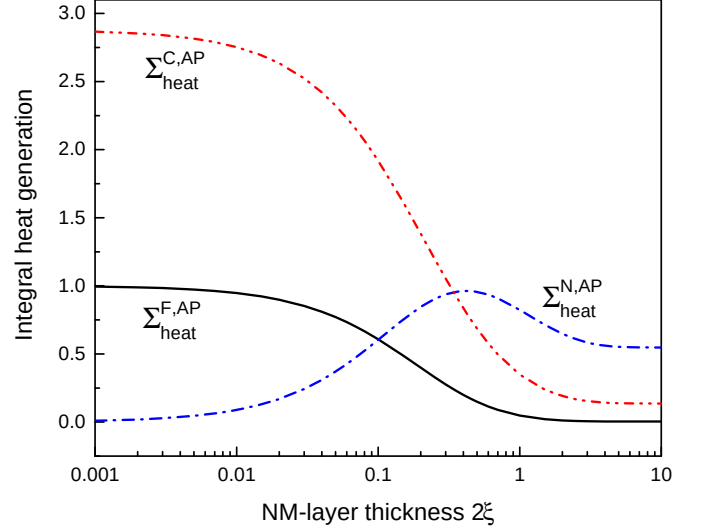


Figure 5: The variation of the integral spin-dependent heat generation (in unit of $\Sigma_{\text{heat}}^{F,AP}$) with the NM-layer thickness (in unit of l_{sf}^N) for the AP alignment. The solid and dash-dot lines are for the FM1 layer and the left half of the NM layer as in Fig. 4. The contribution of the interface resistance ($r_b^* = 2r_F$ and $\gamma = 0.6$) is shown by the dash-dot-dot line.

the limit of $2\xi \rightarrow \infty$, the difference between P and AP alignments disappears. The limits of the heat generation in the FM and NM layers depend on r_F and r_N . If r_F is equal to r_N , all the curves approach the same limit. Moreover, under the condition $r_F = r_N$, we also have $\Sigma_{\text{heat}}^{N,AP} = \Sigma_{\text{heat}}^{N,P}$ for arbitrary NM-layer thickness according to Eqs. (35) and (38).

When the interface resistance is taken into account, the spin-dependent part of the integral heat generation exhibits several important features as shown in Fig. 5. The contribution of the FM layer may decrease to zero if the NM-layer thickness increases to a certain value. Then we have $\alpha_F^{AP} = 0$ according to Eq. (32) and the spin accumulation disappears together with the additional field in the FM layer. In this case, the loss of potential energy due to heat generation can only be compensated by the additional field at the interface. Moreover, the contribution of the NM layer may exceed that from the FM layer even when 2ξ is small enough that the magneto-heating effect is still remarkable. This indicates the possibility of allocating heat generation in different layers by engineering the interface resistance.

5. Conclusions

Our analytical results show that the spin-dependent heat generation is due to two mechanisms: the spin-flip and spin-conserving scattering. In the presence of spin accumulation, heat is generated when electrons undergo transitions between the two spin channels with different chemical potential via the spin-flip scattering. On the other hand, with the existence of spin accumulation gradient, spin-conserving scattering can also lead to heat generation when electrons move to positions with lower chemical potential in the same spin channel. The two mechanisms have equal contributions in semi-infinite layers. However, in the NM layer of a thickness much shorter than

its spin-diffusion length, the spin-dependent heat generation is dominated by the spin-flip scattering in the AP configuration, and by the spin-conserving scattering in the P configuration.

We proved in general that the spin-dependent heat generation is equal to the ‘Joule heating’ of the spin-coupled interface resistance (r_{SI}) only in some special segment. The concept of r_{SI} has another limitation: it may be negative in some cases when it is defined in an individual layer. Therefore, $J^2 r_{\text{SI}}$ should be interpreted as the work done by the extra field in the FM layers and at interfaces instead of Joule heating. It converts into the energy stored in the chemical-potential splitting, which in turn compensates the spin-dependent energy dissipation in all the layers including the NM layer. Effective resistances and associated circuits are also introduced to overcome the limitation of r_{SI} in describing heat generation.

6. Acknowledgments

We thank Prof. Suzuki and Prof. Tulapurkar for fruitful discussions. This work was supported by National Natural Science Foundation of China [grant numbers 11404013, 11605003, 61405003, 11174020, 11474012]; Beijing Natural Science Foundation [grant number 1112007]; and 2016 Graduate Research Program of BTBU.

Appendix A. General Expression

The current density J_s and electrochemical potential $\bar{\mu}_s = \mu_s - eV$ of the two spin channels, $s = \pm$, satisfy the following equations

$$\frac{e}{\sigma_s} \frac{\partial J_s}{\partial z} = \frac{\bar{\mu}_s - \bar{\mu}_{-s}}{l_s^2} \quad (\text{A.1})$$

$$J_s = \frac{\sigma_s}{e} \frac{\partial \bar{\mu}_s}{\partial z} \quad (\text{A.2})$$

where σ_s and l_s denote the conductivity and spin-diffusion length for spin s , respectively. [17] These two equations can be transformed into

$$\frac{e}{\sigma_{\pm}} \frac{\partial J_{\pm}}{\partial z} = \pm 2 \frac{\Delta\mu}{l_{\pm}^2} \quad (\text{A.3})$$

$$J_{\pm} = \sigma_{\pm} \left(F \pm \frac{1}{e} \frac{\partial \Delta\mu}{\partial z} \right) \quad (\text{A.4})$$

where $\Delta\mu = (\bar{\mu}_+ - \bar{\mu}_-)/2$ and $F = (1/e)\partial\bar{\mu}/\partial z$. Solving these equations for the spin valve considered in Sec. 3, we can write $\bar{\mu}_{\pm}(z)$, $J_{\pm}(z)$ and $F(z)$ in terms of $\Delta\mu$. For the AP configuration, the magnetization direction is “up” in the left FM layer (FM1) and “down” in the right FM layer (FM2). In the FM1 layer ($z < -d$), we have

$$\Delta\mu(z) = er_F \alpha_F^{\text{AP}} J \exp[(z+d)/l_{\text{sf}}^{\text{F}}] \quad (\text{A.5})$$

$$\bar{\mu}_{\pm}(z) = eE_0^{\text{F}} z + K_1^{\text{A}} \pm (1 \pm \beta) \Delta\mu \quad (\text{A.6})$$

$$J_{\pm}(z) = (1 \mp \beta) \frac{J}{2} \pm \frac{\Delta\mu}{2er_F} \quad (\text{A.7})$$

$$F(z) = E_0^{\text{F}} + \frac{\beta \Delta\mu}{el_{\text{sf}}^{\text{F}}} \quad (\text{A.8})$$

In the NM layer ($-d < z < d$), we have

$$\Delta\mu(z) = er_N^{\text{AP}} \alpha_N^{\text{AP}} J \cosh(z/l_{\text{sf}}^{\text{N}}) / \cosh \xi \quad (\text{A.9})$$

$$\bar{\mu}_{\pm}(z) = eE_0^{\text{N}} z + K_1^{\text{B}} \pm \Delta\mu \quad (\text{A.10})$$

$$J_{\pm}(z) = \frac{J}{2} \pm \frac{1}{2e\rho_N^*} \frac{\partial \Delta\mu}{\partial z} \quad (\text{A.11})$$

$$F(z) = E_0^{\text{N}} \quad (\text{A.12})$$

where $E_0^{\text{N}} = \rho_N^* J$. In the FM2 layer ($z > d$), we have

$$\Delta\mu(z) = er_F \alpha_F^{\text{AP}} J \exp[-(z-d)/l_{\text{sf}}^{\text{F}}] \quad (\text{A.13})$$

$$\bar{\mu}_{\pm}(z) = eE_0^{\text{F}} z + K_1^{\text{C}} \pm (1 \mp \beta) \Delta\mu \quad (\text{A.14})$$

$$J_{\pm}(z) = (1 \pm \beta) \frac{J}{2} \mp \frac{\Delta\mu}{2er_F} \quad (\text{A.15})$$

$$F(z) = E_0^{\text{F}} + \frac{\beta \Delta\mu}{el_{\text{sf}}^{\text{F}}} \quad (\text{A.16})$$

Using these equations, one can easily derive

$$J_{\text{spin}} = \mp \beta J \pm \frac{\Delta\mu}{er_F} \quad (\text{A.17})$$

for the FM1 (FM2) layer, and

$$J_{\text{spin}} = \frac{1}{e\rho_N^*} \frac{\partial \Delta\mu}{\partial z} = \alpha_N^{\text{AP}} J \sinh(z/l_{\text{sf}}^{\text{N}}) / \sinh \xi \quad (\text{A.18})$$

for the NM layer.

In the P configuration, both FM1 and FM2 layers have “up” magnetization. The expressions of the various quantities can be derived similarly and thus we only list some results that will be referred to in the previous sections. In the NM layer, we have

$$\Delta\mu(z) = -er_N^{\text{P}} \alpha_N^{\text{P}} J \sinh(z/l_{\text{sf}}^{\text{N}}) / \sinh \xi \quad (\text{A.19})$$

$$J_{\text{spin}} = -\alpha_N^{\text{P}} J \cosh(z/l_{\text{sf}}^{\text{N}}) / \cosh \xi \quad (\text{A.20})$$

Note that J_{spin} has only exponential part in the NM layer. The dimensionless parameters $\alpha_F^{\text{P(AP)}}$ and $\alpha_N^{\text{P(AP)}}$ are given in Sec. 3.2.

The current density and electrochemical potential satisfy the boundary conditions at an interface located at $z = z_C$

$$J_s(z_C^+) - J_s(z_C^-) = 0 \quad (\text{A.21})$$

$$\delta \bar{\mu}_s(z_C) = \bar{\mu}_s(z_C^+) - \bar{\mu}_s(z_C^-) = er_s J_s(z_C) \quad (\text{A.22})$$

where the spin-dependent interface resistance r_s can be written as

$$r_{\uparrow(\downarrow)} = 2r_b^* [1 - (+)\gamma] \quad (\text{A.23})$$

Here, γ is the interfacial asymmetry coefficient and $\uparrow(\downarrow)$ denotes the majority (minority) spin channel. Subtracting the ‘ $\pm$ ’ components of Eq. (A.22), we have

$$\Delta\mu(z_C^+) - \Delta\mu(z_C^-) = eJ_{\text{spin}}^{\text{ac}}(z_C) r_b^* = e[J_{\text{spin}}(z_C) \pm \gamma J] r_b^* \quad (\text{A.24})$$

where we have used Eq. (27). The sign ‘+’ (‘-’) corresponds to the configuration in which the spin-up channel is the minority (majority) one. On the other hand, summing the ‘ $\pm$ ’ components of Eq. (A.22), we have

$$\bar{\mu}(z_C^+) - \bar{\mu}(z_C^-) = eJ(1 - \gamma^2) r_b^* \pm e\gamma [J_{\text{spin}}(z_C) \pm \gamma J] r_b^* \quad (\text{A.25})$$

Appendix B. Heat generation due to spin-conserving scattering

The first two terms of Eq. (1) can also be rewritten in the following way. The current density J_s and the electro-chemical potential $\bar{\mu}_s$ can be separated into bulk and exponential terms

$$J_{\pm} = J_{\pm}^{\text{bulk}} + J_{\pm}^{\text{exp}} \quad (\text{B.1})$$

$$\frac{\partial \bar{\mu}_{\pm}}{\partial z} = \frac{\partial \bar{\mu}_{\pm}^{\text{bulk}}}{\partial z} + \frac{\partial \bar{\mu}_{\pm}^{\text{exp}}}{\partial z} \quad (\text{B.2})$$

Moreover, the bulk and exponential components satisfy the following relations

$$J_+^{\text{exp}} + J_-^{\text{exp}} = 0 \quad (\text{B.3})$$

$$\frac{\partial \bar{\mu}_+^{\text{bulk}}}{\partial z} = \frac{\partial \bar{\mu}_-^{\text{bulk}}}{\partial z} \quad (\text{B.4})$$

The sum of the first two terms in Eq. (1) can be written as

$$\frac{J_+}{e} \frac{\partial \bar{\mu}_+}{\partial z} + \frac{J_-}{e} \frac{\partial \bar{\mu}_-}{\partial z} = \frac{J^2}{\sigma_+ + \sigma_-} + \frac{J_+^{\text{exp}}}{e} \frac{\partial \bar{\mu}_+^{\text{exp}}}{\partial z} + \frac{J_-^{\text{exp}}}{e} \frac{\partial \bar{\mu}_-^{\text{exp}}}{\partial z} \quad (\text{B.5})$$

Then using $\bar{\mu}_s(z) = \mu_s(z) - eV(z)$, we have

$$\frac{\partial \bar{\mu}_{\pm}^{\text{exp}}}{\partial z} = \frac{\partial \mu_{\pm}^{\text{exp}}}{\partial z} + eF^{\text{exp}} \quad (\text{B.6})$$

Finally, the last two terms of Eq. (B.5) can be expressed by the chemical potential

$$\frac{J_+^{\text{exp}}}{e} \frac{\partial \bar{\mu}_+^{\text{exp}}}{\partial z} + \frac{J_-^{\text{exp}}}{e} \frac{\partial \bar{\mu}_-^{\text{exp}}}{\partial z} = \frac{J_+^{\text{exp}}}{e} \frac{\partial \mu_+^{\text{exp}}}{\partial z} + \frac{J_-^{\text{exp}}}{e} \frac{\partial \mu_-^{\text{exp}}}{\partial z} \quad (\text{B.7})$$

which is the two-channel form of Eq. (8).

Appendix C. Heat generation due to interface resistance

The heat generation due to interface resistance is only caused by the spin-conserving scattering and can be calculated by simply summing the two spin channels [6]

$$\Sigma_{\text{heat}}^{\text{C}} = [J_+(z_C) \delta \bar{\mu}_+ + J_-(z_C) \delta \bar{\mu}_-] / e, \quad (\text{C.1})$$

where $\delta \bar{\mu}_s = \bar{\mu}_s(z_C^+) - \bar{\mu}_s(z_C^-)$ is the change in electrochemical potential across the (infinitesimally thin) interface. Substituting the boundary conditions, Eq. (A.22), into Eq. (C.1), we have

$$\Sigma_{\text{heat}}^{\text{C}} = J_+^2(z_C) r_+ + J_-^2(z_C) r_- \quad (\text{C.2})$$

which is just Joule's law in the two-channel manner. It is more meaningful to write it in terms of J and J_{spin}

$$\Sigma_{\text{heat}}^{\text{C}} = J \Delta V_0^{\text{C}} + \Sigma_{\text{heat}}^{\text{spin,C}} \quad (\text{C.3})$$

where ΔV_0^{C} and $\Sigma_{\text{heat}}^{\text{spin,C}}$ are defined in Eqs. (20) and (28), respectively.

References

References

- [1] A. Fert, Nobel lecture: Origin, development, and future of spintronics, *Rev. Mod. Phys.* 80 (2008) 1517–1530. doi:10.1103/RevModPhys.80.1517.
- [2] G. E. W. Bauer, E. Saitoh, B. J. van Wees, Spin caloritronics, *Nat. Mater.* 11 (2012) 391–399. doi:10.1038/nmat3301.
- [3] H. Adachi, K. Uchida, E. Saitoh, S. Maekawa, Theory of the spin Seebeck effect, *Rep. Prog. Phys.* 76 (2013) 036501. doi:10.1088/0034-4885/76/3/036501.
- [4] D. C. Ralph, M. D. Stiles, Spin transfer torques, *J. Magn. Magn. Mater.* 320 (2008) 1190–1216. doi:10.1016/j.jmmm.2007.12.019.
- [5] K. Uchida, S. Takahashi, K. Harii, J. Ieda, W. Koshibae, K. Ando, S. Maekawa, E. Saitoh, Observation of the spin seebeck effect, *Nature* 455 (2008) 778–781. doi:10.1038/nature07321.
- [6] A. A. Tulapurkar, Y. Suzuki, Boltzmann approach to dissipation produced by a spin-polarized current, *Phys. Rev. B* 83 (2011) 012401. doi:10.1103/PhysRevB.83.012401.
- [7] J.-E. Wegrowe, H.-J. Drouhin, Spin-currents and spin-pumping forces for spintronics, *Entropy* 13 (2011) 316–331. doi:10.3390/e13020316.
- [8] A. Slachter, F. L. Bakker, B. J. van Wees, Modeling of thermal spin transport and spin-orbit effects in ferromagnetic/nonmagnetic mesoscopic devices, *Phys. Rev. B* 84 (2011) 174408. doi:10.1103/PhysRevB.84.174408.
- [9] T. Taniguchi, W. M. Saslow, Dissipation due to pure spin-current generated by spin pumping, *Phys. Rev. B* 90 (2014) 214407. doi:10.1103/PhysRevB.90.214407.
- [10] I. Juarez-Acosta, M. A. Olivares-Robles, S. Bosu, Y. Sakuraba, T. Kubota, S. Takahashi, K. Takamashi, G. E. W. Bauer, Modelling of the Peltier effect in magnetic multilayers, *J. Appl. Phys.* 119 (2016) 073906. doi:10.1063/1.4942163.
- [11] A. Slachter, F. L. Bakker, B. J. van Wees, Anomalous Nernst and anisotropic magnetoresistive heating in a lateral spin valve, *Phys. Rev. B* 84 (2011) 020412. doi:10.1103/PhysRevB.84.020412.
- [12] S. Krause, G. Herzog, A. Schlenhoff, A. Sonntag, R. Wiesendanger, Joule heating and spin-transfer torque investigated on the atomic scale using a spin-polarized scanning tunneling microscope, *Phys. Rev. Lett.* 107 (2011) 186601. doi:10.1103/PhysRevLett.107.186601.
- [13] M. Erekhinsky, F. Casanova, I. K. Schuller, A. Sharoni, Spin-dependent seebeck effect in non-local spin valve devices, *Appl. Phys. Lett.* 100 (2012) 212401. doi:10.1063/1.4717752.
- [14] F. L. Bakker, A. Slachter, J.-P. Adam, B. J. van Wees, Interplay of peltier and seebeck effects in nanoscale nonlocal spin valves, *Phys. Rev. Lett.* 105 (2010) 136601. doi:10.1103/PhysRevLett.105.136601.
- [15] F. K. Dejene, B. J. van Wees, Verification of the thomson-ohm reciprocity relation for spin caloritronics, *Phys. Rev. B* 90 (2014) 180402. doi:10.1103/PhysRevB.90.180402.
- [16] J. Flipse, F. L. Bakker, A. Slachter, F. K. Dejene, B. J. van Wees, Direct observation of the spin-dependent peltier effect, *Nat. Nanotechnol.* 7 (2012) 166–168. doi:10.1038/nnano.2012.2.
- [17] T. Valet, A. Fert, Theory of the perpendicular magnetoresistance in magnetic multilayers, *Phys. Rev. B* 48 (1993) 7099–7113. doi:10.1103/PhysRevB.48.7099.
- [18] Y.-H. Zhu, D.-H. Xu, A.-C. Geng, Charge accumulation due to spin transport in magnetic multilayers, *Physica B* 446 (2014) 43–48. doi:10.1016/j.physb.2014.04.036.
- [19] D. Kondepudi, I. Prigogine, *Modern Thermodynamics: From Heat Engine to Dissipative Structures*, Wiley, New York, 1998. doi:10.1002/9781118698723.
- [20] H. B. Callen, *Thermodynamics and an Introduction to Thermostatistics*, 2nd Edition, Wiley, New York, 1985.
- [21] M. Hatami, G. E. W. Bauer, Q. Zhang, P. J. Kelly, Thermal spin-transfer torque in magnetoelectronic devices, *Phys. Rev. Lett.* 99 (2007) 066603. doi:10.1103/PhysRevLett.99.066603.