


Limitation of Prior Works: Heuristic-Dependent

Manual Configuration



Rotation ☐

Flip ☒

 Gum.xml


 Screw.xml

Mask threshold

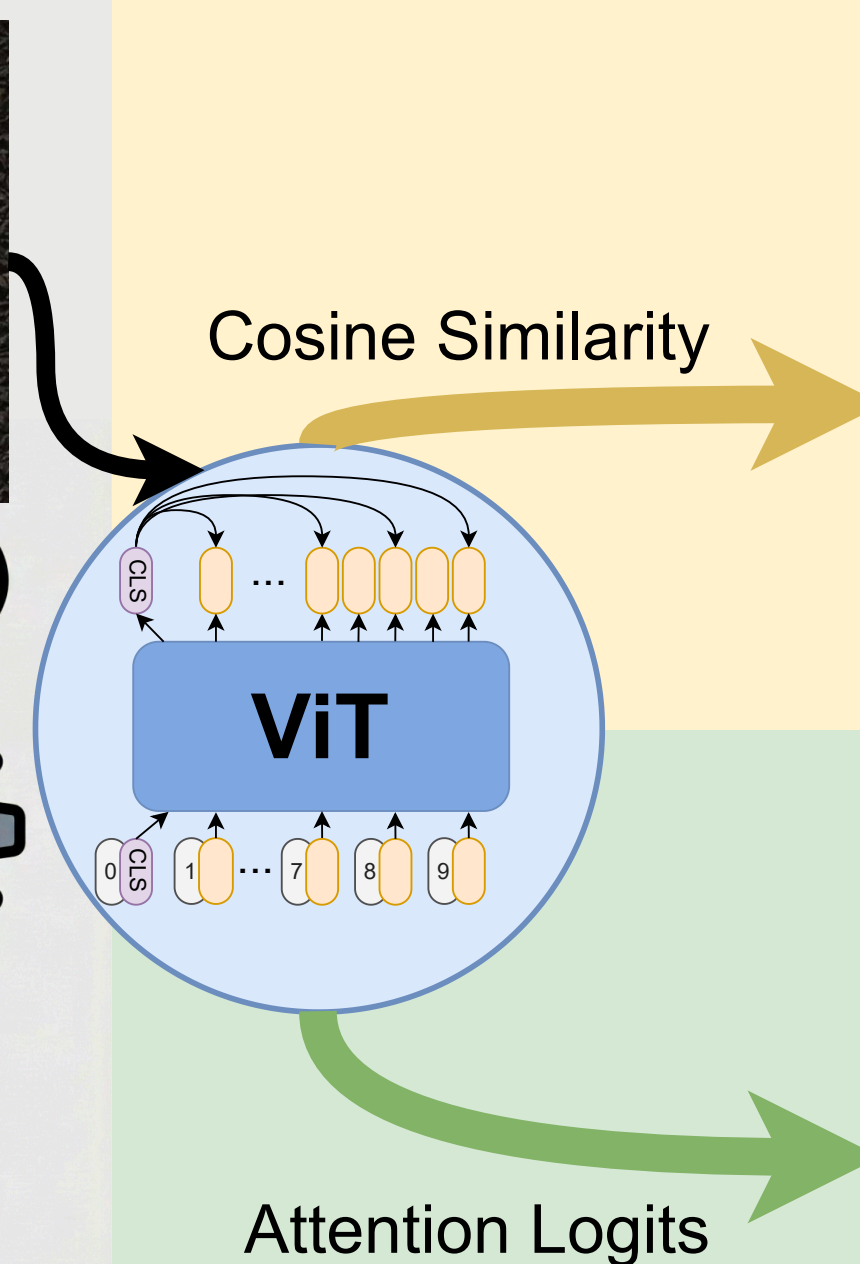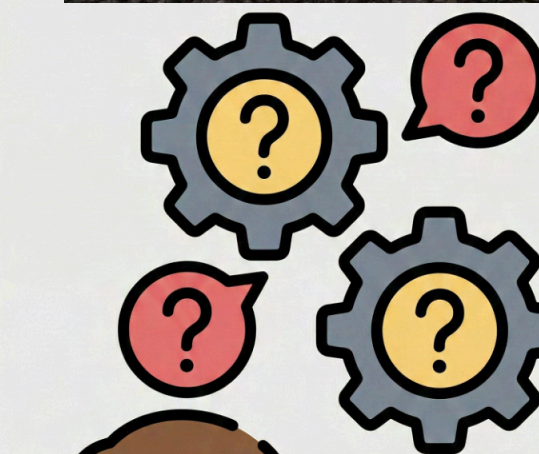

Key Insight: Dual Characteristics of ViT

Semantic
Stability

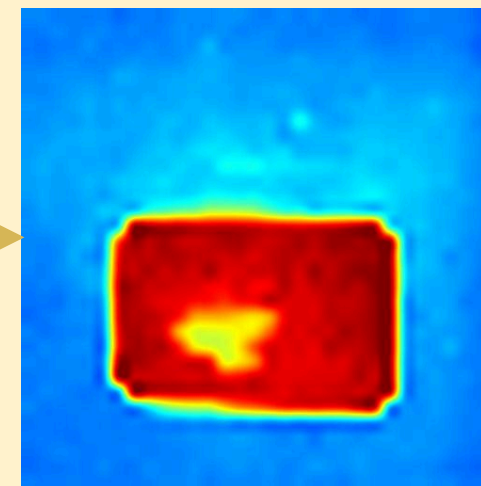

Heuristic-Free Augmentation

. Use defect-invariant [CLS] similarity to select augmentations.


Augmentation

Auto ☒

Configs




Structural
Sensitivity

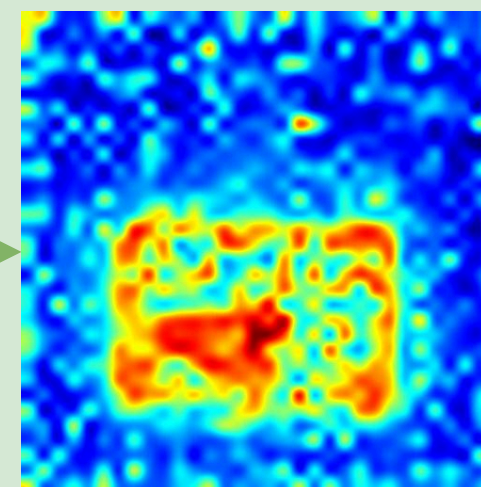

Inherent Anomaly Sensitivity

. Standard attention inherently priorities local anomalies

SAM / Manual Masking

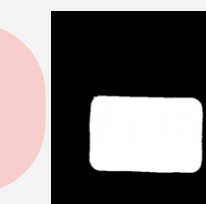

SOTA Performance

MVTec-AD

1-Shot I-AUC 97.7%

4-Shot I-AUC 98.6%

VisA

1-Shot I-AUC 93.0%

4-Shot I-AUC 95.3%

Real-IAD

1-Shot I-AUC 84.7%

4-Shot I-AUC 88.4%