

MiniMaxAD: A Lightweight Autoencoder for Feature-Rich Anomaly Detection

Fengjie Wang, Chengming Liu, Lei Shi, Pang Haibo*

Zhengzhou University, China

Abstract

Previous unsupervised anomaly detection (UAD) methods often struggle to handle the extensive diversity in training sets, particularly when they contain stylistically diverse and feature-rich samples, which we categorize as feature-rich anomaly detection datasets (FRADs). This challenge is evident in applications such as multi-view and multi-class scenarios. To address this challenge, we developed MiniMaxAD, a lightweight autoencoder designed to efficiently compress and memorize extensive information from normal images. Our model employs a technique that enhances feature diversity, thereby increasing the effective capacity of the network. It also utilizes large kernel convolution to extract highly abstract patterns, which contribute to efficient and compact feature embedding. Moreover, we introduce an Adaptive Contraction Hard Mining Loss (ADCLoss), specifically tailored to FRADs. In our methodology, any dataset can be unified under the framework of feature-rich anomaly detection, in a way that the benefits far outweigh the drawbacks. Our approach has achieved state-of-the-art performance in multiple challenging benchmarks.

1 Introduction

Anomaly detection presents a significant challenge in the field of computer vision. Owing to the difficulties associated with collecting and labeling anomalous samples, unsupervised learning methods have become increasingly favored for anomaly detection. These methods utilize only normal samples for training and are engineered to identify anomalous images and segment anomalous regions during inference. Recently, UAD technology is increasingly used in more complex scenarios to meet growing demand.

Previous anomaly detection methods often require training a separate model for each class of objects, which can lead to significant memory consumption. In response, UniAD (You et al. 2022) proposes a unified setting that trains a single model on multiple classes of normal samples. They also highlight the limitations of the traditional one-category-one-model approach, especially in cases where normal samples exhibit considerable intra-class diversity. This challenge is especially pronounced in the fields of unmanned supermarkets and multi-view anomaly detection, as illustrated by the newly introduced GoodsAD (Zhang et al.

2024) and Real-IAD (Wang et al. 2024) datasets, which exhibit significant intra-class diversity.

In this study, we revisited the existing UAD dataset and categorized it based on the diversity of samples within the training set, a concept we will refer to as **intra-set** diversity. We define datasets with substantial intra-set diversity as Feature-Rich Anomaly Detection Datasets (FRADs), in contrast to Feature-Poor Anomaly Detection Datasets (FPADs), as illustrated in Figure 1. Notably, FPADs can be easily converted to FRADs using the unified setting. This diversity necessitates that neural networks extensively memorize normal features. Among FRADs, PatchCore (Roth et al. 2021) demonstrates superior performance in applications such as unmanned supermarkets (Zhang et al. 2024) and multi-view scenarios (Wang et al. 2024), benefiting from an efficient memory bank that stores normal contexts. However, this approach also significantly increases inference times due to its reliance on time-consuming query operations. Additionally, as the number of training samples grows, so does the memory bank’s size, complicating the application of PatchCore in unified settings. Consequently, we aim to develop a high-performance, lightweight UAD method that addresses the challenges of FRADs effectively.

Methods based on multi-scale reconstruction (Deng and Li 2022; Guo et al. 2023; Tien et al. 2023; Zhang et al. 2023b) are celebrated for their simplicity and efficiency. These methods use a paired encoder and decoder to reconstruct features, effectively capturing the manifold of normal samples. During testing, areas with higher reconstruction errors are flagged as anomalies. However, they face two primary challenges: (a) the network’s limited information capacity may inadequately reconstruct normal areas, resulting in false positives; (b) its robust generalization ability might allow it to accurately reconstruct abnormal areas, leading to false negatives, a phenomenon often referred to as the “identical shortcut” (You et al. 2022). Experimental results from GoodsAD (Zhang et al. 2024) show that these methods tend to generate a high rate of false positives by mistakenly classifying many normal foreground regions as abnormal in FRADs. Moreover, replacing the backbone of Reverse Distillation (RD) (Deng and Li 2022) with a larger model, such as WideResNet-101 (Zagoruyko and Komodakis 2016), significantly reduces performance, as illustrated in Figure 2(a). This suggests that dual challenges

*Corresponding Author

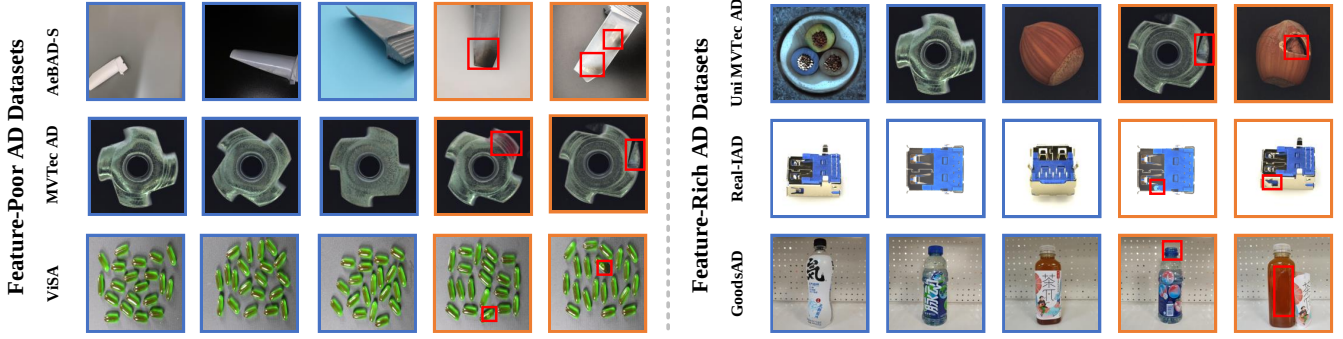


Figure 1: Examples of Feature-Rich Anomaly Detection Datasets (FRADs) and Feature-Poor Anomaly Detection Datasets (FPADs). Uni MVtecAD, i.e. MVtecAD under unified settings, represents a scenario where multiple categories share a model. Anomalous areas are marked with red boxes.

of limited capacity and the “identical shortcut” are present when dealing with FRADs.

In response to the dual challenges, our study introduces a core motivation: **maximizing the “effective capacity” of a lightweight autoencoder**. Our approach is built on an efficient and compact architecture, the Reverse Distillation (RD) Architecture. However, it suffers from severe performance degradation when confronted with FRADs, particularly on the GoodsAD dataset, where the decline is critical—it nearly fails to reconstruct any foreground regions of the objects. To address this, we adopted a more aggressive improvement strategy by starting from its fundamental architecture. Our initial step is to reduce the number of parameters, which offers the dual benefits of enhancing computational efficiency and mitigating the “identical shortcut” issue. Although reducing the number of parameters typically results in decreased information capacity due to fewer neurons, we recognize that the ratio of information capacity to the number of parameters may have been underestimated. Despite having fewer parameters, a significant number of features can still be retained. To achieve this, we utilize large kernel convolutions to extract more comprehensive representations with relatively fewer parameters. Additionally, we employ a technique to prevent neuron inactivation, GRN (Woo et al. 2023), which enhances network capacity by reactivating saturated or inactive neurons, thereby enabling them to represent more information. Finally, we introduce a novel Adaptive Contraction Hard Mining Loss (ADCLoss). Unlike previous hard mining methods, our approach allows the mining rate to adapt dynamically based on the characteristics of the given dataset. Our main contributions are summarized below:

- We revisit existing UAD datasets and categorize them into feature-rich and feature-poor anomaly detection datasets based on intra-set diversity. The goal is to develop more targeted solutions for specific scenarios and to provide a framework for unifying these diverse datasets.
- We study the performance degradation of reconstruction-based methods in the presence of significant intra-set diversity from the perspective of information capacity and

propose an effective solution.

- We developed a novel Adaptive Contraction Hard Mining Loss (ADCLoss) tailored for FRADs with excellent performance.
- Our comprehensive experiments show that our method achieves state-of-the-art performance across multiple challenging tasks.

2 Related Work

2.1 Unsupervised Anomaly Detection

Methods based on reconstruction. In unsupervised anomaly detection (UAD), methods based on image-level reconstruction train models to reconstruct normal images, leveraging the assumption that anomalies will result in poor reconstruction quality due to model unfamiliarity with normal images. Recently, OCR-GAN (Liang et al. 2023) improved the performances by decoupling input images into various frequency components, employing multiple generators for enhanced reconstruction. On the feature level, the introduction of the teacher-student model (Bergmann et al. 2020; Gu et al. 2023; Deng and Li 2022; Batzner, Heckler, and König 2023; Guo et al. 2023), inspired by knowledge distillation (Hinton, Vinyals, and Dean 2015), utilizes a pre-trained network as a ‘teacher’ to guide a ‘student’ model trained only on normal images. This approach targets feature reconstruction. Recently, MambaAD (He et al. 2024a), based on reconstruction, explored the application of Mamba (Gu and Dao 2023) to unsupervised anomaly detection (UAD).

Methods Based on K-Nearest Neighbor (KNN). KNN-based methods leverage feature matching for inference, as demonstrated in various studies (Cohen and Hoshen 2020; Nazare, de Mello, and Ponti 2018; Napolitano, Piccoli, and Schettini 2018; Cohen, Tzachor, and Hoshen 2023). One prominent example, PatchCore (Roth et al. 2021), utilizes a large pre-trained network to extract normal features and applies a core-set downsampling technique to mitigate storage and inference costs. This approach has exhibited strong performance and robustness across diverse industrial anomaly detection datasets. Despite these advantages, the costs associated with inference rise incrementally as the training sample size increases, due to the expanding memory bank.

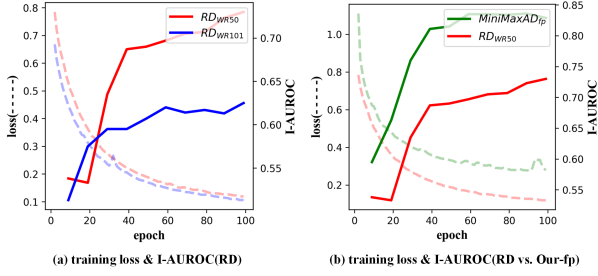


Figure 2: **(a)** Performance comparison of RD with different backbones for the *drink can* scenario in the GoodsAD dataset. **(b)** Performance comparison between RD and MiniMaxAD for the *drink can* scenario.

2.2 Hard Mining Strategies

Hard mining strategies are widely employed in reconstruction methods to enhance model performance. The core idea behind these strategies is to focus the model’s optimization efforts on the regions of the image that are difficult to reconstruct, typically the foreground regions. IKD (Cao et al. 2022) introduces a hard mining method that adaptively adjusts the margin based on the statistical information (mean and variance) of feature distances within each mini-batch. This method uses a fixed discard rate as a hyperparameter, discarding feature points with smaller reconstruction errors. ReContras (Guo et al. 2023) refines this approach by making the discard rate variable, decreasing it over the course of iterations to achieve a coarse-to-fine optimization process. Instead of discarding the feature points themselves, ReContras discards the gradients associated with those points. EfficientAD (Xiao et al. 2023) takes a more aggressive approach by discarding 99.9% of the feature points in the feature map, focusing exclusively on fine-grained optimization.

3 Method

Our study is based on the Reverse Distillation (RD) framework, which is broadly a multi-scale autoencoder. We will first summarize the classic RD methods, and use our core motivation to guide our detailed explanation of the complete MiniMaxAD methodology.

3.1 Reverse Distillation for Anomaly Detection

Reverse Distillation (RD) (Deng and Li 2022) is an important method in UAD, featuring a streamlined architecture that consists of a frozen pre-training encoder (teacher), a bottleneck, and a feature reconstruction decoder (student). The encoder extracts multi-scale spatial features from the input image, which the bottleneck then condenses to minimize redundancy. The decoder, designed as an inverse counterpart to the encoder, reconstructs the encoder’s output to achieve feature-level alignment. When faced with abnormal samples during testing, the decoder’s inability to accurately reconstruct the encoder’s output serves to highlight discrepancies, thereby generating an anomaly map. Formally, let $f_E^k, f_D^k \in \mathbb{R}^{C_k \times H_k \times W_k}$ represent the feature maps output by the encoder and decoder at the k -th level, respectively. Here,

C_k, H_k , and W_k denote the number of channels, the height, and the width of the output feature map at each level. The training objective is to minimize the global cosine distance loss between the corresponding output features of each layer for normal images, quantified by the following formula:

$$\mathcal{L}_{global} = \sum_{k=1}^3 \left(1 - \frac{\mathcal{F}(f_E^k)^T \cdot \mathcal{F}(f_D^k)}{\|\mathcal{F}(f_E^k)\| \|\mathcal{F}(f_D^k)\|} \right) \quad (1)$$

Where $\mathcal{F}$ represents the flattening operation. For the tensors f_E^k and f_D^k , point-by-point differences are calculated using the local cosine distance. This process generates a two-dimensional anomaly map, denoted by $m^k \in \mathbb{R}^{H_k \times W_k}$.

$$m^k(h, w) = 1 - \frac{f_E^k(h, w)^T \cdot f_D^k(h, w)}{\|f_E^k(h, w)\| \|f_D^k(h, w)\|} \quad (2)$$

Ultimately, m^k is upsampled to match the height and width of the original image, $I \in \mathbb{R}^{C_0 \times H_0 \times W_0}$, using an operation represented by Ψ . The final anomaly score map, $\mathcal{S}(h, w) \in \mathbb{R}^{H_0 \times W_0}$, is then constructed by aggregating pixel values across three layers of sub-anomaly maps:

$$\mathcal{S}(h, w) = \sum_{k=0}^3 \Psi(m^k) \quad (3)$$

3.2 Expanding the Effective Capacity Cap

The Global Response Normalization (GRN) unit can reactivate saturated or dead neurons, thereby increasing neuron utilization and enhancing model capacity. Specifically, the GRN unit boosts channel contrast and selectivity by aggregating features at the channel level. This is achieved using the L2-norm on the feature map X_i , followed by normalization to compute the feature normalization coefficient n_x :

$$n_x = \frac{g_x}{\mathbf{E}[g_x]} \in \mathbb{R}^C \quad (4)$$

where $g_x = \{\|X_1\|, \|X_2\|, \dots, \|X_C\|\} \in \mathbb{R}^C$, and $\mathbf{E}[\cdot]$ represents the computation of the mean. This equation determines the relative importance of each channel, fostering a competitive relationship among them through mutual suppression. The computed feature normalization coefficients n_x are then used to calibrate the raw input:

$$X = \gamma * (X * n_x) + \beta * X \quad (5)$$

where γ and β are learnable hyperparameters.

3.3 MinMax Thinking

Our core motivation can be addressed in two ways: (1) to mitigate the “identical shortcut” phenomenon by reducing the number of parameters, and (2) to maximize the effective capacity of a lightweight autoencoder under the constraints imposed by (1). Here, “effective” highlights the model’s ability to accurately reconstruct normal foreground regions, while “capacity” refers to the model’s enhanced information density. Based on this premise, an intuitive strategy is to extract deeper, more abstract representations to achieve highly compact information storage. Consequently, large

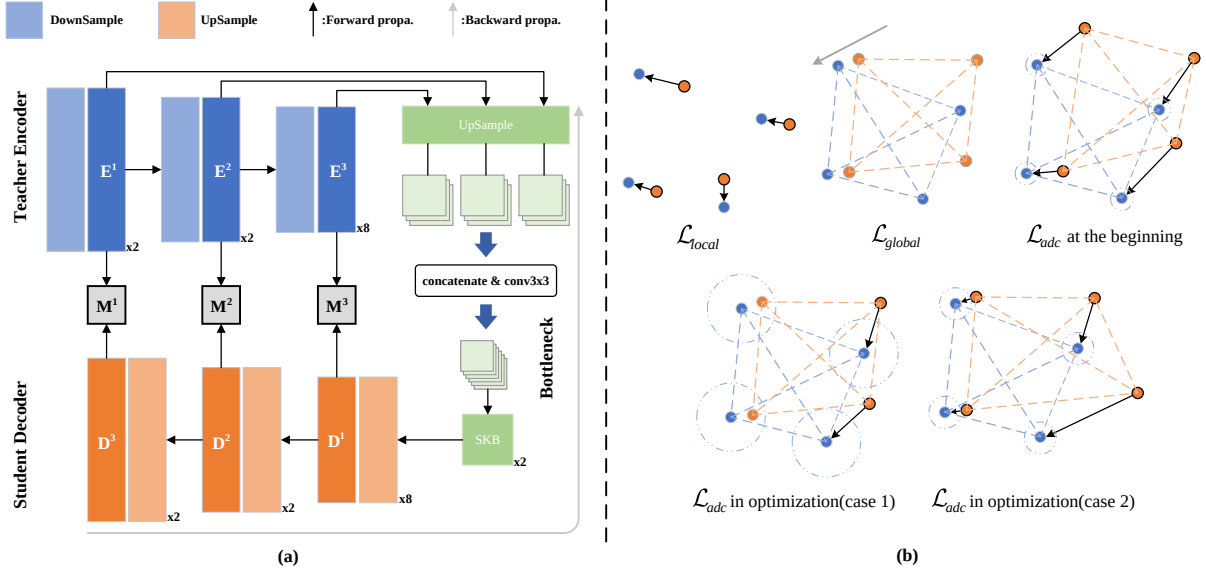


Figure 3: **(a) Overview of Proposed MiniMaxAD.** **(b) Optimization Process of the Loss Function:** The diagram illustrates the optimization direction using arrows. Within the blue dashed circle, the yellow circle will not be optimized, i.e., the gradient will be stopped. As overall alignment improves, the radius of the blue dashed circle increases. During the optimization of $\mathcal{L}_{adc}$, moving a single yellow circle outward in the lower right corner of Case 1 causes the blue dashed circle to contract, leading to Case 2. This adjustment encourages additional yellow circles to enter the optimization process.

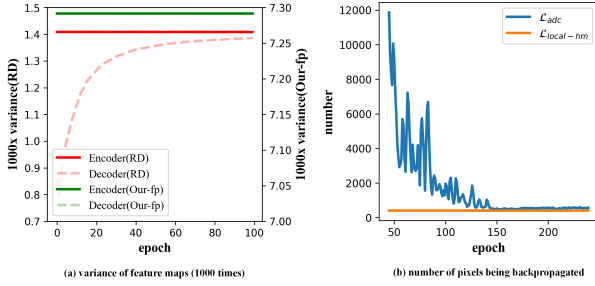


Figure 4: **(a) Performance comparison of RD with different backbones for the *drink can* scenario in the GoodsAD dataset.** **(b) Performance comparison between RD and MiniMaxAD for the *drink can* scenario.**

kernel convolution emerges as a powerful method for implementing this strategy. In recent visual recognition research, advances in large kernel convolution have renewed interest in convolutional networks. UniRepLKNNet (Ding et al. 2023) proposes a series of design guidelines for large-kernel convolutions; they have developed a powerful backbone equipped with a GRN Unit that perfectly fits our methodology. This network comprises several downsampling blocks and two distinct types of blocks—the Large Kernel Block (LarK Block) and the Small Kernel Block (SmaK Block). As shown in the encoder section of the Figure 3(a). Specifically, E^1 uses a 3×3 convolution kernel in the SmaK Block, while E^2 and E^3 utilize a 13×13 convolution kernel in the LarK Block. The full architecture of the proposed model is depicted in Figure 3(a).

To illustrate the substantial advantages of MiniMaxAD over RD in handling FRADs, we conducted a quantitative analysis of the feature map alignment process, where the Decoder reconstructs the Encoder’s features. We perform the L2-norm on the feature maps of the encoder and decoder, after which the variance was calculated as $\frac{1}{3} \sum_{k=1}^3 \sigma(f_E^k / \|f_E^k\|)^2$ and $\frac{1}{3} \sum_{k=1}^3 \sigma(f_D^k / \|f_D^k\|)^2$. As depicted in Figure 4(a), benefiting from the GRN unit and large kernel design, the variance of MiniMaxAD is about five times that of RD, indicating that MiniMaxAD can characterize richer information. We conduct a more analysis of this process from the perspective of entropy, detailed in the Appendix.

3.4 Adaptive Contraction Strategy

To be more robust, we employ a fully adaptive discard rate. First, we directly optimize the final anomaly map based on the point-by-point distance, $\mathcal{S}(h, w) \in \mathbb{R}^{H_0 \times W_0}$:

$$\mathcal{L}_{local} = \frac{1}{HW} \sum_{h=1}^H \sum_{w=1}^W \mathcal{S}(h, w)^2 \quad (6)$$

Our newly introduced $\mathcal{L}_{local}$ is conceptually similar to applying an MSE loss between the zero tensor and the final anomaly map, $\mathcal{S}(h, w)$. Our approach is founded on the key observation that the value of the anomaly map, $\mathcal{S}$, decreases as the alignment of the feature map improves. Furthermore, this decrease should occur in the opposite direction to the increase in the discard rate, with equivalent magnitude. We have leveraged this relationship to extract numerical features from $\mathcal{S}$. Specifically, We define p_{hard} as the primary mining

factor and p_{lim} as the lower bound mining factor. Consider α to be the p_{hard} -quantile of the elements in $\mathcal{S}(h, w)$, and β to be the p_{lim} -quantile of the squared elements, $\mathcal{S}(h, w)^2$. Additionally, let σ represent the standard deviation of $\mathcal{S}(h, w)$. The number of pixels satisfying $\mathcal{S}(h, w)^2 \geq \alpha - \sigma^2$ is denoted by $\mathcal{A}$. The number of pixels influenced by the lower bound mining factor p_{lim} is indicated by $\mathcal{B}$, calculated as $B \times H_0 \times W_0 \times (1 - p_{lim})$, where B is the batch size. We also define a mean operation, $\mathbf{E}(\mathcal{S}|\mathcal{C})$, where elements that do not satisfy the condition $\mathcal{C}$ will stop the gradient and not participate in the mean computation. Our proposed AD-CLoss is structured as follows:

$$\mathcal{L}_{adc} = \begin{cases} \mathbf{E}(\mathcal{S}^2 | \mathcal{S}^2 \geq \alpha - \sigma^2), & \text{if } \mathcal{A} \geq \mathcal{B} \\ \mathbf{E}(\mathcal{S}^2 | \mathcal{S}^2 \geq \beta - \sigma^2), & \text{if } \mathcal{A} < \mathcal{B} \end{cases} \quad (7)$$

This adaptive contraction strategy ensures that the property of global sensing is maintained throughout the entire optimization process of $\mathcal{L}_{adc}$. This adaptive contraction process is illustrated in Figure 4(a). By default, p_{hard} is set to 0.9999 and p_{lim} to 0.9995. The optimization process of $\mathcal{L}_{adc}$ is depicted in Figure 3(b). We characterize the loss function of a fixed mining strategy as:

$$\mathcal{L}_{local-hm} = \mathbf{E}(\mathcal{S}^2 | \mathcal{S}^2 \geq \beta) \quad (8)$$

Ultimately, we provide two variants of our model: MiniMaxAD-fr and MiniMaxAD-fp. MiniMaxAD-fr is equipped with $\mathcal{L}_{adc}$ specifically for processing FRADs, while MiniMaxAD-fp uses $\mathcal{L}_{global}$ to handle FPADs.

4 Experiments

4.1 Experimental Settings

Datasets. **MVTec AD** and **VisA** feature high-resolution images across multiple object and texture categories, highlighting both surface and structural defects. **AeBAD-S** is specifically focused on domain diversity within aero-engine blade images. **GoodsAD** captures extensive intra-class diversity with 6,124 high-resolution images of common supermarket goods, showcasing a single product offered by multiple brands. **Real-IAD** is a recent, large UAD dataset comprising 150K images across 30 categories, with each category containing five default perspectives. Detailed information is presented in Appendix.

Implementation. Network optimization was carried out using an AdamW optimizer (Loshchilov and Hutter 2019), with the β parameters set to (0.9, 0.999) and a weight decay of 0.00005. The learning rate was set at 0.005, accompanied by an ExponentialLR scheduler with a gamma of 0.995. The batch size for all experiments was 16. For experiments in the single-class setting, GoodsAD was trained for 240 epochs, ViSA for 150 epochs, AeBAD-S for 130 epochs, and Real-IAD for 50 epochs. In the multi-class setting, MVTec AD and ViSA were trained for 160 epochs, while Real-IAD was trained for only 1 epoch. Results were reported from the **last epoch** for each scenario. All experiments were performed on an NVIDIA RTX 4090 GPU using PyTorch 2.0. The model does not use efficient large kernel convolution as suggested by (Ding et al. 2023).

	PCore	RD	MMR	Ours-fp/Ours-fr*
I-AUROC	71.0	81.0	84.7	87.4 /87.2
AUPRO	87.8	85.6	89.1	79.9/87.4

Table 1: Quantitative Results on AeBAD-S for single-class setting.

	PCore	RD	EfficientAD	Ours-fp
I-AUROC	95.1	96.0	98.1	96.1
AUPRO	91.2	70.9	94.0	90.4

Table 2: Quantitative Results on VisA for single-class setting.

Metrics. We use two of the most commonly employed metrics for anomaly detection and segmentation as our basic evaluation metrics (Bergmann et al. 2019): image-level Area Under the Receiver Operating Characteristic Curve (I-AUROC) and pixel-level Area Under the Per-Region Overlap (AUPRO). Additionally, following previous work (Zhang et al. 2023a; He et al. 2024a), we adopt supplementary metrics on certain datasets for a more comprehensive evaluation, including Average Precision (AP) (Zavrtanik, Kristan, and Skocaj 2021) and F1-score-max (F1_max) (Zou et al. 2022). We also calculate the average of the seven evaluation metrics mentioned above, denoted as mAD, to represent the model’s overall performance.

4.2 Anomaly Detection and Segmentation on FPADs

In this section, we focus on demonstrating the performance of MiniMaxAD on FPADs using the two most commonly used metrics (see Section 4.1). We compare our method with RD (Deng and Li 2022), PatchCore (Ishida et al. 2023), MMR (Zhang et al. 2023b), and EfficientAD (Batzner, Heckler, and König 2023), all of which are powerful state-of-the-art (SoTA) methods.

As shown in the table 1, on the AeBAD-S, our model (Ours-fp) exhibits a 2.7 $\uparrow$ increase in classification and a 9.2 $\downarrow$ decrease in segmentation compared to MMR. We hypothesize that this sharp decline in segmentation performance is related to the domain shift in the AeBAD-S. However, after adding all 15 classes of training samples from MVTecAD into its training set to convert it into FRAD and training MiniMax-fr for 20 epochs (denoted as Ours-fr*). This adjustment significantly improved segmentation performance, albeit with a slight decrease in detection performance. Specifically, compared to MMR, the performance changed by 2.5 $\uparrow$ in classification and 1.7 $\downarrow$ in segmentation. We view the addition of irrelevant samples to the training set as a form of **strong regularization**, which helps prevent model overfitting by reducing excessive focus on specific regions or a priori domains. In addition, Table 2 demonstrates the gap between MiniMax-fp and SoTA methods, with our method achieving a significant improvement of 19.5 $\uparrow$ in segmentation performance over the baseline method RD.

Dataset	Method	Image-level			Pixel-level				mAD
		AUROC	AP	F1_max	AUROC	AP	F1_max	AUPRO	
MVTec-AD (multi-class)	RD	94.6	96.5	95.2	96.1	48.6	53.8	91.1	82.3
	UniAD	96.5	98.8	96.2	96.8	43.4	49.5	90.7	81.7
	SimpleNet	95.3	98.4	95.8	96.9	45.9	49.7	86.5	81.2
	DiAD	97.2	99.0	96.5	96.8	52.6	55.5	90.7	84.0
	MambaAD	98.6	99.6	97.8	97.7	56.3	59.2	93.1	86.0
	MiniMaxAD-fr(Ours)	98.8	99.6	<u>97.7</u>	96.1	58.5	59.5	<u>92.2</u>	86.1
VisA (multi-class)	RD	92.4	92.4	<u>89.6</u>	98.1	38.0	42.6	91.8	77.8
	UniAD	88.8	90.8	85.8	<u>98.3</u>	33.7	39.0	85.5	74.6
	SimpleNet	87.2	87.0	81.8	96.8	34.7	37.8	81.4	72.4
	DiAD	86.8	88.3	85.1	96.0	26.1	33.0	75.2	70.1
	MambaAD	<u>94.3</u>	<u>94.5</u>	89.4	98.5	39.4	44.0	<u>91.0</u>	<u>78.7</u>
	MiniMaxAD-fr(Ours)	96.9	97.2	94.1	97.4	48.6	51.5	90.1	82.3
Real-IAD (multi-class)	RD	82.4	79.0	73.9	97.3	25.0	32.7	<u>89.6</u>	<u>68.6</u>
	UniAD	83.0	80.9	74.3	97.3	21.1	29.2	86.7	67.5
	SimpleNet	57.2	53.4	61.5	75.7	2.8	6.5	39.0	42.3
	DiAD	75.6	66.4	69.9	88.0	2.9	7.1	58.1	52.6
	MambaAD	86.3	84.6	77.0	98.5	<u>33.0</u>	<u>38.7</u>	90.5	72.7
	MiniMaxAD-fr(Ours)	85.1	<u>84.1</u>	<u>75.8</u>	96.9	36.0	42.1	88.8	72.7
Real-IAD (single-class)	PatchCore	90.3	<u>88.6</u>	<u>81.3</u>	98.2	36.8	41.3	89.8	75.2
	RD	89.5	87.9	80.5	<u>98.6</u>	<u>41.0</u>	<u>46.0</u>	93.3	<u>76.7</u>
	UniAD	81.6	77.3	73.4	97.6	17.9	25.1	86.9	65.7
	SimpleNet	88.9	87.4	80.4	96.8	20.8	28.8	83.3	69.5
	MVAD	<u>90.2</u>	88.2	81.0	98.9	34.6	39.9	<u>92.3</u>	75.0
	MiniMaxAD-fr(Ours)	91.2	89.7	82.4	98.3	44.2	47.6	<u>92.3</u>	80.0
GoodsAD (single-class)	PatchCore	<u>85.9</u>	-	-	-	-	-	<u>85.7</u>	-
	RD	66.5	-	-	-	-	-	79.7	-
	SimpleNet	75.3	-	-	-	-	-	68.8	-
	MiniMaxAD-fr(Ours)	86.1	-	-	-	-	-	87.5	-

Table 3: Quantitative results on different feature-rich anomaly detection datasets.

4.3 Anomaly Detection and Segmentation on FRADs

We compare our method with current SoTA methods using image-level and pixel-level metrics (see Section 4.1) across a range of datasets. This section focuses on comparisons with UniAD(You et al. 2022), DiAD(He et al. 2024b), and MambaAD(He et al. 2024a), which have been recently tailored for multi-class settings. We also compare other SoTA methods, such as RD(Deng and Li 2022), SimpleNet(Liu et al. 2023) and PatchCore(Ishida et al. 2023). Additionally, a comparison with a more recent MVAD(He et al. 2024c) method designed for multi-view anomaly detection is included.

As shown in Table 3, our MiniMaxAD-fr outperforms all comparative methods on FRADs. Specifically, in the multi-class benchmark, our method’s I-AUROC improves by 0.2↑/2.6↑ on the MVTecAD and VisA datasets, respectively, compared to MambaAD. On the mAD metric, we see an improvement of 0.1↑/3.6↑. When evaluated on the more challenging Real-IAD dataset, our mAD metrics are on par with MambaAD, both reaching 72.7. In the single-class Real-IAD benchmark, our method improves detection performance at the image level by 1.0↑/1.5↑/1.4↑ and the mAD metrics by 5.0↑ compared to MVAD, which is specifically

designed for multi-view settings. Additionally, the single-class GoodsAD further demonstrates the competitiveness of our method, achieving a 0.2↑/1.8↑ improvement in the two fundamental metrics, I-AUROC and AUPRO, compared to PatchCore. Furthermore, our method shows a significant efficiency advantage. These results fully demonstrate the validity and necessity of our approach. More detailed results are presented in the Appendix.

4.4 Ablation and Analysis

Comparison of the effectiveness of the model’s structural elements. Table 5 presents ablation studies on the Uni MVTecAD dataset for GRN and large kernel designs. Specifically, we pre-trained four encoders on a sampled version of ImageNet, ImageNet-100(Tian, Krishnan, and Isola 2019), and their validation set classification scores were nearly identical. Further details on the pre-training process are provided in Appendix. For the same architecture, models using GRN typically outperform those without GRN. Additionally, performance tends to decline and lacks significant comparability when the SarK Block is used as an encoder.

Comparison of loss functions applied to different types of datasets. A comprehensive ablation study is presented in Table 4, validating the effectiveness of the loss function and

		FRADs			FPADs	
		GoodsAD	Uni ViSA	Uni AeBAD-S&MVTecAD	AeBAD-S	ViSA
RD	RD + $\mathcal{L}_{global}$	66.5	92.7	76.2&89.6	81.0	96.0
	Ours + $\mathcal{L}_{local}$	80.1	93.0	84.3&97.1	85.1	93.8
	Ours + $\mathcal{L}_{local-hm}$	80.6	96.3	86.2&98.2	85.4	96.0
Ours-fp	Ours + $\mathcal{L}_{global}$	77.5	93.1	84.9&96.3	87.4	96.1
Ours-fr	Ours + $\mathcal{L}_{adc}$	86.1	96.9	87.2&98.4	83.9	95.6

Table 4: Ablation study on loss functions and dataset classification methods, measured in I-AUROC(%).

Encoder	Decoder	GRN	I-AUROC
LarK Block	LarK Block	✓	95.5
LarK Block	LarK Block	✗	94.5
LarK Block	SarK Block	✓	<u>94.7</u>
LarK Block	SarK Block	✗	93.7
SarK Block	LarK Block	✓	93.5
SarK Block	LarK Block	✗	93.8
SarK Block	SarK Block	✓	93.7
SarK Block	SarK Block	✗	93.5

Table 5: Ablation study on structural elements of the model.

Method	Params(M)	FLOPs(G)	FPS	mAD
RD	117.1	30.7	<u>665</u>	76.2
UniAD	24.5	3.6	188	74.6
SimpleNet	72.8	16.1	52	65.3
DiAD	1331.3	451.5	-	68.9
MambaAD	<u>25.7</u>	<u>8.3</u>	216	<u>79.1</u>
Ours	33.1	<u>7.0</u>	906	80.4

Table 6: Complexity comparison of SoTA methods. Frames Per Second (FPS) are measured on an NVIDIA RTX 4090 with a batch size of 16. mAD represents the mean value of mAD across the benchmark for the three multi-class settings.

dataset taxonomy. Compared to RD, MiniMaxAD+ $\mathcal{L}_{global}$ demonstrates a significant improvement in performance on FRADs and FPADs, affirming the suitability of large kernel convolutional networks with GRN units for the multi-scale reconstruction framework. Our asymptotic adaptive contraction strategy, which is tailored for FRADs based on $\mathcal{L}_{local}$, achieves optimal performance on FRADs. In contrast, the performance of MiniMaxAD+ $\mathcal{L}_{adc}$ is degraded compared to MiniMaxAD+ $\mathcal{L}_{global}$ on FPADs. The reason for this degradation is that while $\mathcal{L}_{adc}$ is based on $\mathcal{L}_{local}$ and offers certain advantages, it compromises global consistency to some extent (Guo et al. 2023). Specifically, easier-to-fit feature-poor anomaly detection datasets (FPADs) do not benefit from $\mathcal{L}_{adc}$, which relies on point-by-point distances, as these distances are more stringent compared to global distances. However, transforming FPADs into FRADs is straightforward. As reported in the third column of our table, we merged scenarios to unify AeBAD-S with MVTec AD for

training. Here we resize MVTec AD to 224×224 , other settings follow the default AeBAD-S. The results demonstrate that converting FPADs to FRADs using the unified setting in our methodology yields more gains than losses. The additional results in Table 1 further highlight the significant improvement in segmentation performance. Further ablation studies, experimental results, and qualitative visualizations are presented in the Appendix.

Complexity comparison of different SoTA models. Table 6 presents the detailed results of the complexity comparison. The architecture of MiniMaxAD inherits the high efficiency of the pure convolutional RD architecture while further reducing computational complexity. This enhancement significantly improves its throughput compared to other SoTA methods, providing a solid foundation for real-world implementation.

5 Conclusion

In this study, we revisit existing UAD datasets and categorize them into feature-rich anomaly detection datasets (FRADs) and feature-poor anomaly detection datasets (FPADs). We analyze the significant performance degradation of previous state-of-the-art (SoTA) methods when processing FRADs from the perspective of information capacity. To address this, we introduce MiniMaxAD, which enhances the “effective capacity” of the network by focusing on two key elements: feature diversity enhancement and large kernel convolution. These improvements allow for the efficient modeling of large amounts of information using smaller models. In addition, we introduce the hard mining loss ADCLoss, featuring a highly adaptive discard rate, to further enhance the model’s ability to handle FRADs. Extensive testing on a range of mature and challenging UAD datasets confirms the superiority of our approach, demonstrating its potential to advance the development of multi-scale reconstruction-based methods.

Limitation. In this work, we avoided incorporating additional optimizations, such as the simulation of anomalies or the migration of pre-trained encoders from specific domains, in order to maintain efficiency and scalability. Additionally, MiniMaxAD’s smaller boost in processing FPADs compared to RDs may be a limitation, but in our methodology, converting FPADs to FRADs using the unified setting is a superior option, which improves performance while significantly reducing storage.

References

- Batzner, K.; Heckler, L.; and König, R. 2023. EfficientAD: Accurate Visual Anomaly Detection at Millisecond-Level Latencies.
- Bergmann, P.; Fauser, M.; Sattlegger, D.; and Steger, C. 2019. MVTec AD - A Comprehensive Real-World Dataset for Unsupervised Anomaly Detection. In *IEEE Conference on Computer Vision and Pattern Recognition, CVPR 2019, Long Beach, CA, USA, June 16-20, 2019*, 9592–9600. Computer Vision Foundation / IEEE.
- Bergmann, P.; Fauser, M.; Sattlegger, D.; and Steger, C. 2020. Uninformed Students: Student-Teacher Anomaly Detection With Discriminative Latent Embeddings. In *2020 IEEE/CVF Conference on Computer Vision and Pattern Recognition, CVPR 2020, Seattle, WA, USA, June 13-19, 2020*, 4182–4191. IEEE.
- Cao, Y.; Wan, Q.; Shen, W.; and Gao, L. 2022. Informative knowledge distillation for image anomaly segmentation. *Knowledge-Based Systems*, 248: 108846.
- Cohen, N.; and Hoshen, Y. 2020. Sub-Image Anomaly Detection with Deep Pyramid Correspondences.
- Cohen, N.; Tzachor, I.; and Hoshen, Y. 2023. Set Features for Fine-Grained Anomaly Detection.
- Deng, H.; and Li, X. 2022. Anomaly Detection via Reverse Distillation from One-Class Embedding. In *IEEE/CVF Conference on Computer Vision and Pattern Recognition, CVPR 2022, New Orleans, LA, USA, June 18-24, 2022*, 9727–9736. IEEE.
- Ding, X.; Zhang, Y.; Ge, Y.; Zhao, S.; Song, L.; Yue, X.; and Shan, Y. 2023. UniRepLKNet: A Universal Perception Large-Kernel ConvNet for Audio, Video, Point Cloud, Time-Series and Image Recognition.
- Gu, A.; and Dao, T. 2023. Mamba: Linear-Time Sequence Modeling with Selective State Spaces. *ArXiv preprint*, abs/2312.00752.
- Gu, Z.; Liu, L.; Chen, X.; Yi, R.; Zhang, J.; Wang, Y.; Wang, C.; Shu, A.; Jiang, G.; and Ma, L. 2023. Remembering Normality: Memory-Guided Knowledge Distillation for Unsupervised Anomaly Detection. In *2023 IEEE/CVF International Conference on Computer Vision (ICCV)*, 16355–16363. Paris, France: IEEE. ISBN 9798350307184.
- Guo, J.; Lu, S.; Jia, L.; Zhang, W.; and Li, H. 2023. ReContrast: Domain-Specific Anomaly Detection via Contrastive Reconstruction. In Oh, A.; Neumann, T.; Globerson, A.; Saenko, K.; Hardt, M.; and Levine, S., eds., *Advances in Neural Information Processing Systems*, volume 36, 10721–10740. Curran Associates, Inc.
- He, H.; Bai, Y.; Zhang, J.; He, Q.; Chen, H.; Gan, Z.; Wang, C.; Li, X.; Tian, G.; and Xie, L. 2024a. MambaAD: Exploring State Space Models for Multi-class Unsupervised Anomaly Detection. *ArXiv preprint*, abs/2404.06564.
- He, H.; Zhang, J.; Chen, H.; Chen, X.; Li, Z.; Chen, X.; Wang, Y.; Wang, C.; and Xie, L. 2024b. A Diffusion-Based Framework for Multi-Class Anomaly Detection. In *Proceedings of the AAAI Conference on Artificial Intelligence*, volume 38, 8472–8480.
- He, H.; Zhang, J.; Tian, G.; Wang, C.; and Xie, L. 2024c. Learning Multi-View Anomaly Detection.
- Hinton, G.; Vinyals, O.; and Dean, J. 2015. Distilling the Knowledge in a Neural Network.
- Ishida, K.; Takena, Y.; Nota, Y.; Mochizuki, R.; Matsumura, I.; and Ohashi, G. 2023. SA-PatchCore: Anomaly Detection in Dataset With Co-Occurrence Relationships Using Self-Attention. *IEEE Access*, 11: 3232–3240.
- Liang, Y.; Zhang, J.; Zhao, S.; Wu, R.; Liu, Y.; and Pan, S. 2023. Omni-Frequency Channel-Selection Representations for Unsupervised Anomaly Detection. *IEEE Transactions on Image Processing*, 32: 4327–4340.
- Liu, Z.; Zhou, Y.; Xu, Y.; and Wang, Z. 2023. SimpleNet: A Simple Network for Image Anomaly Detection and Localization.
- Loshchilov, I.; and Hutter, F. 2019. Decoupled Weight Decay Regularization. In *7th International Conference on Learning Representations, ICLR 2019, New Orleans, LA, USA, May 6-9, 2019*. OpenReview.net.
- Napoletano, P.; Piccoli, F.; and Schettini, R. 2018. Anomaly Detection in Nanofibrous Materials by CNN-Based Self-Similarity. *Sensors*, 18(1): 209.
- Nazare, T. S.; de Mello, R. F.; and Ponti, M. A. 2018. Are Pre-Trained CNNs Good Feature Extractors for Anomaly Detection in Surveillance Videos?
- Roth, K.; Pemula, L.; Zepeda, J.; Schölkopf, B.; Brox, T.; and Gehler, P. 2021. Towards Total Recall in Industrial Anomaly Detection.
- Tian, Y.; Krishnan, D.; and Isola, P. 2019. Contrastive Multiview Coding. *ArXiv preprint*, abs/1906.05849.
- Tien, T. D.; Nguyen, A. T.; Tran, N. H.; Huy, T. D.; Duong, S. T.; Nguyen, C. D. T.; and Truong, S. Q. H. 2023. Revisiting Reverse Distillation for Anomaly Detection. In *2023 IEEE/CVF Conference on Computer Vision and Pattern Recognition (CVPR)*, 24511–24520.
- Wang, C.; Zhu, W.; Gao, B.-B.; Gan, Z.; Zhang, J.; Gu, Z.; Qian, S.; Chen, M.; and Ma, L. 2024. Real-IAD: A Real-World Multi-View Dataset for Benchmarking Versatile Industrial Anomaly Detection.
- Woo, S.; Debnath, S.; Hu, R.; Chen, X.; Liu, Z.; Kweon, I. S.; and Xie, S. 2023. ConvNeXt V2: Co-Designing and Scaling ConvNets With Masked Autoencoders. In *Proceedings of the IEEE/CVF Conference on Computer Vision and Pattern Recognition*, 16133–16142.
- Xiao, A.; Zhang, X.; Shao, L.; and Lu, S. 2023. A Survey of Label-Efficient Deep Learning for 3D Point Clouds.
- You, Z.; Cui, L.; Shen, Y.; Yang, K.; Lu, X.; Zheng, Y.; and Le, X. 2022. A Unified Model for Multi-Class Anomaly Detection.
- Zagoruyko, S.; and Komodakis, N. 2016. Wide Residual Networks. In Wilson, R. C.; Hancock, E. R.; and Smith, W. A. P., eds., *Proceedings of the British Machine Vision Conference 2016, BMVC 2016, York, UK, September 19-22, 2016*. BMVA Press.

Zavrtanik, V.; Kristan, M.; and Skocaj, D. 2021. DRÆM - A discriminatively trained reconstruction embedding for surface anomaly detection. In *2021 IEEE/CVF International Conference on Computer Vision, ICCV 2021, Montreal, QC, Canada, October 10-17, 2021*, 8310–8319. IEEE.

Zhang, J.; Chen, X.; Wang, Y.; Wang, C.; Liu, Y.; Li, X.; Yang, M.-H.; and Tao, D. 2023a. Exploring Plain ViT Reconstruction for Multi-Class Unsupervised Anomaly Detection.

Zhang, J.; Ding, R.; Ban, M.; and Dai, L. 2024. PKU-GoodsAD: A Supermarket Goods Dataset for Unsupervised Anomaly Detection and Segmentation. *IEEE Robotics and Automation Letters*, 9(3): 2008–2015.

Zhang, Z.; Zhao, Z.; Zhang, X.; Sun, C.; and Chen, X. 2023b. Industrial Anomaly Detection with Domain Shift: A Real-World Dataset and Masked Multi-Scale Reconstruction. *Computers in Industry*, 151(C).

Zou, Y.; Jeong, J.; Pemula, L.; Zhang, D.; and Dabeer, O. 2022. SPot-the-Difference Self-Supervised Pre-Training for Anomaly Detection and Segmentation.

A Datasets

Real-IAD is a large-scale, real-world, multi-view dataset for industrial anomaly detection. It comprises 30 different object categories, with 99,721 normal images and 51,329 abnormal images, making it more challenging than previous datasets. All images were resized to a uniform resolution of 256×256 .

MVTec AD is a widely recognized industrial anomaly detection dataset, comprising over 5,000 high-resolution images across fifteen distinct object and texture categories. Each category includes a set of defect-free training images and a test set featuring a range of defects as well as defect-free images. In our experiments, all images were resized to a uniform resolution of 256×256 .

VisA is a challenging anomaly detection dataset with 10,821 images across 12 subsets, each representing a different class of objects. The anomalies in these images include surface defects like scratches, dents, discoloration, or cracks, and structural defects such as misaligned or missing parts. We applied the unsupervised default settings (Zou et al. 2022) to segregate the training and test sets. In our experiments, all images were resized to a uniform resolution of 256×256 .

AeBAD-S shifts focus from the diversity of defect categories, as seen in datasets like MVTec AD and VisA, to the diversity of domains within the same category. AeBAD-S aims to enhance the automation of anomaly detection in aero-engine blades, crucial for their stable operation. This dataset features various scales of individual blade images, characterized by non-aligned samples and a domain shift between the normal sample distribution in the test set and that in the training set, primarily due to variations in illumination and viewing angles. We resized the images to 256×256 and then center-cropped them to 224×224 for our experiments.

GoodsAD includes 6,124 images across six categories of common supermarket goods, captured at a high resolution of 3000×3000 . Each image features a single item, typically centered, with anomalies occupying only a small fraction of the image pixels. In our experiments, all images were resized to a uniform resolution of 224×224 .

Block	GRN	Top-1 Acc.	Top-5 Acc.
LarK Block	✓	83.1	96.0
LarK Block	✗	82.9	95.9
SarK Block	✓	82.7	95.9
SarK Block	✗	82.5	95.9

Table 7: Score of the pre-trained encoder on the validation set.

B Additional Details

Data sources. The results for the comparison methods on AeBAD-S (Zhang et al. 2023b) and GoodsAD (Zhang et al. 2024) are partially from the original paper. The results of the MVTecAD, ViSA, and Real-IAD comparison tests in the multi-class setting were extracted from MambaAD (He et al. 2024a). Meanwhile, the comparison data for Real-IAD in

the single-class setting was partially taken from MVAD (He et al. 2024c). We are very grateful to the authors for conducting these detailed experiments.

Pre-trained encoder. We pre-trained four encoders on a subset of ImageNet, specifically ImageNet-100 (Tian, Krishnan, and Isola 2019). For the 100 categories in the training set, we randomly selected 100 images per category to form the validation set. Each of our models was trained for 50 epochs, and their validation set scores are presented in Table A1. At the model level, the LarK block refers to the original UniRepLKNNet-N architecture, where the large kernel block is the DilatedReparamBlock with a kernel size of 13. The SarK module, on the other hand, replaces the DilatedReparamBlock with a 3×3 depth-wise convolution.

C Additional Experiments and Analysis

C.1 Alignment Process in Entropy Perspective

A high variance indicates greater diversity and potential for capturing complex patterns or relationships. More directly, information entropy, which focuses on the entropic properties of probability distributions (i.e., the uncertainty associated with these distributions), provides a more direct measure of the data’s informational content. Firstly, we calculate the occurrence c_i of each feature f_i in the flattened feature maps $\mathcal{F}(f_E^k / \|f_E^k\|)$ and $\mathcal{F}(f_D^k / \|f_D^k\|)$, with a total count of N , where $N = C^k \times H^k \times W^k$. The probability of each feature f_i is then computed as:

$$p(f_i) = \frac{c_i}{N}$$

Subsequently, the entropy of the feature map is given by:

$$H(\mathcal{F}) = - \sum_{i=1}^n p(f_i) \log_2(p(f_i) + \epsilon)$$

where ϵ represents a very small positive number, n is the total number of different pixel values in feature maps. We calculated the mean of the entropy of the three layers of feature maps. The results depicted in Figure 5 demonstrate that, with the aid of the GRN unit, MiniMaxAD consistently generates feature maps that are richer in informative content. In contrast, the RD approach exhibits a trend towards degradation.

C.2 Additional Stability Experiments

The results in the main paper are reported with a single random seed following our baseline (Deng and Li 2022). In Tables 8 and 9, we report the mean and standard deviation of three runs with three different random seeds (1, 11 and 111) (Guo et al. 2023).

C.3 Additional Ablation Study

As shown in Table 11, we performed an ablation study of p_{hard} and p_{lim} in $\mathcal{L}_{adc}$. Intuitively, p_{hard} controls the decay rate and p_{lim} represents the lower limit of decay. The results show that $\mathcal{L}_{adc}$ has the most stable performance at $p_{lim} = 0.9995$, where its performance is less affected by changes in p_{hard} . In addition, our ablation experiments on $\mathcal{L}_{local-hm}$ in Table 10 show that fixed mining strategy yields unsatisfactory results.

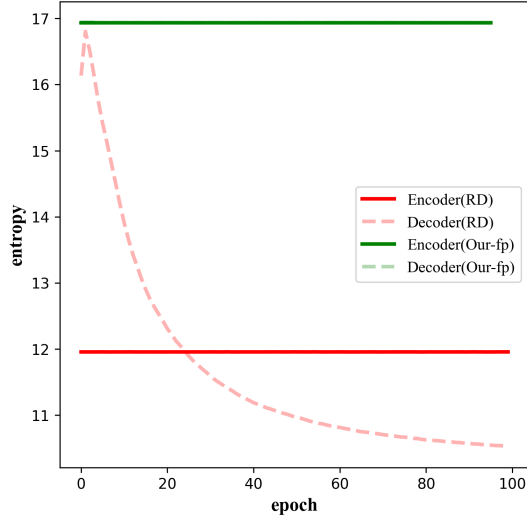


Figure 5: Feature alignment process of RD and MiniMaxAD when trained on *drink can*, viewed from the perspective of entropy, shows that the two green lines overlap.

	I-AUROC	AUPRO
Same	86.27 ± 0.45	78.47 ± 0.21
Background	89.03 ± 0.41	79.43 ± 0.42
Illumination	85.87 ± 0.68	83.73 ± 0.29
View	86.93 ± 0.54	76.27 ± 0.31
Average	87.03 ± 0.29	79.42 ± 0.29

Table 8: Performance on AeBAD-S over three runs.

D More Quantitative Results

More quantitative results on the GoodsAD dataset. Table 12 presents the image-level anomaly detection results and pixel-level anomaly localization quantitative results for all categories in the GoodsAD dataset under the separated single-class setting

More quantitative results on the MVTec-AD dataset. Table 13 and Tables 14 and 15 present the image-level anomaly detection results and pixel-level anomaly localization quantitative results, respectively, for all categories in the MVTec-AD dataset under the unified multi-class setting.

More quantitative results on the ViSA dataset. Table 16 and Tables 17 and 18 present the image-level anomaly detection results and pixel-level anomaly localization quantitative results, respectively, for all categories in the ViSA dataset under the unified multi-class setting.

More quantitative results on the Real-IAD dataset. Table 19, along with Tables 20 and 21, presents the image-level anomaly detection results and pixel-level anomaly localization quantitative results for all categories of the Real-IAD dataset under the unified multi-class setting. Similarly, Table 22, alongside Tables 23 and 24, provides the image-level

	I-AUROC	AUPRO
cigarette box	97.77 ± 0.34	85.77 ± 0.38
drink bottle	80.40 ± 0.33	86.80 ± 0.08
drink can	89.80 ± 0.41	87.00 ± 0.49
food bottle	91.20 ± 0.45	92.60 ± 0.16
food box	78.67 ± 0.96	84.03 ± 0.05
food package	76.50 ± 1.07	86.90 ± 0.29
Average	85.71 ± 0.23	87.2 ± 0.16

Table 9: Performance on GoodsAD over three runs.

p_{lim}	0.99	0.999	0.9995	0.9999
I-AUROC	77.9	81.5	80.6	77.3

Table 10: Ablation study on the values of p_{lim} in $\mathcal{L}_{local-hm}$ on GoodsAD .

anomaly detection results and pixel-level anomaly localization quantitative results for all categories of the Real-IAD dataset under the separated single-class setting.

E Qualitative Results

In Figure 6, we display anomaly maps for 14 samples from GoodsAD, and in Figure 7, we present anomaly maps for 11 samples each from Uni MVTec AD and Uni ViSA. To ensure that the visualization results effectively highlight the key qualities of the methods, we employed Min-Max normalization for all anomaly maps produced by the different methods.

p_{lim}	0.999			0.9995			9999		
p_{hard}	0.9995	0.9999	1	0.9995	0.9999	1	0.9995	0.9999	1
I-AUROC	85.5	85.9	85.9	86.1	86.1	85.8	85.7	85.4	85.3

Table 11: Ablation on the values of p_{hard} and p_{lim} in $\mathcal{L}_{adc}$ on GoodsAD.

	RD	SimpleNet	PatchCore	Our-fr
cigarette box	65.1/72.7	97.8/90.3	98.0/92.7	98.1/86.3
drink bottle	67.2/84.2	70.0/66.5	83.5/85.9	80.4/86.7
drink can	63.3/81.9	70.8/67.0	93.4/89.6	90.3/87.6
food bottle	76.6/84.3	78.1/75.0	89.1/88.9	91.8/92.8
food box	63.3/75.9	72.0/56.4	74.5/75.4	77.8/84.1
food package	63.5/79.4	63.2/57.8	77.0/81.6	77.9/87.2
Average	66.5/79.7	75.3/68.8	85.9/85.7	86.1/87.5

Table 12: Comparison with SoTA methods on MVTec-AD dataset for single-class anomaly detection and segmentation with I-AUROC/AUROC metrics.

Method→ Category↓	RD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
Bottle	99.6/99.9/98.4	99.7/ 100./100.	100./100./100.	99.7/96.5/91.8	100./100.	100./100./100.
Cable	84.1/89.5/82.5	95.2/95.9/88.0	97.5/98.5/94.7	94.8/98.8/95.2	98.8/99.2	99.2/99.6/96.3
Capsule	94.1/96.9/ 96.9	86.9/97.8/94.4	90.7/97.9/93.5	89.0/97.5/95.5	<u>94.4/98.7</u>	96.7/99.3/96.3
Hazelnut	60.8/69.8/86.4	99.8/ 100./99.3	99.9/99.9/99.3	99.5/99.7/97.3	100./100.	100./100./100.
MetalNut	100./100./99.5	99.2/99.9/ <u>99.5</u>	96.9/99.3/96.1	99.1/96.0/91.6	99.9/ 100.	100./100./100.
Pill	<u>97.5/99.6/96.8</u>	93.7/98.7/95.7	88.2/97.7/92.5	95.7/98.5/94.5	97.0/99.5	97.7/99.6/97.9
Screw	97.7/99.3/95.8	87.5/96.5/89.0	76.7/90.6/87.7	90.7/ 99.7/97.9	94.7/97.9	<u>95.6/98.6/94.0</u>
Toothbrush	97.2/99.0/94.7	94.2/97.4/95.2	89.7/95.7/92.3	99.7/99.9/99.2	98.3/99.3	<u>98.6/99.5/96.8</u>
Transistor	94.2/95.2/90.0	99.8/98.0/93.8	99.2/98.7/97.6	99.8/99.6/97.4	100./100.	98.2/97.7/91.1
Zipper	99.5/99.9/99.2	95.8/99.5/97.1	99.0/99.7/98.3	95.1/99.1/94.4	99.3/99.8	99.5/99.9/98.7
Carpet	98.5/99.6/97.2	99.8/99.9/99.4	95.7/98.7/93.2	99.4/ 99.9/98.3	99.8/99.9	99.6/ 99.9/98.9
Grid	98.0/99.4/96.5	98.2/99.5/97.3	97.6/99.2/96.4	<u>98.5/99.8/97.7</u>	100./100.	98.1/99.5/ <u>98.2</u>
Leather	100./100./100.	100./100./100.	100./100./100.	99.8/99.7/97.6	100./100.	100./100./100.
Tile	98.3/99.3/96.4	99.3/99.8/98.2	<u>99.3/99.8/98.8</u>	96.8/99.9/98.4	98.2/99.3	100./100./100.
Wood	<u>99.2/99.8/98.3</u>	98.6/99.6/96.6	98.4/99.5/96.7	99.7/100./100.	98.8/99.6	<u>99.2/99.8/97.5</u>
Mean	94.6/96.5/95.2	96.5/98.8/96.2	95.3/98.4/95.8	97.2/99.0/96.5	<u>98.6/99.6</u>	98.8/99.6/97.7

Table 13: Comparison with SoTA methods on MVTec-AD dataset for multi-class anomaly detection with AUROC/AP/F1_max metrics.

Method→ Category↓	RD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
Bottle	97.8 /68.2	98.1 /66.0	97.2 /53.8	<u>98.4/52.2</u>	98.8 /79.7	97.8 / <u>75.4</u>
Cable	85.1 /26.3	97.3 /39.9	96.7 /42.4	<u>96.8/50.1</u>	95.8 /42.2	95.1 / <u>48.4</u>
Capsule	98.8 /43.4	98.5/42.7	<u>98.5/5.4</u>	97.1 /42.0	98.4 /43.9	96.5 / 47.2
Hazelnut	97.9 /36.2	98.1 /55.2	98.4 /44.6	98.3 / 79.2	99.0 /63.6	98.8/69.0
MetalNut	94.8 /55.5	62.7 /14.6	98.0 /83.1	<u>97.3/30.0</u>	96.7 / <u>74.5</u>	91.9 /61.8
Pill	97.5 /63.4	95.0 /44.0	96.5 / 72.4	95.7 /46.0	<u>97.4/64.0</u>	96.1 / <u>65.1</u>
Screw	<u>99.4/40.2</u>	98.3 /28.7	96.5 /15.9	97.9 / 60.6	99.5 /49.8	98.8 /49.5
Toothbrush	<u>99.0/53.6</u>	98.4 /34.9	98.4 /46.9	<u>99.0/78.7</u>	<u>99.0/48.5</u>	99.2 /68.8
Transistor	85.9 /42.3	97.9 / <u>59.5</u>	95.8 /58.2	95.1 /15.6	<u>96.5/69.4</u>	83.7 /45.4
Zipper	98.5 /53.9	96.8 /40.1	97.9 /53.4	96.2 / 60.7	<u>98.4/60.4</u>	97.4 /60.3
Carpet	<u>99.0/58.5</u>	98.5 /49.9	97.4 /38.7	98.6 /42.2	99.2 / <u>60.0</u>	<u>99.0/70.2</u>
Grid	96.5 /23.0	63.1 /0.7	96.8 /20.5	96.6 / 66.0	99.2 /47.4	<u>98.0/53.6</u>
Leather	<u>99.3/38.0</u>	98.8 /32.9	98.7 /28.5	98.8 / 56.1	99.4 / <u>50.3</u>	99.2 /43.6
Tile	95.3 /48.5	91.8 /42.1	95.7 /60.5	92.4 / 65.7	93.8 /45.1	95.6/62.4
Wood	95.3 / <u>47.8</u>	93.2 /37.2	91.4 /34.8	93.3 /43.3	94.4 /46.2	<u>94.7/56.7</u>
Mean	96.1 /48.6	96.8 /43.4	<u>96.9/45.9</u>	96.8 /52.6	97.7 / <u>56.3</u>	96.1 / 58.5

Table 14: Comparison with SoTA methods on MVTec-AD dataset for multi-class anomaly localization with AUROC/AP metrics.

Method→ Category↓	RD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
Bottle	67.6 /94.0	69.2 /93.1	62.4 /89.0	54.8 /86.6	76.7 /95.2	73.2/95.0
Cable	33.6 /75.1	45.2 /86.1	<u>51.2/85.4</u>	57.8 /80.5	48.1 / 90.3	50.9 / <u>86.3</u>
Capsule	<u>50.0/94.8</u>	46.5 /92.1	44.3 /84.5	45.3 /87.2	47.7 /92.6	52.3 / <u>93.2</u>
Hazelnut	51.6 /92.7	56.8 /94.1	51.4 /87.4	80.4 /91.5	64.4 / <u>95.7</u>	<u>66.2/96.6</u>
MetalNut	66.4 / <u>91.9</u>	29.2 /81.8	79.4 /85.2	38.3 /90.6	<u>79.1/93.7</u>	61.4 /91.5
Pill	65.2 / 95.8	53.9 /95.3	67.7 /81.9	51.4 /89.0	<u>66.5/95.7</u>	66.1 /94.2
Screw	44.6 / <u>96.8</u>	37.6 /95.2	23.2 /84.0	59.6 /95.0	50.9 / 97.1	51.2/95.0
Toothbrush	58.8 /92.0	45.7 /87.9	52.5 /87.4	72.8 /95.0	59.2 /91.7	<u>67.4/94.1</u>
Transistor	45.2 /74.7	<u>64.6/93.5</u>	56.0 /83.2	31.7 / <u>90.0</u>	67.1 /87.0	47.7 /74.8
Zipper	60.3 / <u>94.1</u>	49.9 /92.6	54.6 /90.7	60.0 /91.6	61.7 /94.3	61.7 /92.7
Carpet	60.4 /95.1	51.1 /94.4	43.2 /90.6	46.4 /90.6	<u>63.3/96.7</u>	67.7 / <u>96.4</u>
Grid	28.4 / 97.0	1.9 /92.9	27.6 /88.6	64.1 /94.0	47.7 / 97.0	52.9/94.3
Leather	45.1 /97.4	34.4 /96.8	32.9 /92.7	62.3 /91.3	<u>53.3/98.7</u>	49.9 / <u>97.7</u>
Tile	60.5 /85.8	50.6 /78.4	59.9 / <u>90.6</u>	<u>64.1/90.7</u>	54.8 /80.0	67.3 /88.8
Wood	<u>51.0/90.0</u>	41.5 /86.7	39.7 /76.3	43.5 / 97.5	48.2 /91.2	57.0 / <u>92.1</u>
Mean	53.8 /91.1	49.5 /90.7	49.7 /86.5	55.5 /90.7	<u>59.2/93.1</u>	59.5 / <u>92.2</u>

Table 15: Comparison with SoTA methods on MVTec-AD dataset for multi-class anomaly localization with F1_max/AUPRO metrics.

Method→ Category↓	RD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
pcb1	96.2 /95.5/91.9	92.8/92.7/87.8	91.6/91.9/86.0	88.1 /88.7 /80.7	95.4 /93.0 /91.6	98.0 /97.8 /95.1
pcb2	97.8 /97.8 /94.2	87.8/87.7/83.1	92.4/93.3/84.5	91.4 /91.4 /84.7	94.2 /93.7 /89.3	97.1/97.1/93.0
pcb3	96.4 /96.2/91.0	78.6/78.6/76.1	89.1/91.1/82.6	86.2 /87.6 /77.6	93.7 /94.1 /86.7	97.8 /97.7 /94.5
pcb4	99.9 /99.9 /99.0	98.8/98.8/94.3	97.0/97.0/93.5	99.6 /99.5 /97.0	99.9 /99.9 /98.5	99.8 /99.8 /98.5
macaroni1	75.9 /61.5 /76.8	79.9/79.8/72.7	85.9/82.5/73.1	85.7 /85.2 /78.8	91.6/89.8/81.6	98.6 /98.5 /95.6
macaroni2	88.3 /84.5/83.8	71.6/71.6/69.9	68.3/54.3/59.7	62.5 /57.4 /69.6	81.6 /78.0 /73.8	88.9 /85.4 /85.2
capsules	82.2 /90.4 /81.3	55.6/55.6/76.9	74.1/82.8/74.6	58.2 /69.0 /78.5	91.8 /95.0 /88.8	91.1/94.9/88.9
candle	92.3 /92.9 /86.0	94.1/94.0/86.1	84.1/73.3/76.6	92.8 /92.0 /87.6	96.8/96.9/90.1	98.9 /98.9 /94.1
cashew	92.0 /95.8 /90.7	92.8/92.8/91.4	88.0/91.3/84.7	91.5 /95.7 /89.7	94.5/97.3/91.1	97.6 /98.8 /94.7
chewinggum	94.9 /97.5 /92.1	96.3/96.2/95.2	96.4/98.2/93.8	99.1/99.5/95.9	97.7 /98.9 /94.2	99.0/99.6 /97.5
fryum	95.3 /97.9/91.5	83.0/83.0/85.0	88.4/93.0/83.3	89.8 /95.0 /87.2	95.2 /97.7 /90.5	96.6 /98.4 /93.8
pipe.fryum	97.9 /98.9 /96.5	94.7/94.7/93.9	90.8/95.5/88.6	96.2 /98.1 /93.7	98.7/99.3/97.0	99.7 /99.9 /98.0
Mean	92.4 /92.4 /89.6	85.5/85.5/84.4	87.2/87.0/81.8	86.8 /88.3 /85.1	94.3/94.5/89.4	96.9 /97.2 /94.1

Table 16: Comparison with SoTA methods on VisA dataset for multi-class anomaly detection with AUROC/AP/F1_max metrics.

Method→ Category↓	RD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
pcb1	99.4/66.2	93.3 /3.9	99.2 / 86.1	98.7 /49.6	99.8 /77.1	99.0 /79.0
pcb2	98.0/22.3	93.9 /4.2	96.6 /8.9	95.2 /7.5	98.9 /13.3	97.1 / 36.6
pcb3	97.9 /26.2	97.3 /13.8	97.2 /31.0	96.7 /8.0	99.1 /18.3	98.9/ 39.6
pcb4	97.8 /31.4	94.9 /14.7	93.9 /23.9	97.0 /17.6	98.6 /47.0	98.2/ 54.5
macaroni1	99.4/2.9	97.4 /3.7	98.9 /3.5	94.1 /10.2	99.5 /17.5	99.4/ 42.5
macaroni2	99.7 /13.2	95.2 /0.9	93.2 /0.6	93.6 /0.9	99.5/9.2	98.9 / 29.1
capsules	99.4 /60.4	88.7 /3.0	97.1 /52.9	97.3 /10.0	99.1/61.3	98.3 / 64.1
candle	99.1 /25.3	98.5 /17.6	97.6 /8.4	97.3 /12.8	99.0/23.2	98.3 / 34.2
cashew	91.7 /44.2	98.6/51.7	98.9/68.9	90.9 /53.1	94.3 /46.8	90.2 /40.9
chewinggum	98.7/59.9	98.8 /54.9	97.9 /26.8	94.7 /11.9	98.1 /57.5	97.8 / 65.6
fryum	97.0/47.6	95.9 /34.0	93.0 /39.1	97.6/58.6	96.9 /47.8	94.7 /45.7
pipe.fryum	99.1/56.8	98.9 /50.2	98.5 /65.6	99.4/72.7	99.1/53.5	98.2 /51.2
Mean	98.1/38.0	95.9 /21.0	96.8 /34.7	96.0 /26.1	98.5 /39.4	97.4 / 48.6

Table 17: Comparison with SoTA methods on VisA dataset for multi-class anomaly localization with AUROC/AP metrics.

Method→ Category↓	RD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
pcb1	62.4 / 95.8	8.3 /64.1	78.8 /83.6	52.8 /80.2	72.4 /92.8	73.3/87.8
pcb2	30.0/ 90.8	9.2 /66.9	18.6 /85.7	16.7 /67.0	23.4 /89.6	41.6 /82.8
pcb3	35.2 / 93.9	21.9/70.6	36.1/85.1	18.8 /68.9	27.4 /89.1	40.0 /93.0
pcb4	37.0 /88.7	22.9/72.3	32.9 /61.1	27.2 /85.0	46.9/87.6	54.8 /91.8
macaroni1	6.9 /95.3	9.7 /84.0	8.4 /92.0	16.7 /68.5	27.6/95.2	45.4 /95.4
macaroni2	21.8/ 97.4	4.3 /76.6	3.9 /77.8	2.8 /73.1	16.1 /96.2	38.7 /97.0
capsules	60.8/93.1	7.4 /43.7	53.3 /73.7	21.0 /77.9	59.8 /91.8	63.4 /94.5
candle	35.8/94.9	27.9/91.6	16.5 /87.6	22.8 /89.4	32.4 / 95.5	42.1 /90.6
cashew	49.7 /86.2	58.3/ 87.9	66.0 /84.1	60.9/61.8	51.4 /87.8	47.3 /85.8
chewinggum	61.7/76.9	56.1/ 81.3	29.8 /78.3	25.8 /59.5	59.9 /79.7	65.9 /79.5
fryum	51.5 / 93.4	40.6/76.2	45.4 /85.1	60.1 /81.3	51.9/91.6	48.5 /89.3
pipe.fryum	58.8 / 95.4	57.7/91.5	63.4/83.0	69.9 /89.9	58.5 /95.1	56.5 /93.7
Mean	42.6 / 91.8	27.0/75.6	37.8 /81.4	33.0 /75.2	44.0/91.0	51.5 /90.1

Table 18: Comparison with SoTA methods on VisA dataset for multi-class anomaly localization with F1_max/AUPRO metrics.

Method→ Category↓	RD4AD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
audiojack	76.2 /63.2 /60.8	81.4 / <u>76.6</u> /64.9	58.4/44.2/50.9	76.5 /54.3 /65.7	<u>84.2</u> /76.5 /67.4	86.5 /82.8 /71.1
bottle cap	89.5 /86.3 /81.0	92.5/91.7 /81.7	54.1/47.6/60.3	91.6 / 94.0 / 87.9	92.8 /92.0/82.1	87.5 /85.9 /78.7
button battery	73.3 /78.9 /76.1	75.9 /81.6 / <u>76.3</u>	52.5/60.5/72.4	80.5 /71.3 /70.6	<u>79.8</u> / 85.3 / 77.8	76.8 / <u>83.6</u> /75.8
end cap	79.8 /84.0/77.8	80.9/ 86.1 /78.0	51.6/60.8/72.9	85.1 /83.4 / 84.8	78.0 /82.8 /77.2	78.1 /83.3 /76.4
eraser	90.0/88.7/79.7	90.3 /89.2 /80.2	46.4/39.1/55.8	80.0 /80.0 /77.3	87.5 /86.2 /76.1	88.1 /88.1 /78.2
fire hood	78.3 /70.1 /64.5	80.6 /74.8 /66.4	58.1/41.9/54.4	<u>83.3</u> / 81.7 / 80.5	79.3 /72.5 /64.8	83.4 /78.1/68.8
mint	65.8 /63.1 /64.8	67.0 /66.6 /64.6	52.4/50.3/63.7	76.7 / 76.7 / 76.0	70.1 /70.8 /65.5	<u>72.9</u> / <u>73.9</u> / <u>66.5</u>
mounts	88.6 /79.9 /74.8	87.6/77.3 / <u>77.2</u>	58.7/48.1/52.4	75.3 /74.5 / 82.5	86.8 /78.0 /73.5	84.5 /79.2/72.1
pcb	79.5 /85.8 /79.7	81.0 /88.2 /79.1	54.5/66.0/75.5	86.0 /85.1 / 85.4	89.1 / 93.7 /84.0	<u>86.4</u> /91.4/82.3
phone battery	87.5 /83.3 / <u>77.1</u>	83.6 /80.0 /71.6	51.6/43.8/58.0	82.3 /77.7 /75.9	90.2 / 88.9 / 80.5	88.1/86.7/76.4
plastic nut	80.3 /68.0 /64.4	80.0 /69.2 /63.7	59.2/40.3/51.8	71.9 /58.2 /65.6	87.1 / 80.7 / 70.7	<u>81.8</u> /75.8/66.2
plastic plug	81.9 /74.3 /68.8	81.4 /75.9 /67.6	48.2/38.4/54.6	88.7 / 89.2 / 90.9	<u>85.7</u> / <u>82.2</u> / <u>72.6</u>	81.6 /75.7 /67.3
porcelain doll	86.3/76.3 /71.5	85.1 /75.2 /69.3	66.3/54.5/52.1	72.6 /66.8 /65.2	88.0 / 82.2 / 74.1	84.4 /80.1/70.3
regulator	66.9 /48.8 /47.7	56.9 /41.5 /44.5	50.5/29.0/43.9	<u>72.1</u> / 71.4 / 78.2	69.7 /58.7 /50.4	<u>73.5</u> / <u>64.5</u> / <u>55.5</u>
rolled strip base	97.5 /98.7 /94.7	98.7 /99.3 /96.5	59.0/75.7/79.8	68.4 /55.9 /56.8	<u>98.0</u> / <u>99.0</u> / <u>95.0</u>	97.5 /98.8 /94.3
sim card set	91.6 /91.8 /84.8	89.7 /90.3 /83.2	63.1/69.7/70.8	72.6 /53.7 /61.5	94.4 / 95.1 / <u>87.2</u>	<u>93.8</u> / <u>94.6</u> / 87.5
switch	84.3 /87.2 /77.9	<u>85.5</u> /88.6/78.4	62.2/66.8/68.6	73.4 /49.4 /61.2	91.7 / 94.0 / 85.4	85.5/86.0 /78.4
tape	96.0 /95.1 /87.6	97.2 /96.2 /89.4	49.9/41.1/54.5	73.9 /57.8 /66.1	<u>96.8</u> / <u>95.9</u> / <u>89.3</u>	95.3 /94.9 /89.3
terminalblock	89.4/89.7/83.1	87.5 /89.1 /81.0	59.8/64.7/68.8	62.1 /36.4 /47.8	96.1 / 96.8 / 90.0	86.9 /89.1 /79.9
toothbrush	82.0 /83.8 /77.2	78.4 /80.1 /75.6	65.9/70.0/70.1	91.2 / 93.7 / 90.9	85.1 /86.2 /80.3	87.1/89.3/81.4
toy	69.4 /74.2 /75.9	68.4 /75.1 /74.8	57.8/64.4/73.4	66.2 /57.3 /59.8	83.0 / 87.5 / 79.6	<u>79.1</u> / <u>83.9</u> / <u>77.7</u>
toy brick	63.6 /56.1 /59.0	<u>77.0</u> / <u>71.1</u> / <u>66.2</u>	58.3/49.7/58.2	68.4 /45.3 /55.9	70.5 /63.7 /61.6	77.2 / 72.2 / 66.4
transistor1	91.0 /94.0 /85.1	93.7 / <u>95.9</u> / <u>88.9</u>	62.2/69.2/72.1	73.1 /63.1 /62.7	94.4 / 96.0 / 89.0	94.1/95.8 /88.8
u block	89.5 /85.0 /74.2	88.8 /84.2 / <u>75.5</u>	62.4/48.4/51.8	75.2 /68.4 /67.9	<u>89.7</u> / <u>85.7</u> / <u>75.3</u>	89.8 / 90.3 / 81.3
usb	84.9/84.3/75.1	78.7 /79.4 /69.1	57.0/55.3/62.9	58.9 /37.4 /45.7	92.0 / 92.2 / 84.5	78.7 /75.2 /66.4
usb adaptor	71.1 /61.4 /62.2	76.8 /71.3 /64.9	47.5/38.4/56.5	76.9 /60.2 / <u>67.2</u>	<u>79.4</u> /76.0/66.3	85.0 / 81.8 / 72.3
vcpill	85.1 /80.3 /72.4	87.1 /84.0 /74.7	59.0/48.7/56.4	64.1 /40.4 /56.2	<u>88.3</u> / <u>87.7</u> / <u>77.4</u>	89.3 / 88.4 / 78.1
wooden beads	81.2 /78.9 /70.9	78.4 /77.2 /67.8	55.1/52.0/60.2	62.1 /56.4 /65.9	<u>82.5</u> / <u>81.7</u> / <u>71.8</u>	84.0 / 83.5 / 72.4
woodstick	76.9 /61.2 /58.1	80.8 / 72.6 / 63.6	58.2/35.6/45.2	74.1 /66.0 /62.1	80.4/69.0 /63.4	79.4 /69.4/61.4
zipper	95.3 /97.2 /91.2	<u>98.2</u> / <u>98.9</u> / <u>95.3</u>	77.2/86.7/77.6	86.0 /87.0 /84.0	99.2 / 99.6 / 96.9	97.9 /98.8 /93.9
Mean	82.4 /79.0 /73.9	83.0 /80.9 /74.3	57.2/53.4/61.5	75.6 /66.4 /69.9	86.3 / 84.6 / 77.0	<u>85.1</u> / <u>84.1</u> / <u>75.8</u>

Table 19: Comparison with SoTA methods on Real-IAD dataset for multi-class anomaly detection with AUROC/AP/F1_max metrics.

Method→ Category↓	RD4AD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
audiojack	96.6/12.8	97.6/20.0	74.4/0.9	95.5/25.4	97.7/21.6	98.2/41.4
bottle cap	99.5/18.9	99.5/19.4	85.3/2.3	94.5/25.3	99.7/30.6	99.1/30.1
button battery	97.6/33.8	96.7/28.5	75.9/3.2	98.3/63.9	98.1/46.7	97.3/52.8
end cap	96.7/12.5	95.8/8.8	63.1/0.5	89.6/14.4	97.0/12.0	95.1/19.0
eraser	99.5/30.8	99.3/24.4	80.6/2.7	95.8/52.7	99.2/30.2	98.4/40.9
fire hood	98.9/27.7	98.6/23.4	70.5/0.3	97.3/27.1	98.7/25.1	98.3/35.4
mint	95.0/11.7	94.4/7.7	79.9/0.9	84.1/10.3	96.5/15.9	92.8/23.7
mounts	99.3/30.6	99.4/28.0	80.5/2.2	94.2/30.0	99.2/31.4	98.2/39.3
pcb	97.5/15.8	97.0/18.5	78.0/1.4	97.2/37.1	99.2/46.3	98.4/49.9
phone battery	77.3/22.6	85.5/11.2	43.4/0.1	79.5/25.6	99.4/36.3	94.6/31.8
plastic nut	98.8/21.1	98.4/20.6	77.4/0.6	96.5/44.8	99.4/33.1	97.5/29.8
plastic plug	99.1/20.5	98.6/17.4	78.6/0.7	91.9/20.1	99.0/24.2	97.4/25.4
porcelain doll	99.2/24.8	98.7/14.1	81.8/2.0	93.1/35.9	99.2/31.3	97.8/35.0
regulator	98.0/7.8	95.5/9.1	76.6/0.1	88.8/18.9	97.6/20.6	95.2/24.8
rolled strip base	99.7/31.4	99.6/20.7	80.5/1.7	99.2/48.7	99.7/37.4	99.4/36.0
sim card set	98.5/40.2	97.9/31.6	71.0/6.8	99.1/65.5	98.8/51.1	97.3/49.8
switch	94.4/18.9	98.1/33.8	71.7/3.7	97.4/57.6	98.2/39.9	94.5/37.8
tape	99.7/42.4	99.7/29.2	77.5/1.2	99.0/61.7	99.8/47.1	98.9/47.3
terminalblock	99.5/27.4	99.2/23.1	87.0/0.8	96.6/40.6	99.8/35.3	98.2/42.0
toothbrush	96.9/26.1	95.7/16.4	84.7/7.2	94.3/30.0	97.5/27.8	95.4/35.0
toy	95.2/5.1	93.4/4.6	67.7/0.1	86.3/8.1	96.0/16.4	91.4/18.3
toy brick	96.4/16.0	97.4/17.1	86.5/5.2	94.7/24.6	96.6/18.0	97.2/30.8
transistor1	99.1/29.6	98.9/25.6	71.7/5.1	97.3/43.8	99.4/39.4	98.0/43.3
u block	99.6/40.5	99.3/22.3	76.2/4.8	96.9/57.1	99.5/37.8	98.1/40.6
usb	98.1/26.4	97.9/20.6	81.1/1.5	98.4/42.2	99.2/39.1	95.2/21.5
usb adaptor	94.5/9.8	96.6/10.5	67.9/0.2	94.9/25.5	97.3/15.3	98.1/33.7
vc pill	98.3/43.1	99.1/40.7	68.2/1.1	97.1/64.7	98.7/50.2	97.9/44.1
wooden beads	98.0/27.1	97.6/16.5	68.1/2.4	94.7/38.9	98.0/32.6	97.0/28.1
woodstick	97.8/30.7	94.0/36.2	76.1/1.4	97.9/60.3	97.7/40.1	94.8/44.8
zipper	99.1/44.7	98.4/32.5	89.9/23.	98.2/35.3	99.3/58.2	98.1/47.7
Mean	97.3/25.0	97.3/21.1	75.7/2.8	94.6/37.9	98.5/33.0	96.9/36.0

Table 20: Comparison with SoTA methods on Real-IAD dataset for multi-class anomaly localization with AUROC/AP metrics.

Method→ Category↓	RD4AD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	DiAD AAAI'24	MambaAD Arxiv'24	MMAD-fr Ours
audiojack	22.1/79.6	31.0/83.7	4.8 /38.0	31.9/52.6	29.5 /83.9	47.1 /89.4
bottle cap	29.9/95.7	29.6/96.0	5.7 /45.1	31.1 /25.3	34.6 /97.2	<u>34.2</u> /94.9
button battery	37.8/86.5	34.4/77.5	6.6 /40.5	60.4 /36.9	49.5 /86.2	<u>53.7</u> / 88.2
end cap	22.5/89.2	17.4/85.4	2.8 /25.7	<u>22.7</u> /29.5	19.6 / 89.4	27.5 /86.1
eraser	36.7/ 96.0	30.9/94.1	7.1 /42.8	53.9 /46.7	38.3 /93.7	<u>45.8</u> /90.6
fire hood	35.2/87.9	32.2/85.3	2.2 /25.3	<u>35.3</u> /34.7	31.3 /86.3	41.8 / 90.5
mint	23.0/72.3	18.1/62.3	3.6 /43.3	<u>22.4</u> /9.9	<u>27.0</u> /72.6	33.0 / 76.7
mounts	37.1/94.9	32.8/ 95.2	6.8 /46.1	<u>41.3</u> /43.3	35.4 /93.5	43.5 /92.5
pcb	24.3/88.3	28.1/81.6	4.3 /41.3	40.4 /48.8	<u>50.4</u> / 93.1	53.1 /91.1
phone battery	31.7/94.5	21.6/88.5	0.9 /11.8	33.8 /39.5	41.3 / 95.3	<u>40.2</u> /90.4
plastic nut	29.6/91.0	27.1/88.9	3.6 /41.5	45.7 /38.4	<u>37.3</u> / 96.1	36.1 /88.0
plastic plug	28.4/ 94.9	26.1/90.3	1.9 /38.8	27.3 /21.0	<u>31.7</u> /91.5	32.4 /89.4
porcelain doll	34.6/ 95.7	24.5/93.2	6.4 /47.0	<u>40.3</u> /24.8	<u>36.6</u> /95.4	42.5 /91.5
regulator	16.1/ 88.6	17.4/76.1	0.6 /38.1	23.6 /17.5	<u>29.8</u> / <u>87.0</u>	37.3 /79.0
rolled strip base	39.9/98.4	32.2/97.8	5.1 /52.1	50.1 /55.5	42.5 / 98.8	<u>43.5</u> /97.5
sim card set	44.2/ 89.5	39.8/85.0	14.3/30.8	62.1 /73.9	<u>50.6</u> /89.4	49.8 /87.4
switch	26.6/90.9	40.6/90.7	9.3 /44.2	55.6 /44.7	45.4 / 92.9	<u>46.0</u> /88.2
tape	47.8/ 98.4	36.9/97.5	3.9 /41.4	57.6 /48.2	48.2 /98.0	<u>50.1</u> /96.1
terminalblock	35.8/97.6	30.5/94.4	3.6 /54.8	44.1/34.8	39.7 / 98.2	46.2 /95.2
toothbrush	34.2/88.7	25.3/84.3	14.8/52.6	<u>37.3</u> /42.8	36.7 / 91.4	41.8 /87.1
toy	12.8/82.3	12.4/70.5	0.4 /25.0	15.9 /16.4	<u>25.8</u> / 86.3	27.3 / <u>82.7</u>
toy brick	24.6/75.3	27.6/ <u>81.3</u>	11.1/56.3	<u>30.8</u> /45.5	25.8 /74.7	37.7 / 86.0
transistor1	35.5/95.1	33.2/94.3	11.3/35.3	<u>44.5</u> /45.4	40.0 / 96.5	44.6 /91.7
u block	45.2/ 96.9	29.6/94.3	12.2/34.0	55.7 /38.5	46.1 /95.4	48.0 /91.8
usb	35.2/91.0	31.7/85.3	4.9 /52.4	47.7 /57.1	<u>44.4</u> / 95.2	29.7 /80.0
usb adaptor	17.9/73.1	19.0/78.4	1.3 /28.9	<u>34.9</u> /36.4	<u>22.6</u> /82.5	42.4 / 90.3
vcpill	48.6/88.7	43.0/ 91.3	3.3 /22.0	62.3 /42.3	<u>54.5</u> / <u>89.3</u>	49.7 /89.1
wooden beads	34.7/ 85.7	23.6/84.6	6.0 /28.3	42.9 /39.4	<u>39.8</u> /84.5	35.1 / 85.7
woodstick	38.4/ 85.0	44.3/77.2	6.0 /32.0	60.0 /51.0	44.9 /82.7	50.4 /81.2
zipper	50.2/ <u>96.3</u>	36.1/95.1	31.2/55.5	39.0 /78.5	61.3 / 97.6	<u>52.7</u> /95.8
Mean	32.7/89.6	29.2/86.7	6.5 /39.0	<u>41.7</u> /40.6	38.7 / 90.5	42.1 /88.8

Table 21: Comparison with SoTA methods on Real-IAD dataset for multi-class anomaly localization with F1_max/AUPRO metrics.

Method→ Category↓	RD4AD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	PatchCore AAAI'24	MVAD Arxiv'24	MMAD-fr Ours
audiojack	83.4 /78.0 /66.6	78.7/60.8/64.0	<u>88.4/84.4 /74.7</u>	87.6 /85.0/75.2	86.9 /82.5 /70.6	92.1 /89.3 /80.4
bottle cap	96.3 /96.3 /89.0	85.6/82.6/74.9	91.1 /88.6 /83.0	95.3 /95.0 /86.2	<u>95.6/95.4/87.0</u>	94.5 /94.2 /85.7
button battery	88.6 /91.3 /82.9	65.9/71.9/74.6	88.4 /89.9 /83.5	88.5 /90.8 /84.0	90.8 /92.1/86.8	90.8 /92.6 /85.8
end cap	82.9 /86.9 /80.0	80.6/84.4/78.3	83.7 /88.4 /79.5	86.9 /90.0 /82.3	85.8 /88.8 /81.8	86.6/89.2/ 82.5
eraser	91.8 /91.2 /82.0	87.9/82.4/75.5	91.6 /90.1 /80.1	93.9 /92.8/83.2	91.2 /89.2 /79.7	93.8/ 92.9 /83.6
fire hood	<u>85.8/78.1 /72.5</u>	79.0/72.3/65.0	81.7 /74.1 /67.4	<u>85.3 /80.2/72.8</u>	84.6 /77.2 /69.8	87.2 /81.9 /74.1
mint	75.7 /77.1 /68.3	64.5/63.8/63.9	77.0 /78.5 /68.5	75.5 /77.8 /67.4	<u>79.5/80.7/70.8</u>	80.9 /82.3 /71.4
mounts	87.4 /75.3 /76.4	84.1/71.2/71.0	88.2 /79.1 /76.3	87.2 /73.2 /77.4	<u>87.9/75.6 /77.3</u>	87.4 /75.7/76.6
pcb	91.3 /94.9 /86.3	84.0/89.2/81.9	89.3 /93.5 /84.4	<u>92.1/95.5 /86.9</u>	91.3 /94.6 /86.2	92.5 /95.4/87.9
phone battery	<u>92.5/90.9/83.1</u>	83.7/75.9/73.5	86.8 /81.9 /76.0	91.6 /89.9 /82.1	<u>92.5/90.7 /82.2</u>	92.9 /91.6 /83.2
plastic nut	91.2 /84.9 /77.3	78.7/64.7/62.0	89.8 /83.1 /76.2	<u>93.1/89.2/81.0</u>	91.3 /85.7 /77.5	93.8 /90.3 /83.2
plastic plug	91.6 /89.2 /78.6	70.7/59.9/61.1	87.5 /83.7 /74.0	<u>90.3/88.0/77.5</u>	89.7 /87.2 /76.0	89.2 /87.0 /76.5
porcelain doll	88.5 /82.1/74.4	68.3/53.9/53.6	85.4 /76.8 /68.9	<u>87.9/83.2 /73.1</u>	87.8 /81.5 /72.9	87.3 /80.1 /72.4
regulator	87.9 /81.3 /71.0	46.8/26.4/43.9	81.7 /68.3 /63.4	<u>87.7/81.1/71.7</u>	85.2 /75.4 /66.1	87.1 /79.4 /68.6
rolled strip base	99.5 /99.8 /98.1	97.3/98.6/94.4	99.5 /99.7/97.5	99.4 /99.7/95.8	99.4 /99.7/97.6	99.3 /99.6 /98.0
sim card set	95.6 /96.3 /89.0	91.9/90.3/87.7	<u>95.2 /94.8 /90.9</u>	96.8 /97.2 /91.3	<u>96.2/96.7/90.2</u>	95.7 /96.5 /88.6
switch	95.0 /96.0 /89.4	89.3/91.3/82.1	<u>95.2/96.2/89.4</u>	94.9 /96.1 /89.8	93.1 /94.8 /86.0	96.3 /97.1 /90.5
tape	97.9 /97.3/91.5	95.1/93.2/84.2	96.8 /95.2 /89.1	98.3 /95.6 /92.1	<u>98.1/97.4 /91.8</u>	97.3 /96.2 /90.2
terminalblock	96.2 /96.7 /91.4	84.4/85.8/78.4	94.7 /95.1 /89.4	96.7 /97.4 /90.5	97.3 /97.6/92.2	97.3 /97.9 /92.4
toothbrush	82.8 /85.4 /77.3	84.9/85.4/81.3	85.8 /87.1/80.5	88.5 /89.7 /82.7	<u>85.5 /84.2 /81.6</u>	86.1/86.7 /81.3
toy	83.9 /88.7 /80.0	79.7/82.3/80.6	83.5 /87.6 /80.9	88.3 /90.9 /83.2	86.5 /90.2 /82.6	<u>88.2/90.9 /84.9</u>
toy brick	77.6 /74.4 /66.5	80.0/73.9/68.6	81.8 /78.8/70.5	<u>81.9/78.4 /69.6</u>	77.9 /73.6 /67.0	83.7 /80.7 /72.4
transistor1	98.2 /98.8 /94.7	95.8/96.6/91.1	97.4 /98.1 /93.5	<u>97.5 /98.5/93.6</u>	<u>97.9/98.4 /93.6</u>	96.6 /97.5 /92.8
u block	<u>93.5/93.0/85.3</u>	85.4/76.7/69.7	90.2 /82.8 /76.8	92.8 /90.9 /83.8	93.1 /90.2 /81.3	94.3 /93.6 /86.0
usb	83.9 /78.0 /70.0	84.5/82.9/75.4	<u>90.3/90.0/83.5</u>	84.4 /82.0 /72.2	92.8 /92.1 /83.9	86.2 /82.9 /72.6
usb adaptor	90.4 /85.1 /76.6	78.3/70.3/67.2	82.3 /78.0 /67.9	92.2 /85.6/80.5	83.8 /78.7 /70.8	<u>91.3/88.1 /79.0</u>
vcpill	89.0 /87.6 /77.8	83.7/81.9/70.7	90.3 /88.8 /79.6	<u>92.1/91.5 /82.2</u>	90.8 /90.1 /80.4	92.2 /90.8/82.2
wooden beads	85.1 /84.9 /73.7	82.8/81.5/71.4	86.1 /84.7 /75.7	88.6 /88.7 /78.9	<u>89.5/88.9/79.3</u>	89.9 /89.7 /79.4
woodstick	84.6 /77.2 /68.9	79.7/70.4/61.8	78.3 /70.3 /62.3	76.6 /65.3 /58.4	<u>85.7/77.9/70.0</u>	87.1 /80.3 /71.5
zipper	99.5 /99.7 /97.2	97.5/98.4/94.2	98.7 /99.2 /95.6	98.4 /99.1 /95.0	<u>99.4/99.6/97.1</u>	<u>99.4/99.6/97.1</u>
Mean	89.6 /87.9 /80.5	81.6/77.3/73.4	88.9 /87.4 /80.4	<u>90.3/88.6/81.3</u>	90.2 /88.2 /81.0	91.2 /89.7 /82.4

Table 22: Comparison with SoTA methods on Real-IAD dataset for single-class anomaly detection with AUROC/AP/F1_max metrics.

Method→ Category↓	RD4AD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	PatchCore AAAI'24	MVAD Arxiv'24	MMAD-fr Ours
audiojack	98.2 /40.7	97.2 /7.8	98.2 /19.7	98.0 /41.0	98.8/36.6	99.3 /50.2
bottle cap	99.7 /41.9	99.2 /21.4	98.5 /14.7	99.2 /28.1	99.7 /36.2	99.2 /41.8
button battery	<u>98.7/52.6</u>	93.7 /13.6	98.0 /21.3	98.4 / <u>53.2</u>	98.8 /46.6	<u>98.7/60.3</u>
end cap	97.8 / 23.4	96.7 /7.6	94.2 /7.2	97.0 /15.9	<u>98.1/12.7</u>	98.3 /22.4
eraser	<u>99.2/40.6</u>	99.0 /17.7	98.3 /16.5	99.3 /36.2	<u>99.2/30.7</u>	98.8 / 42.0
fire hood	<u>98.7 /32.6</u>	98.5 /22.7	97.5 /10.2	97.8 /26.6	99.1 /28.5	<u>98.9/44.2</u>
mint	<u>97.3/25.6</u>	94.3 /6.1	94.1 /9.9	96.8 /23.0	98.5 /19.7	95.1 / 27.4
mounts	<u>99.1/32.6</u>	99.4 /27.9	98.0 /13.2	98.6 /30.6	99.0 /30.2	<u>99.1/41.2</u>
pcb	99.3 / <u>58.6</u>	96.6 /4.5	98.4 /27.6	99.0 /50.6	<u>99.4/50.4</u>	99.5 /60.4
phone battery	99.5 /52.3	97.9 /8.0	96.5 /40.3	98.8 / <u>47.7</u>	<u>99.2/38.6</u>	99.0 /42.7
plastic nut	99.6 /38.6	98.6 /16.4	98.1 /15.3	99.3 /34.5	99.6 /32.5	99.4 / 43.1
plastic plug	99.0 /36.6	97.9 /10.3	96.1 /11.1	98.4 /28.9	99.0 /24.4	97.5 / <u>32.6</u>
porcelain doll	<u>98.7/31.5</u>	97.3 /4.4	96.6 /10.3	98.3 /25.4	99.1 /25.3	96.7 / 33.2
regulator	99.1 /35.9	93.7 /0.8	97.0 /9.6	99.0 /24.3	99.1 /26.1	98.4 / 35.9
rolled strip base	<u>99.7/41.2</u>	98.9 /10.8	98.8 /10.4	99.6 /33.6	<u>99.7/37.5</u>	99.8 /56.8
sim card set	97.8 / <u>52.3</u>	96.7 /13.0	97.3 /14.7	97.7 /44.8	98.5 /51.8	<u>97.9/56.3</u>
switch	99.2 / <u>57.3</u>	<u>99.4/55.3</u>	99.1 /53.2	98.7 /56.6	99.5 /57.0	99.3 / 63.9
tape	<u>99.6/43.5</u>	99.5 /27.8	99.2 /18.0	<u>99.6/45.0</u>	99.7 /36.4	99.5 / 45.8
terminalblock	<u>99.7/43.9</u>	98.9 /13.9	99.3 /16.3	99.5 /34.3	99.8 /35.1	<u>99.7/53.5</u>
toothbrush	96.8 / <u>31.4</u>	96.8 /20.8	94.3 /20.0	97.5 /43.4	<u>97.3/24.0</u>	94.6 /30.4
toy	95.5 / 25.4	96.4 /7.0	91.9 /7.9	97.4 /20.5	<u>97.3/17.0</u>	94.3 / <u>23.9</u>
toy brick	97.2 / <u>31.2</u>	97.9 /17.4	94.3 /13.5	96.7 /30.2	<u>97.6/23.6</u>	97.5 / 37.8
transistor1	99.5 /49.7	98.8 /26.2	99.1 /28.6	99.4 /47.5	99.5 /41.1	99.2 / 50.1
u block	99.5 / <u>46.3</u>	99.0 /19.5	98.6 /15.8	99.3 /37.8	99.6 /32.6	99.6 /50.3
usb	96.9 /25.9	98.5 /19.5	<u>98.9/19.7</u>	97.8 /22.0	99.6 /41.1	95.8 / <u>28.5</u>
usb adaptor	99.4 /39.4	97.0 /5.8	95.7 /9.5	<u>99.3/34.6</u>	97.3 /19.2	98.9 / 44.4
vcpill	98.3 /51.7	99.1 /49.1	98.6 /37.5	98.4 / <u>56.1</u>	<u>99.0/51.2</u>	98.9 / 56.3
wooden beads	97.7 /33.8	97.5 /21.2	96.7 /14.7	96.5 /31.3	98.6 /32.2	98.6 /40.0
woodstick	<u>98.1/42.9</u>	96.6 /39.5	93.5 /30.7	92.6 /34.0	98.5 /42.8	97.1 / 52.1
zipper	99.3 /70.0	97.5 /21.0	98.6 /38.6	99.0 / <u>65.6</u>	<u>99.2/56.1</u>	98.6 /58.4
Mean	<u>98.6/41.0</u>	97.6 /17.9	96.8 /20.8	98.2 /36.8	98.9 /34.6	98.3 / 44.2

Table 23: Comparison with SoTA methods on Real-IAD dataset for single-class anomaly localization with AUROC/AP metrics.

Method→ Category↓	RD4AD CVPR'22	UniAD NeurIPS'22	SimpleNet CVPR'23	PatchCore AAAI'24	MVAD Arxiv'24	MMAD-fr Ours
audiojack	47.7 /89.5	14.4 /83.9	28.9/86.9	46.0 /86.7	44.4 /90.6	51.3 /95.0
bottle cap	40.5 / 98.2	30.9 /93.8	25.7/85.8	31.5 /95.3	39.5 /97.4	41.3 /96.0
button battery	51.5 / 93.2	20.7 /70.3	37.3/72.5	<u>52.1</u> /86.0	45.7 /88.5	58.2 /92.3
end cap	31.5 /93.2	15.2 /88.3	15.3/80.5	24.1 /90.1	21.5 /92.6	<u>29.2</u> / 94.5
eraser	46.3 /94.3	24.6 /92.5	22.0/88.0	41.8 / 94.4	35.9 /92.3	45.8/93.8
fire hood	41.8 /92.7	31.2 /84.6	16.7/77.3	34.5 /85.2	37.1 /90.1	48.1 / 93.0
mint	34.1 / 85.1	15.8 /59.3	20.4/59.8	30.5 /76.9	27.9 /83.1	36.3 /77.6
mounts	<u>37.0</u> /92.1	35.3 / 95.4	19.7/87.3	33.9 /87.5	34.0 /90.3	42.8 /92.5
pcb	<u>59.3</u> / 95.4	9.5 /9.6	37.0/85.1	51.8 /91.7	53.9 /94.3	59.8 / 95.4
phone battery	57.4 / 96.4	14.1 /87.5	41.9/70.6	<u>46.8</u> /92.0	46.1 /93.7	45.4 /94.1
plastic nut	41.6 / 97.8	23.9 /90.1	22.7/87.4	36.7 /96.0	35.1 /96.8	44.1 /96.2
plastic plug	41.1 / 95.6	18.2 /85.9	17.8/79.4	34.7 /90.8	29.8 /92.0	38.7/89.3
porcelain doll	<u>39.3</u> / 94.2	11.3 /87.0	19.4/81.1	33.9 /90.1	32.5 /94.0	41.2 /86.8
regulator	<u>43.1</u> / 95.7	3.4 /71.1	16.6/80.5	33.7 / <u>93.9</u>	32.5 / <u>93.9</u>	43.7 /91.4
rolled strip base	<u>50.5</u> /98.8	17.4 /95.2	17.5/94.5	43.5 /98.5	43.7 /98.8	57.9 / 99.1
sim card set	<u>53.0</u> /87.3	20.9 /79.4	25.0/75.5	47.2 /86.0	50.6 /87.0	55.0 / 88.4
switch	<u>59.5</u> /96.2	58.8 /92.6	49.2/92.5	56.0 /93.4	59.0 /95.5	62.8 / 96.6
tape	49.1 / 98.4	36.3 /96.6	26.9/93.4	48.8 /97.7	42.8 / 98.4	49.8 /97.8
terminalblock	47.6 / 98.4	25.6 /92.1	23.5/94.2	39.3 /96.8	39.3 / 98.4	54.5 /98.2
toothbrush	38.0 /89.5	30.4 /87.5	29.4/75.9	46.8 /89.5	32.8 / 89.8	<u>38.2</u> /84.9
toy	33.4 /89.4	13.4 /77.2	17.5/71.2	27.2 / 89.5	25.8 /89.4	<u>32.5</u> /88.7
toy brick	<u>37.7</u> /85.9	28.2 /85.4	22.6/69.9	37.5 /82.4	30.9 /83.8	43.2 / 86.2
transistor1	50.9 / 97.9	33.2 /93.2	31.6/94.3	45.3 /96.6	41.7 /97.2	48.9/95.9
u block	50.3 / 97.5	26.2 /91.5	20.7/90.7	43.0 /95.9	40.9 /95.7	52.5 / 97.5
usb	35.9 /84.0	29.1 /88.1	29.7/91.4	30.8 /84.9	46.8 / 97.1	36.1/83.0
usb adaptor	48.7 / 96.8	12.1 /81.9	18.0/74.8	42.0 / <u>95.2</u>	26.5 /81.6	51.2 /92.8
vcpill	56.0 /89.8	51.2 / <u>91.0</u>	43.7/84.7	<u>57.3</u> /88.4	54.5 /89.8	58.6 / 93.4
wooden beads	41.3 /87.4	28.9 /83.9	19.7/78.7	38.9 /80.6	38.9 /89.9	45.8 / 91.0
woodstick	48.4 / 90.4	45.6 /81.3	37.7/72.1	41.5 /68.0	48.5/89.5	55.5 /89.8
zipper	68.1 / 98.1	26.1 /92.0	45.2/90.9	<u>60.8</u> /95.2	59.8 /97.2	60.4 / <u>97.3</u>
Mean	<u>46.0</u> / 93.3	25.1 /85.9	28.2/83.3	41.3 /89.8	39.9 / <u>92.3</u>	47.6 / <u>92.3</u>

Table 24: Comparison with SoTA methods on Real-IAD dataset for single-class anomaly localization with F1_max/AUPRO metrics.

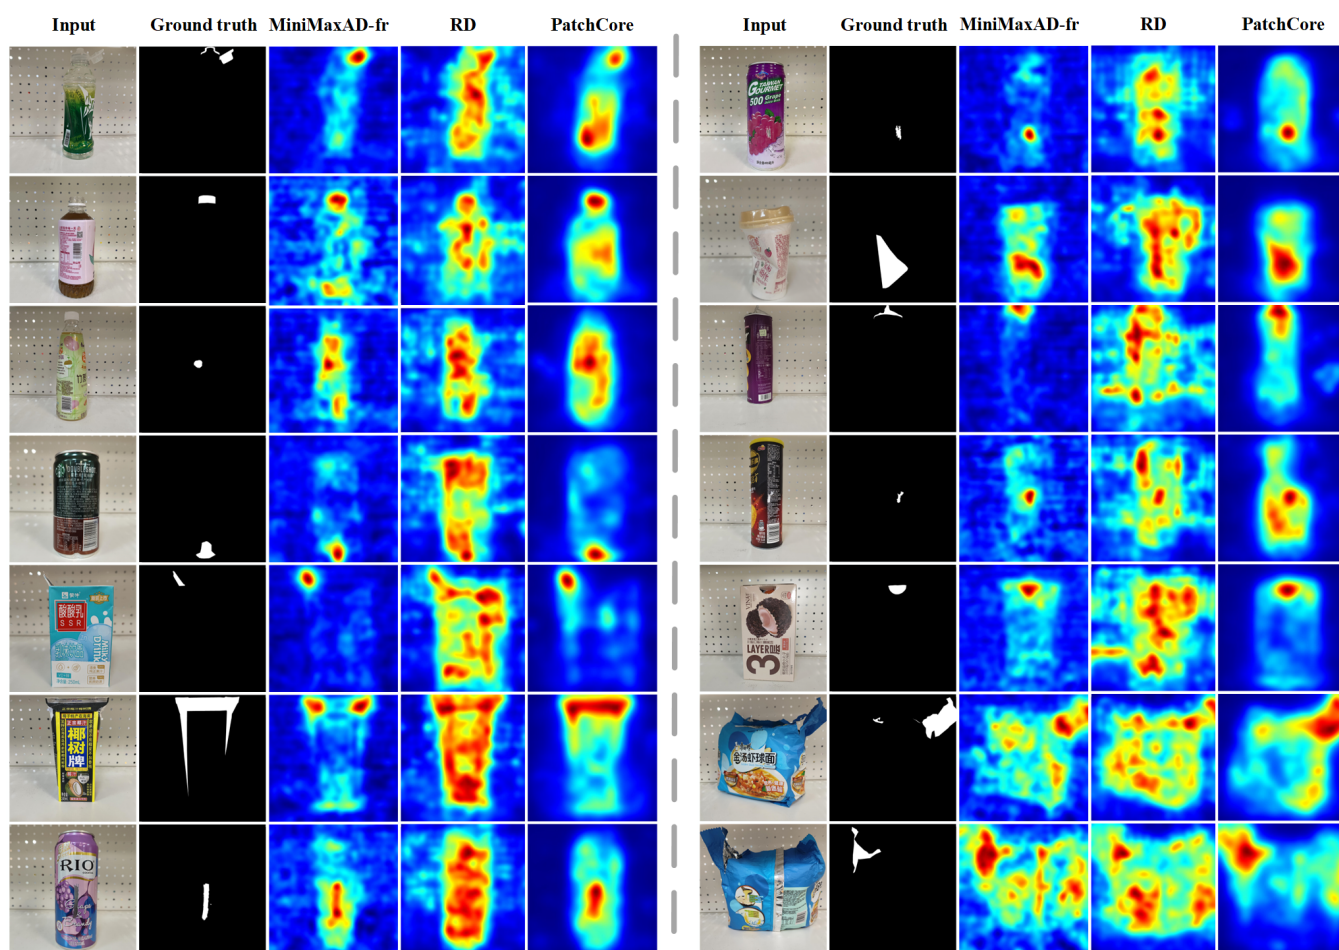


Figure 6: Anomaly maps on anomalous images from GoodsAD.

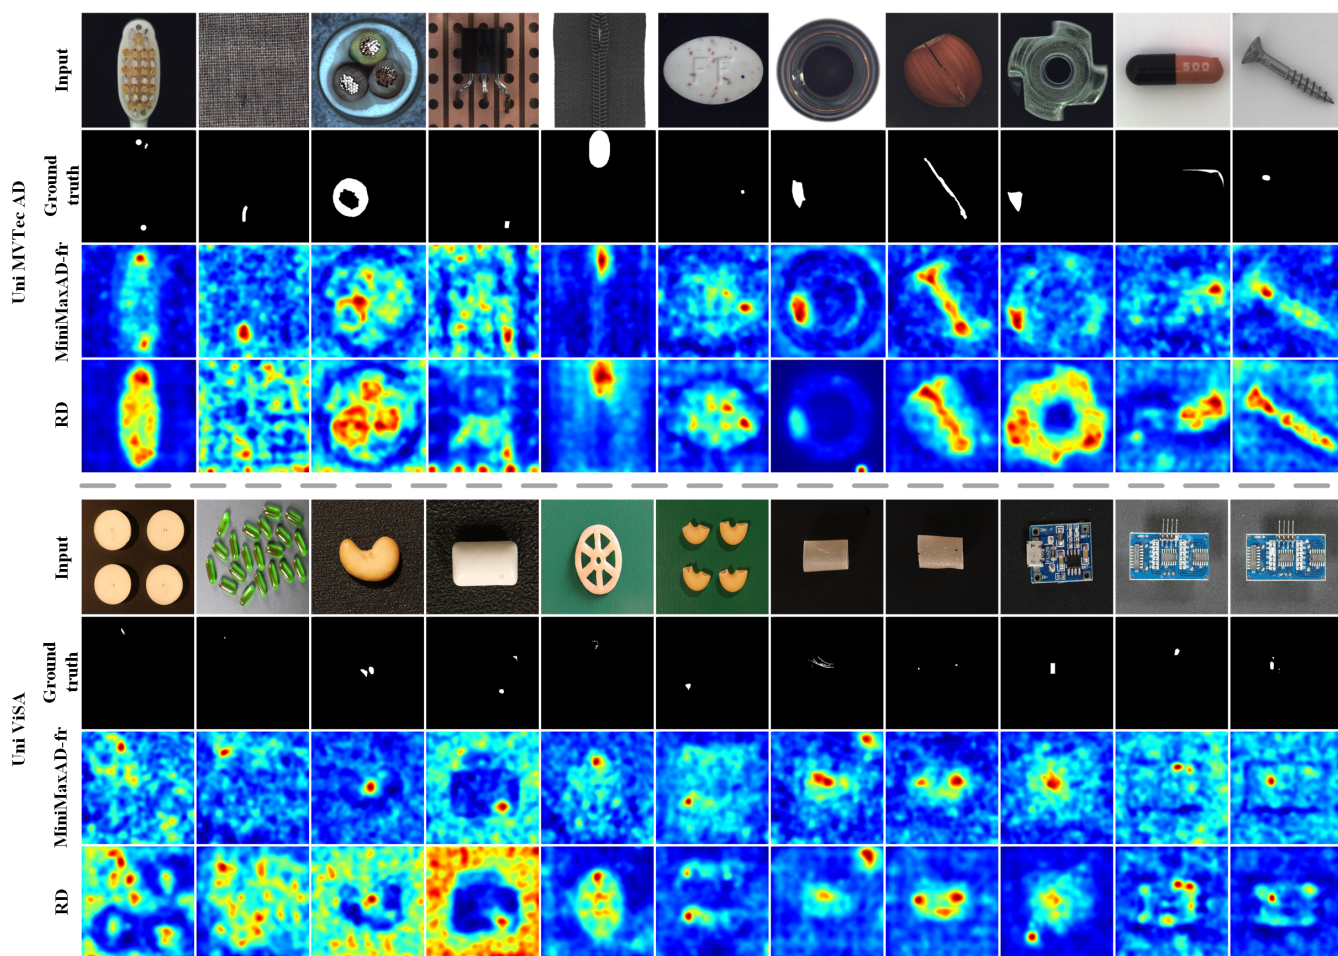


Figure 7: Anomaly maps on anomalous images from MVTec AD and ViSA.